
## 1. Contents

- -. Telephone set
- -. Headset
- -. Telephone line cord
- -. Recording cord (Option)
- -. Operating manual
- -. Headset hanger

## 2. Feature

- Please refer to the function of each parts as following page

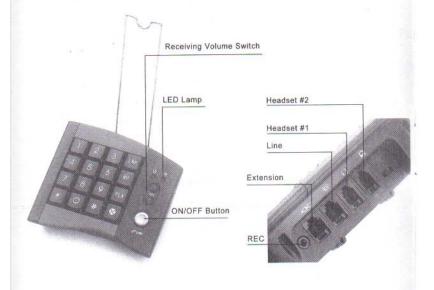

# 3. Function of each part

PART		FUNCTION
LED Lamp	In use	-, LED lights in telephone call /LED blinks in MUTE
	Ring	-, LED lights in ringing
ON/OFF button		Making a call a hang up the phone
Dial		Press it when making call
MUTE button		Caller's signal mute Selection of telephone ringing (Refer No.8)
Receiving volume switch		Receiving volume control
LNR button		Last number redial key
RP button		The last dialed number can be repeated     automatically going on-hook by pressing RP key
Flash button		Receiving call can be transferred to the other phone when using key-phone
REC		Recording can be done by external recorder connecting recording cord of 3.5mm (option)
Function key		Refer No.5
Headset		Headset connection Jack
Line		Telephone line connection Jack
Extension		Extension Jack to connect to the other phone
Microphone volume switch		Microphone volume control

## 4. Installation of the Telephone

- -. Connect the telephone line cord to the line jack of the telephone set
- -. Connect the other part of telephone line cord to the telephone terminal of the wall
- -. Connect the headset to headset jack of the telephone set



-. If you want to use extra telephone connecting to the telephone, connect the extension cord to the extension jack of the telephone.



 
-. Connect the telephone cord to the MODEM of computer



## 5. Setting and adjustment of function key

Function key is positioned to the left side of the telephone

(Factory Set-up)



Function Key

1) Key No.1: Receiving volume control

 
2) Key No.2: Bell sound control

-. ON : Increase

-. ON : Increase


-. OFF: Decrease

-. OFF : Decrease





 3) Key No.3: Tone level control




- ON : Low

- OFF : High

Please connect extra telephone to the extension jack of the telephone using extension cord.

 4) Key no.4 to "ON"



ON: Pulse

OFF: Tone

## 6. Controlling microphone volume

- 1) Microphone volume increase when rotating to the left side
- 2) Microphone volume decrease when rotating to the right side



### 7. Installing headset hanger

Align the headset hanger with the projection part of telephone side, push and fix the headset hanger.

### 8. Programming tone ringer

- Please set ON/OFF switch to be off hook
- Pressing MUTE button and # button, please change dial No. as follows;

 
Dial NO.	Repetition rate
3	One time (slow)
6	Four times (normal)
9	10 times (fast)

### 9. Using the telephone

- 1) Receiving
- When ringing (RING LED), wear the headset, press on ON/OFF switch and talk over the telephone with the caller.
- 2) Calling up
- If you want to call, take wear the headset, press on ON/OFF switch and the dial no.

## 10. Recording

Connect the recording cable between telephone and PC as follows;



#### 11. Storage & Handling

#### 1) Storage

Avoid the places that have direct sunlight, ill ventilates, moistures, trembles, dusts or electrical noise.

#### 2) Notice

- Do not modify or decomposes this product by yourself
- Do not handle this product with wet hand.
- Clean the surface of this product with dry soft cloth.
- Keep the headset away from dust and dirt, which can cause premature wear of parts.
- Wipe the headset with dampened cloth occasionally, or cleaning solvents to clean the headset.

#### Warranty

We will repair or replace, at our opinion, this product if found defective due to materials or workmanship within the warranty period beginning from the original date of purchase. It is warranted by authorized representative for the period specified.

The original dated purchase receipt must be presented to the authorized service center when the service is rendered. On all carry-in models, transportation to and from the service station is the responsibility of the purchaser.

This warranty does not cover damages due to accident, fire, flood, earthquake and or other acts of god; misuse, incorrect line voltage, improper installation or unauthorized repairs, commercial use of damages occurred in shipping. Exterior and interior finish, lamp, glasses, plastic parts and temperature probes are not covered under this warranty. Customer adjustment according to the owner's manual are not covered under this warranty. This warranty is automatically void if the serial no is missing or altered.