

# Spraymate TNT ST610



**Sprayhead, Spraygun  
or Spray attachment**  
*(part 1)*  
**With cup, part 9**



**Handle (attaches to both spray  
head and air hose) (part10)**



**Airhose**  
*Part 11*



**Turbine**

**Handle removes from the Sprayhead, they are two  
separate pieces**



## 16. Spare parts



This unit contains no user servicable electrical parts.  
DO NOT attempt to service unit yourself.

**Spare Parts List (Fig. 15)**

Pos.	Designation	Order No.
1	Spray attachment complete with 6.75 fl. oz container	2334 403
2	Union nut	2334 405
3	Air cap	2334 407
4	Nozzle	2334 409
5	Nozzle seal	0417 706
6	O-ring of spray attachment	0417 308
7	Feed tube	2334 413
8	Container seal	2323 039
9	Container with cover 6.75 fl. oz	2334 417
10	Gun handle	2334 880
11	Air hose	2347 546
12	Air filter	2308 502
	Lubricant	2315 539

10

**SprayMate HVL P ST610 TNT**

US

