


BHP 12 Circuit Wire System

User Guide and Installation Guide

1 This kit is designed to replace your fuse box and main wiring harness only. The wire coming out of the fuse box is long enough to go to your existing switches and connectors. It is advised that it is installed by someone with good electrical understanding, BHP are in no way liable for any damaged caused by incorrect fitting. This document is provided only a guide.

2 Wiring Diagram

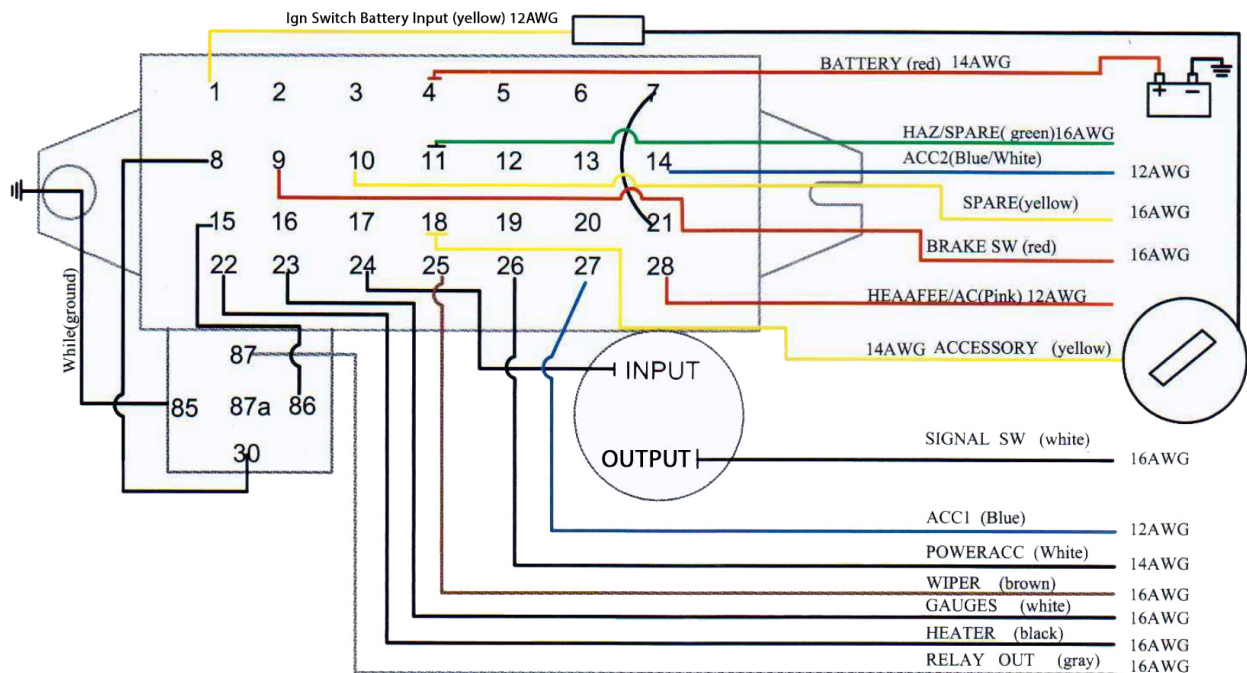

3 Checklist

No. Terminal 1	No. Terminal 2	Color	Fuse Size	Output 1	RELOCATE	NOT USED
22	15	Black	20amp	A/C		
23	16	White	15amp	Gauges		
24	17	Purple	15amp	Signal Sw		
25	18	Brown	20amp	Wiper		
26	19	White	30amp	Poweracc		
27	20	Blue	30amp	ACC1		
28	21	Pink	30amp	Heaafee/AC		
8	1	Green	20amp	Relay		
9	2	Red	5amp	Brake SW		
10	3	Yellow	10amp	Spare		
11	4	Green	5amp	HAZ/SPARE		
14	14	Blue/White	30amp	ACC2		

4 Mounting


Please find a suitable mounting place away from major heat sources, also try and keep away from moving parts like brake pedals and steering. Best mounted on a flat surface where it is accessible to change fuses.

5 Final Installation


Once you have completed installation make sure there is no bare wires, turn everything off and shut the doors, connect to the battery and test each circuit one at a time.

6 Suggested Wiring


Wiper Switch Circuit

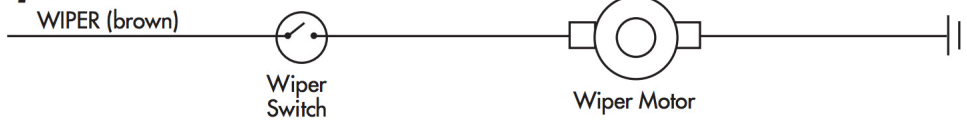


Brake Switch Circuit

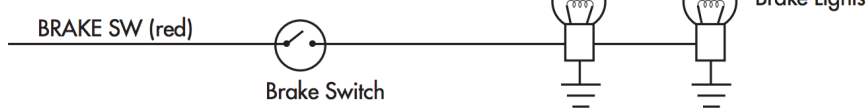


Gauge Circuit

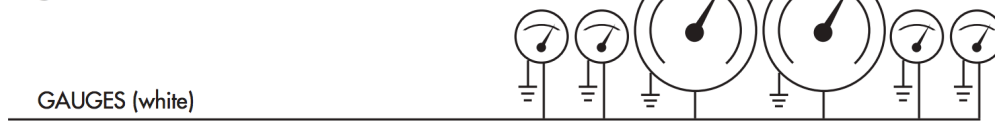


Heater/A.C. Circuit

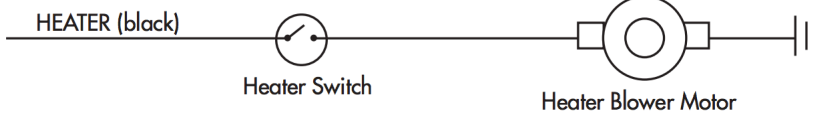


Turn Signal Circuit

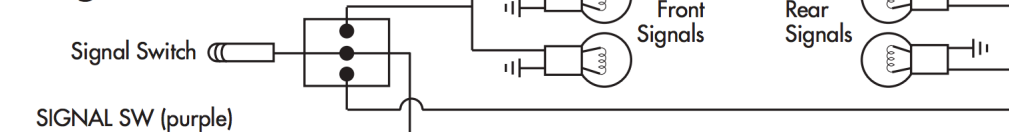

Hazard Circuit

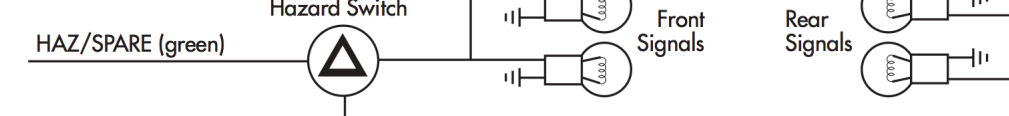

A.C. Circuit

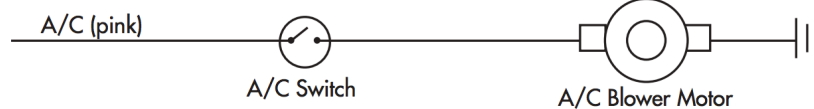

Brands Hatch Performance Limited
11 West Kingsdown Industrial Estate
Kent, England TN156EL 01474 850666