

# Gold Series Manual Twist™ Rosin Tech Heat Press <u>Owner's Manual</u>



# GETTING STARTED

Follow this step-by-step guide for how to set your temperature and length of press. Remember to start with a small batch for testing until you lock in your optimal temperature and length of press.

#### **Mounting Instructions**

We highly recommend using the two bolts provided to fasten the Gold Series Manual Twist<sup>TM</sup> to a work table. In order to get the best results and apply the most pressure, its important the machine is secure while using.

#### **Electrical Specification**

- 110 Volts
- 600 Watts
- 5 Amps



#### STEP ONE: PLUG IN / TURN ON

Once you've plugged in your press, both LCD screens will light up and both plates will begin heating!

**TIP** #1: Please note the control panel on the left hand side controls the top heating plate as well as the time of pressing. The control panel on the right controls the bottom heat plate only.

#### **Left Side:**

- 1) Controls Top Plate
- 2) Timer on Press



#### **Right Side:**

1) Controls Bottom Plate



### **STEP TWO: ENTER SETTINGS MODE**

Press the green "set" button **one** time. You are now in the 'edit settings' mode.

\* **TIP** #2: SP = Temperature Mode





# STEP THREE: ADJUST TEMPERATURE

Press the up and down arrows to increase or decrease the temperature of the plates. Once you have found your desired temperature, press the set button to change from SP to ST.

\* **TIP** #3: Default setting is to Fahrenheit.





## STEP FOUR: ADJUST LENGTH OF PRESS

Now the screen shows ST. Press the up and down arrows to increase or decrease the timer set for each press. Once you have found your desired time, press the set button until you return back to "Normal Mode", seen below. To start the timer, press the "Timer" button on the panel.

\***TIP**#4: ST = Set Time of Press.





#### STEP FIVE: LET PLATES HEAT UP

Once you have found your desired time, press the set button until you return back to "Normal Mode", seen below. Now that you've set your temperature and length of press, its time to let both heating plates warm up.

\*TIP #5: To set the temperature on the bottom heat plate, use the right control panel and follow the same steps. Remember length of press isn't a factor here although you can change the setting.





# **Additional Questions?**

Shoot an email to

support@rosintechproducts.com

Follow us on Instagram @rosin.tech.products. Appreciate any shoutouts very much. If you tag us in a picture using your new press and we will repost on our profile. Enjoy ©



www.rosintechproducts.com