

Owner's Manual

Rosin Tech Go™



All Rights Reserved. Copyright © 2017, Rosin Tech Products

STEP ONE: PLUG IN / TURN ON

Once you've plugged in your press, and press the red power button.

Your LCD screen will light up and plates will begin heating!





STEP TWO: ENTER SETTINGS MODE

Press the "OK" button **one** time. You are now in the 'edit settings' mode.

* P1 = Temperature Mode






STEP THREE: ADJUST TEMPERATURE

Press the up and down arrows to increase or decrease the temperature of the plates. Once you have found your desired temperature, press the "OK" button to change from P1 to P2.

* Default temperature setting is Fahrenheit.

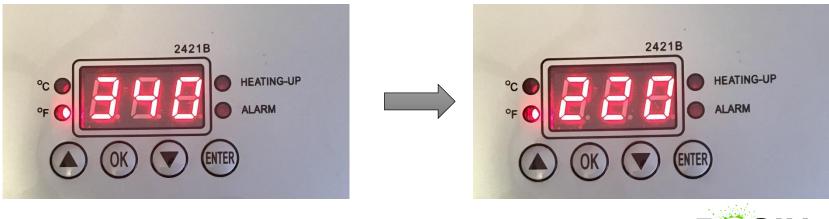




STEP FOUR: ADJUST LENGTH OF PRESS

Now the screen shows P2. Press the up and down arrows to increase or decrease the length of timer for each press.

Once you have found your desired time, press the "OK" button which will change P2 back to "Normal Mode".

* P2 = Set Time of Press.

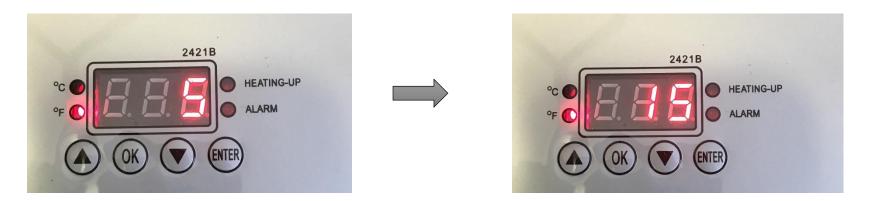



STEP FIVE: LET PLATES HEAT UP

Now that you've set your temperature and length of press, its time to let both heating plates warm up.





STEP SIX: PRESS

Once the plates heat up to your desired temp, you are ready to use the machine.

Put your parchment paper and your material between the heated plates, and push down on the lever until the parallel to ground or table.

To start the TIMER, press "ENTER" button

For more details on the best techniques for pressing, including time or length of press for different material, visit our website and click Education tab.





Additional Questions?

Shoot an email to support@rosintechproducts.com



www.rosintechproducts.com

All Rights Reserved. Copyright © 2017, Rosin Tech Products