



ROOF-TOP TENT OWNERS MANUAL

Congratulations on your purchase of a Treeline Outdoors Rooftop Tent. We strive to provide the ultimate camping experience for every camper. Your top quality ultra durable Rooftop Tent mounts directly to your roof rack or aftermarket roof bars. The tent opens and is fully set up in just a few minutes and can easily be left on your vehicle year round.

Your Rooftop Tent is made with the most durable materials that will stand up to the most extreme conditions. We use high quality rip-stop fabrics with superior ventilate coating that provide excellent water and wind protection yet are more breathable than other tent brands on the market.

Most of your Rooftop Tent components have been fully assembled at the factory with the exception of attaching the mounting channels and the ladder to the base of the tent. Tent setup is composed of unpacking, attaching mounting channels to the base of the tent, attaching the ladder, attaching the tent cover and then mounting your Treeline Outdoors Tent onto your roof rack or aftermarket roof bars.

Should you have any questions, please contact Treeline Outdoors customer service by email at: info@treelineoutdoors.com

**FOR A DETAILED INSTRUCTIONAL VIDEO ON HOW TO INSTALL YOUR ROOF-TOP TENT VIST:
WWW.TREELINEOUTDOORS.COM/PAGES/INSTALLATION**






WARNING:

Improper installation or use of your tent may result in serious injury or death. You will need to follow these installation instructions carefully to ensure proper installation on your vehicle and safe use of your tent. Please check with your vehicle manufacturer for specified loading capacity of your roof rack. Not all factory roof racks or aftermarket roof bars can safely accommodate tent models.

TABLE OF CONTENTS

- 1 Hardware Identification Chart
- 2 Tent Orientation on your vehicle
- 3 Contents
- 4 Attaching Mounting Channels
- 6 Attaching Ladder
- 7 Placement of Roof-top Tent onto your Roof Rack Bars
- 8 Travel Cover Attachment/Setup
- 9 Tent Setup
- 12 Storage and Handling
- 13 Limited Warranty

HARDWARE IDENTIFICATION CHART

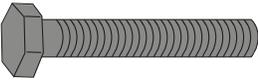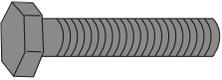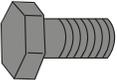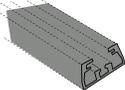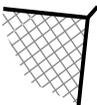	ITEM	QUANTITY
	13mm Steel Bolt	8
	10mm Steel Bolt	6
	13 mm Stainless Steel Bolt (for mounting Ladder Bracket)	4
	13 mm Stainless Steel Bolt (for mounting Ladder)	2
	10mm Nylock Nut	6
	13mm Nylock Nut	14
	Ladder Mounting Bracket	2
	Stainless Steel Washer	24
	Metric Wrench 10mm/8mm	1
	Metric Wrench 13mm/15mm	1
	Aluminum Slide Plate	8
	Steel Mount Plate	4
	Mounting Channel	2
	Quick Release Hand Tightening Bolt	8
	Emergency Unisex Urinal Bottle	1
	Goal Zero Carabiners	8
	Utility Net	1
	Patch Repair Material	4

TENT ORIENTATION ON YOUR VEHICLE

There are two mounting options for the orientation of your new tent. Either the tent will open so that the ladder extends off the back of your vehicle, "Rear Mounted", or the ladder extends off the side of your vehicle, "Side Mounted"



SIDE MOUNTED



REAR MOUNTED

Either orientation will work for larger vehicles, however most sedans or smaller SUV's are better suited for the side mounted option.

Benefits for the side mounted orientation:

- Allows for bicycle racks and other tow hitch/bar accessories to be installed without interfering with your tent operation.
- Closed tent width will fit inside the roof dimensions of most cars and SUV's i.e. the tent base will not extend beyond the roofline of your vehicle when closed.

Benefits for the rear mounted orientation:

- Fits into narrow camping spaces.
- You can access the trunk or tailgate area at the rear of your vehicle from inside the vestibule.

CONTENTS

Remove tent from box and place on clean surface. Open the tent to gain entrance to interior and remove contents.




Other Recommended Tools

1/2 inch ratchet wrench, flat nose pliers, Hammer, Flat head screwdriver, knife/box cutter

ATTACHING MOUNTING CHANNELS

1. After removing contents, close the tent. Note where the hinge is and observe the two surfaces. The surface which has four holes is the one which will receive the mounting channels (the other side will receive the ladder). Lay the two mounting channels across the mounting surface, lining up the holes. Remove rubber ends from mounting channels.
2. Using the six supplied 6mm bolts and 6mm washers, slide your hand between base and mattress and insert bolts with washers into the pre drilled holes. You may need to poke holes through the tape to insert bolts.
3. Place mounting Channels on exposed bolts. For side mounted orientation, ensure mounting channels are perpendicular hinge side. For rear mounted orientation, ensure mounting channels are parallel to hinge side. Slide the 10mm nylok nuts into the inner slot in the center of the mounting channels until they are aligned with bolts sticking through the base. Tighten the bolts firmly from below using the supplied 10mm wrench.

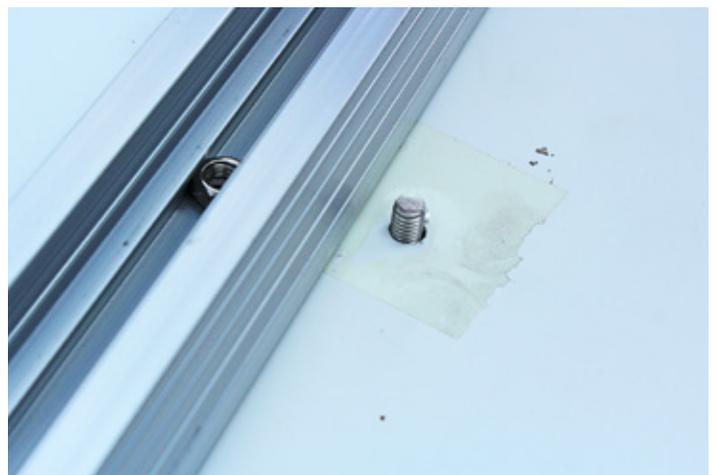



4. Make sure to pass the aluminum sliding plate through the mounting channel to ensure the bolts do not protrude too far into the mounting channel. If they do then add another washer or as many as needed until aluminum sliding plate passes unobstructed.

5. If the aluminum sliding plate does not pass through smoothly you may have to widen it manually with a pair of flat nose pliers along the mounting channel until aluminum sliding plate passes through smoothly.



6. If you chose a side mounted orientation for your tent you will notice that the mounting channels extend beyond the edges of the base. You will need to mark each channel where they extend beyond the tent base and cut the mounting channels so they fit within the tent base. Fasten mounting channels to base as described above






ATTACHING THE LADDER

1. Flip the tent base over, locate the pre-drilled holes at the edge of the base and attach the ladder bracket to the base using the 4 mid length 13mm bolts, washers and nylock nuts provided. Initially, attach the brackets only partially. Tighten them fully only after the ladder has been attached.
2. After attaching both ladder brackets, position the ladder between the two brackets and attach to ladder bracket using the 2 shortest 13mm bolts, washers and a nylock nuts on each side.
3. Ensure that there is a washer between the ladder and the bracket as these are moving parts.
4. Once the ladder is attached to the brackets finish tightening the brackets to the frame.



PLACEMENT OF TENT ONTO YOUR ROOF RACK BARS

1. Place tent on top of your vehicles rack system.
2. Place 13mm bolts into the side plates. Slide the plates and bolts into the mounting channel. Lift one side of the tent and slide one of the 8mm bolts to the inside of the roof rack bar. Do this on all four corners.
3. Inspect the position of the tent to ensure it is centered on the roof rack and positioned to open to the desired side.
4. Attach the Rooftop Tent to your roof rack at the 4 points where the rack and mounting channels cross. Tighten all 8 bolts securely. It is important that you check all the mounting bolts and brackets periodically to ensure they are securely fastened to your base and roof rack or aftermarket roof bars. After ensuring tent is positioned correctly and all 8 bolts are tightened securely, insert rubber end caps into the ends of the mounting channel (this may require light taps from a hammer).

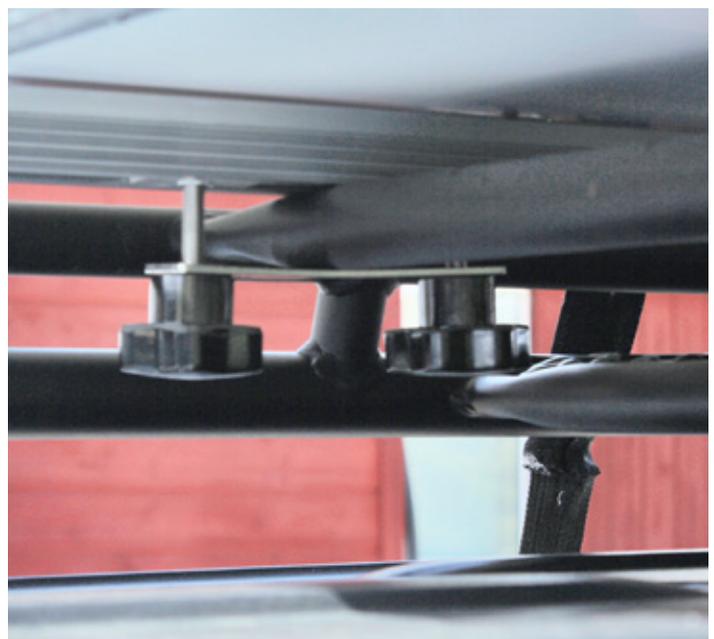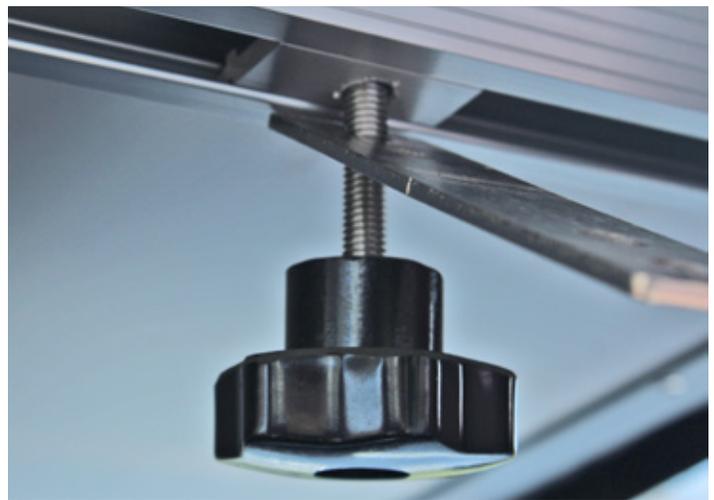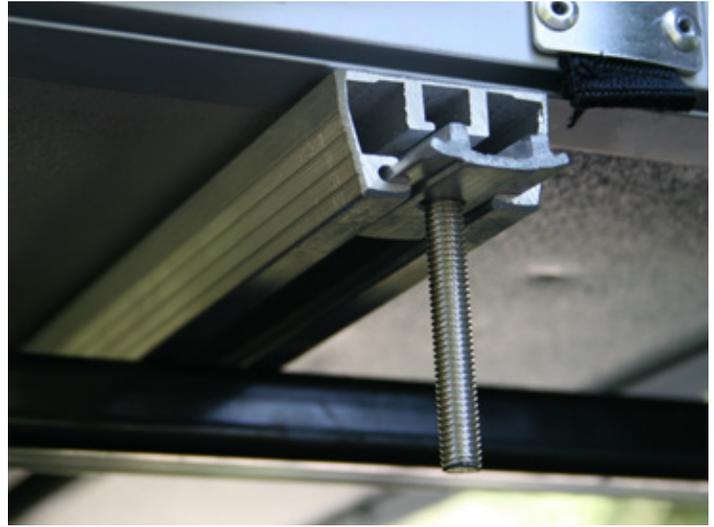

TRAVEL COVER ATTACHMENT

To attach the travel cover, slide the rounded fabric end of the cover into the rounded receiver channel at the hinge side of the tent base. Make sure the cover is oriented so the exterior side of the cover faces up when you pull the cover over the tent.

The tent cover can be zipped to the base along the other 3 edges and 2 additional straps are provided to help secure the travel cover to the tent.



TENT SETUP

1. Release the hold down Velcro straps on the travel cover.



2. Remove the travel cover from the tent by unzipping around the 3 edges. Roll the cover up.



3. Release the hold down Velcro straps at the side of the tent.




TENT SETUP

4. Pull plastic knobs on each side of the ladder up and to the side until they are in the 'unlocked' position, Slide the ladder out starting at the base of the ladder until you can reach the locking plastic knobs again and then return them to the 'locked' position and proceed to pull until the locking pins engage.



5. Use the ladder as a lever to open the tent.

6. Allow the ladder to rest firmly on the ground. The tent base should be level with the ground while the ladder sits firmly on the ground making a 60-degree angle with the ground.

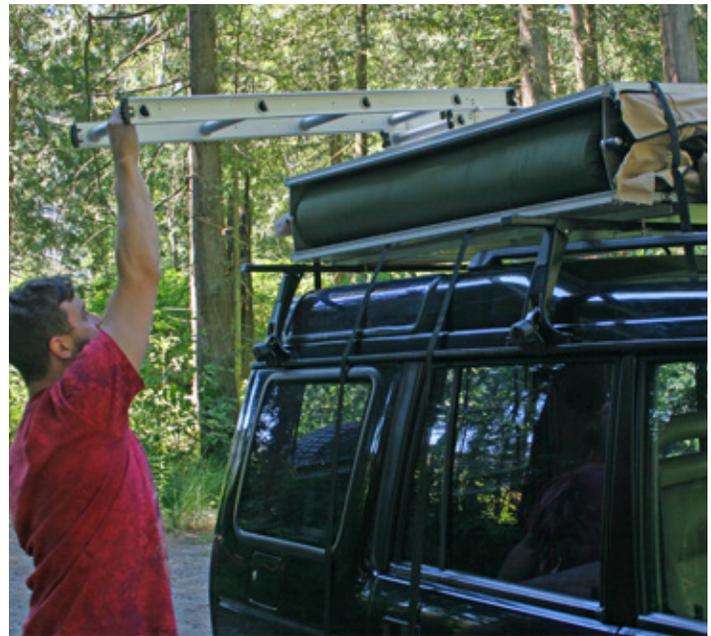


7. Assure all the steps on the ladder are locked.



8. Remove the canopy pole from base of the tent and position it on the inside of the tent in both corners (where taped seams meet). Place both ends of canopy pole into plastic canopy mounts.



9. Climb ladder and enter the tent. Release the bungee cords from the side of the tent. Retrieve the steel tension rods. These are used to set up the window awnings and the rain fly. There are 6 steel tension rods, you will notice 2 of them are shorter, these are for the rear door rainfly. Place the steel tension rod hook through the grommet on the awning or rain fly and then insert the other end through the lower grommet on the base skirt and into the hole at the base of the tent. This may require you to bend the rod slightly to align with the hole in the base. Repeat this process for both holes in the awnings and both holes at either end of the rain fly.

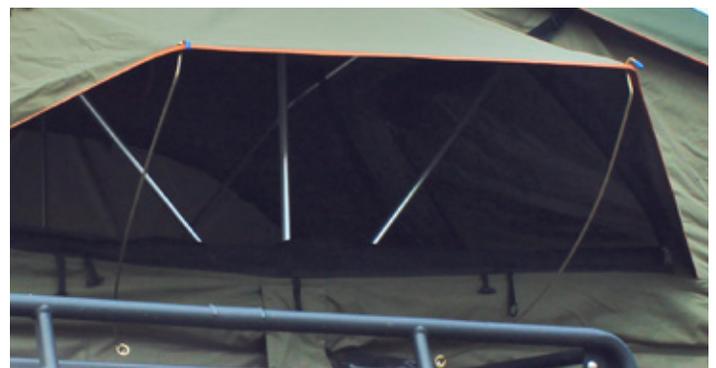

STORAGE AND HANDLING

Before using your tent for the first time it is ideal to open it and spray it lightly with a water hose to dampen and swell the tent fabric fibres so they seal properly and advance their water shedding capabilities.

Every time that you come back from camping you should clean and dry your tent. Also wash the mattress and cover once in a while (only hang dry). The following are the procedures:

1. Open the tent fully and brush/vacuum all dirt from inside of tent.
2. Use a mild detergent with warm water and a soft to medium brush to clean the fabric as needed.
3. Rinse fabric of all detergent prior to drying.
4. Let the tent dry under the sun with all windows open. It is important that the tent is completely dry before storage or mildew and mold may occur. This is especially necessary after camping in rain or wet conditions.
5. Using a small brush, remove dirt from the zippers. Also use a silicon spray to keep them lubricated.

LIMITED WARRANTY

What Is Covered

Rooftop Tents, warrants to the original purchaser that its products are free from defects in material and workmanship for the term described, except as qualified below. The life of the product is determined from the date of purchase until such time as the product is no longer serviceable due to normal wear and tear.

What Is Not Covered

Treeline Outdoor Gear INC. shall not be responsible for the natural breakdown of materials that occurs inevitably with the extended use (eg. Ultra Violet (UV) light damage on tents, exhausted zippers), or defects caused by accidental, abuse, alteration, animal attack, storm damage, misuse or improper care.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL TREELINE OUTDOOR GEAR INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some provinces and states do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

What We Will Do

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product at our option, without charge.

How To Obtain Warranty Service

Return the product, freight prepaid, to the location from where it was purchased; or, contact the customer service department for return authorization. Collect shipments or shipments without return authorization cannot be accepted.

Repairs

If your Rooftop Tent product needs service or repair due to normal wear and tear, animal attack, accidental or some other reason that is not covered under the warranty we will provide the necessary service for a reasonable charge, plus shipping and handling. We require that products accepted for any repair be properly cleaned according to our recommended care instructions. Please send your product or component that requires repair (eg. Tent fly) postage pre paid along with a description of what needs attention. For service and repairs, please contact our customer service department.

How Provincial/State Law Relates To This Warranty

This warranty gives you specific rights and you may have other rights that vary from province/state to province/state.

Warranty Term

Limited 1 year warranty applies to all tent components including base, aluminum poles, ladder, fabric and seams.

