

## **Operating Instructions – Quick Start Guide**

## **Operating Instructions**

- Turn the cutlery polisher on so that it is vibrating & allow it to run for 20-30 minutes before use so that it can reach its operating temperature of 60°c
  - This can be monitored on the digital display or is indicated when the orange light on the front of the equipment goes out
- Cutlery must be warm, clean & wet the cutlery polisher cannot polish dry cutlery
- Place cutlery into the entry chute, 8-12 pieces at a time, as soon as these are absorbed by the grain, place the next handful of cutlery into the chute
- Cutlery will emerge from the front of the machine 20-30 seconds later, dry, polished & sanitised & will be caught in the baskets
- Some granulate will spill into the baskets pour this back into the polisher
- IMPORTANT: After use the machine must be left to run for 20-30 minutes to allow the granulate to dry out and recover after use

## Changing the Granulate

- Unplug the cutlery polisher from the power supply
- Lift the equipment lid
- Remove used granulate from the polishing tank by hand or using a vacuum cleaner
- Pour one new, complete fill of granulate into the polishing tank via the entry chute & grids
  - $\circ$  Baby Star, AS MP / Mobile I Fill = I x 2.5kg Bag
  - $\circ$  AS 500 / ASK6 I Fill = I x 3kg Bag
- Close the equipment lid
- Re-plug the cutlery polisher to the power supply
- Turn the cutlery polisher back on & allow it to run for 20-30 minutes before use so that it can reach its operating temperature of 60°c
  - This can be monitored on the digital display or is indicated when the orange light on the front of the equipment goes out

\*Please refer to the full presentation & manual for a guide to troubleshooting \*For further assistance, grain or service please call the office on 01626 833 120