

We are serious about your shooting.



630-551-8171



help@mantisx.com



MantisX.com

BLACKBEARD AR-15 INSTRUCTION GUIDE

INSTALLATION

1. Ensure the Bolt Carrier Group (BCG) is in the forward position, in battery.
2. Retract the lower receiver rear takedown pin, and open the upper receiver.
3. Remove the existing charging handle and BCG.
4. Insert the Blackbeard BCG.
5. Press the hammer back to the rear until it locks into place.
6. Close the AR-15 upper receiver and re-secure the takedown pin.
7. Insert the Blackbeard magazine into the AR-15 magazine well.

OPERATION

Blackbeard will automatically reset the trigger each time a trigger break is detected. To use Blackbeard, simply disengage the safety and press the trigger.

REMOVAL

1. Retract the lower receiver rear takedown pin.
2. Remove the Blackbeard BCG and replace with the original charging handle and bolt-carrier group.
3. Remove the Blackbeard magazine.
4. Close the AR-15 upper receiver and re-secure the rear takedown pin.

RECHARGING

Blackbeard is powered by a lithium ion rechargeable battery pack, located in the Blackbeard magazine. Charging lights will indicate the current charge level. To charge Blackbeard, plug a micro USB charging cable into the USB port found on the Blackbeard magazine.

LASER ALIGNMENT

Laser-enabled Blackbeard models may require adjustment to achieve the desired point of impact (POI). Alignment may need to be adjusted for different firearms and different sights.

1. Install Blackbeard system into the AR-15 (see INSTALLATION)
2. Toggle the laser control switch to always on (down)
3. Use the adjustment screws and the allen wrench provided to adjust windage and elevation to the desired POI. Both adjustments can be accessed through the ejection port with Blackbeard installed in the AR-15.

