



ON AND OFF

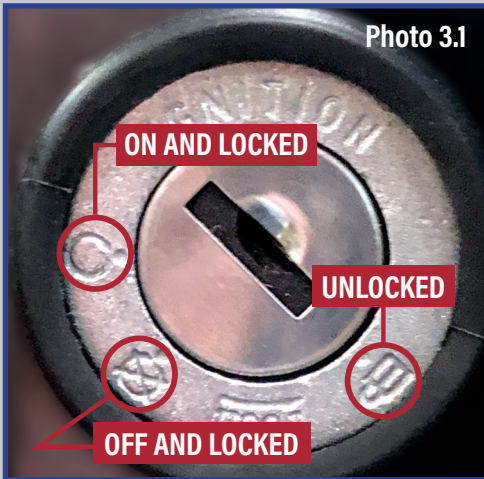

TURNING THE LIBERTY TRIKE ON AND OFF

LOCK AND SWITCH (See photo 3.1)

- There are three positions on the ignition:
 - On and Locked
 - Off and Locked
 - Unlocked
- The key must be in the “On and Locked” position to be able to use the Liberty Trike’s electric assist.
- You can safely leave the battery key in the “On” position, even when you’re not using the Liberty Trike. Just turn the Liberty Trike off at the LCD screen.
- Once it is turned on, you can turn the Liberty Trike on with the handlebar button. (See photo 3.3)
- If you are having trouble turning the key, clockwise to the “On” position, make sure the locking pin is lined up with the hole, in the battery plate. If it jams, the key won’t turn any further. (See photo 3.2)

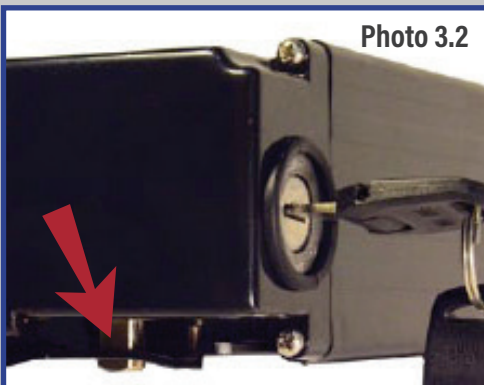

HANDLEBAR BUTTON (See photo 3.3)

- Press and hold the “i” button on the handlebar pad, to turn the screen on and off. The screen must be on, in order to use the electric assist.