

CA SEAN USA
WOOLSEY
• STUDIO •
CARE INSTRUCTIONS





CARE INSTRUCTIONS

We take great pride in making the work that we do.
It should last for generations if maintained and cared for well.

In this document we will show you how to care for our pieces.
If you have any questions, feel free to ask.



WOOLSEY OUTDOOR PING PONG TABLE



CARE INSTRUCTIONS

Keep in a climatized room if and when possible.

Keep out of direct sunlight (even if inside) when possible by using cover when not in play. We make an outdoor cover.

Difficult stains such as coffee or tea can be removed using a mild household cleaner/detergent.
Rinse thoroughly with warm water and wipe dry.

For stubborn stains use a paste of baking soda and water and apply with a soft bristle brush.
Light scrub for 15 to 20 seconds should remove the stains. Don't use excessive force or something that will scratch the surface.

Do not use acidic or abrasive cleaners or cleaners containing lye, or steel wool or any other abrasive pad.
This will permanently damage the surface.

To clean, use a microfiber towel that is damp, and rub with the grain.
If any moisture is left on the table, make sure and dry immediately.