


J SCHATZ

Egg Bird Feeder
User Guide

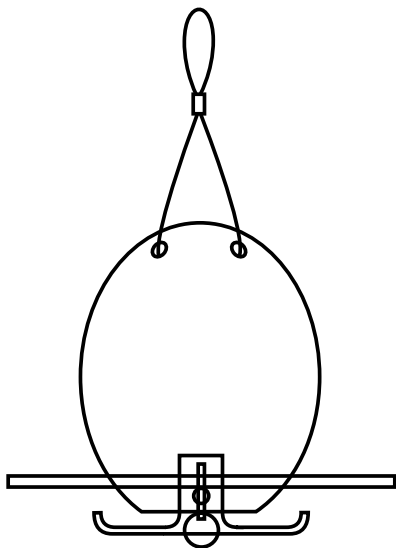

INTRODUCTION

Your new Egg Bird Feeder is easy to use. Please use this User Guide to:

Assemble and fill the Egg Bird Feeder with bird food


Disassemble and refill the Egg Bird Feeder with bird food

Care for the Egg Bird Feeder

EGG BIRD FEEDER PARTS

Your Egg Bird Feeder consists of 5 individual Parts.


1 Stoneware Egg with Vinyl Coated
Hanging Wire

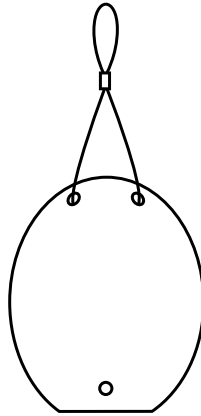

1 Aluminum Base



 2 Aluminum Poles




1 Hitch Pin



EGG BIRD FEEDER ASSEMBLY INSTRUCTIONS

STEP 1


Turn the egg upside down and fill with bird food.

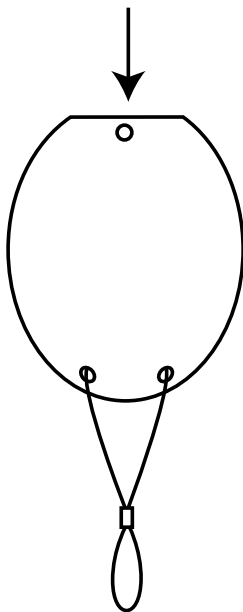

EGG BIRD FEEDER ASSEMBLY INSTRUCTIONS

STEP 2


Position the base upside down in the center of the egg and line up the upper holes on the exterior of the egg with the upper holes on the interior of the base. Insert aluminum poles through the egg and base - one pole through the upper holes and one through the lower holes.

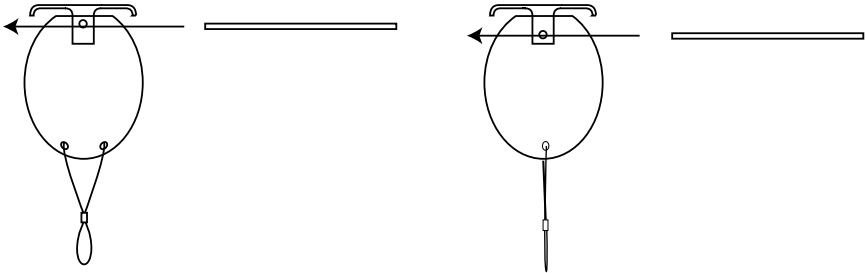

EGG BIRD FEEDER ASSEMBLY INSTRUCTIONS

STEP 3


Line up the holes in the aluminum poles and insert the hitch pin through the holes to secure the base in place. Turn the Egg Bird Feeder over and hang.

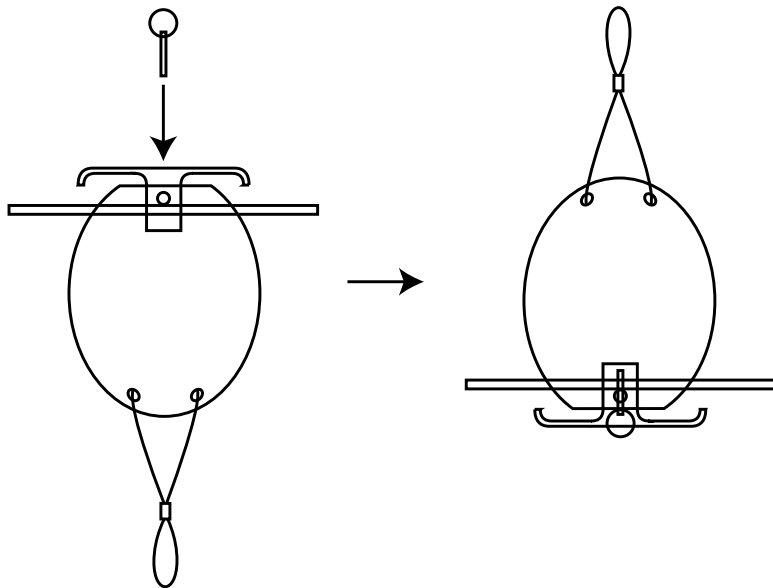

EGG BIRD FEEDER DISASSEMBLY INSTRUCTIONS

STEP 1


Turn the egg upside down and remove the hitch pin.

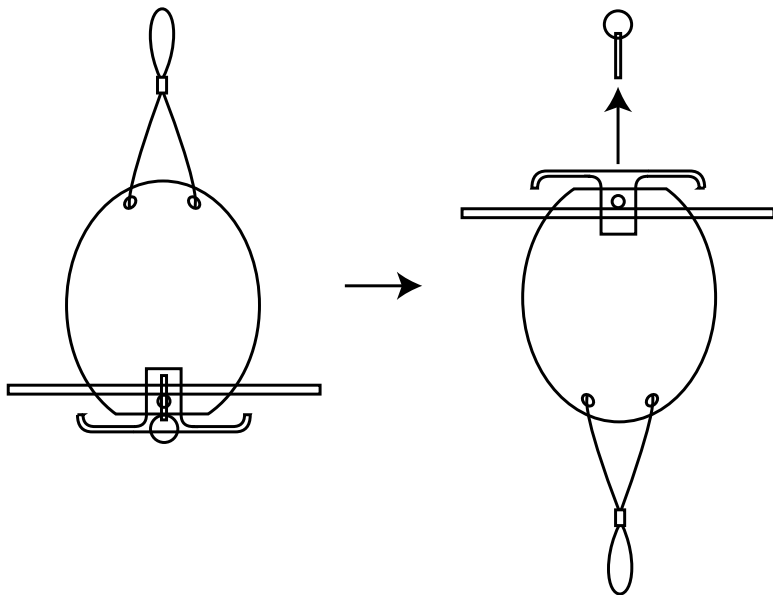

EGG BIRD FEEDER DISASSEMBLY INSTRUCTIONS

STEP 2


Remove the aluminum poles from both upper and lower sides of the egg.

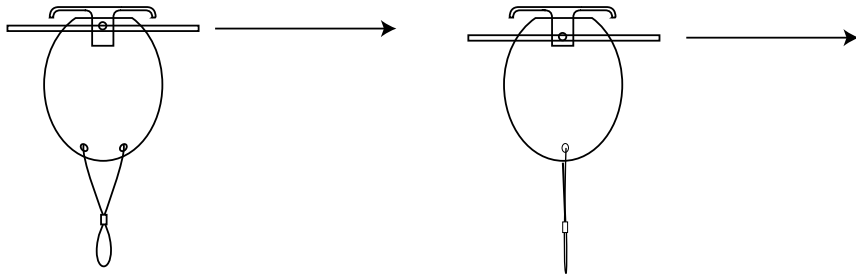

EGG BIRD FEEDER DISASSEMBLY INSTRUCTIONS


STEP 3

Remove the base and follow the Assembly Instructions to refill with bird food.

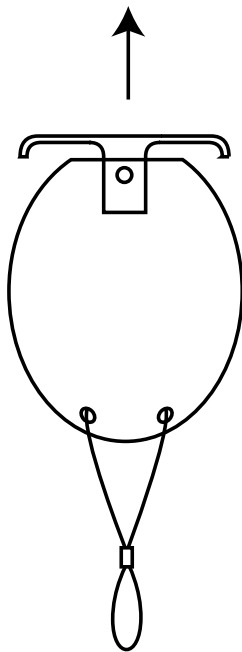

EGG BIRD FEEDER HANGING GUIDE

Hang the Egg Bird Feeder 3' from surrounding surfaces to prevent animals from eating from the feeder. Most animals will not be able to jump onto the slippery surface of the Egg Bird Feeder if hung at least 3' from surrounding surfaces. The Egg Bird Feeder hanging wire is 12" and will need to be connected to an additional length of wire to hang 3' from surrounding surfaces. We recommend using a snap hook to attach the Egg Bird Feeder to the additional length of wire. A snap hook allows the Egg Bird Feeder to easily be removed for refilling. Snap hooks can be found in most hardware stores.

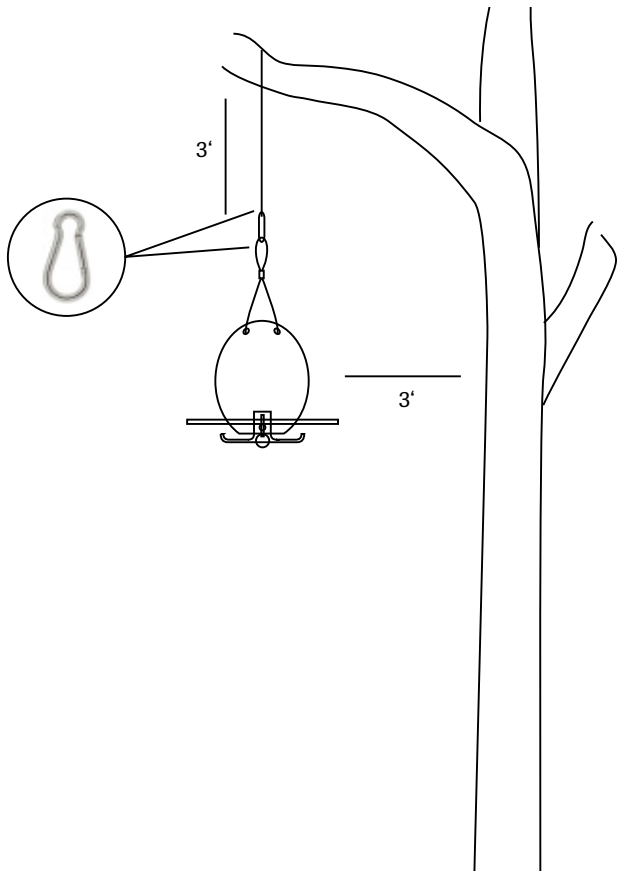

CARE FOR THE EGG BIRD FEEDER

Wipe clean stoneware and aluminum surfaces with a damp cloth. Once a month we recommend cleaning the feeder with a 10% bleach to water solution. Allow the solution to set on the feeder for ten minutes, drain off the solution, and then rinse thoroughly. Allow the feeder to completely dry before refilling it. If a feeder becomes moldy, scrub it thoroughly with the 10% bleach to water solution using a stiff brush. Once it is clean, clean the feeder as above. If you live in an area that freezes please make sure the interior of the Egg Bird Feeder remains dry during the critical times of year when it freezes and thaws. Damage to the egg may occur during the freeze/thaw cycles if the interior is wet.



Wonder-Certified™

We certify that the products we make are inspired by wonder. Each day we arrive at the studio motivated to work hard and create exceptional pieces of ceramic ware. We live to capture beauty, be surprised, and solve creative problems with innovative designs. Most importantly, we love what we do. 28,000 wonder-certified ceramic products have been sold since 2004 to satisfied customers throughout all fifty states and around the world in 14 countries. Handmade with wonder in our Boothbay Harbor studio one piece at a time.

CUSTOMER SERVICE CALL 866-344-5267

Weekdays 9a.m. - 5p.m. EST

OR VISIT WWW.JSCHATZ.COM

Follow J Schatz on Facebook, Twitter, or Instagram:

facebook.com/jschatzstudio

twitter.com/jschatzstudio

instagram.com/jschatzstudio

Wonder-Certified, and J Schatz are trademarks of J Schatz, Inc.

©2021 J Schatz. All Rights Reserved.