ODIN Grill

Assembly instructions





Recommendations for the user



It is common for the first use of the grill to give off a smell of burnt paint. This is normal and part of the curing process, it will not occur in the future.



Remember not to touch any metallic surfaces while the grill is in use; it could cause severe burns.



The use of excessive embers on your grill can deteriorate it over time. This happens due to a by-product of the combustion process that deteriorates the metal sheet.



Be sure to store your grill in a dry place to prevent rusting.







 
Congratulations! Your grill has just arrived


Safety warnings


- Do not use your grill indoors, it should only be used outdoors.
 Otherwise, it may cause serious poisoning by smoke inhalation, fire or deterioration.
- Do not leave infants, children, or pets unattended nearby a lit grill.
- Do not add lighter fluid or any type of inflammable fuel
- Proceed with care when using your grill, it will maintain high temperatures.
- Do not remove the ashes until the charcoal is completely blown out and the grill is cold
- The use of abrasive cleaners on the grill or on the accessories may damage the surfaces.
- The grill should be cleaned regularly to remove ash to prevent deterioration of the surfaces.

General Dimensions


Dimensions in mm / inches




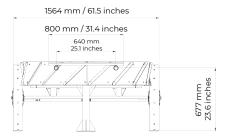

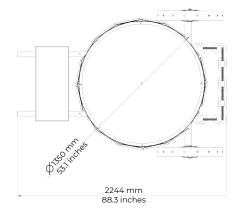


Packaging dimensions

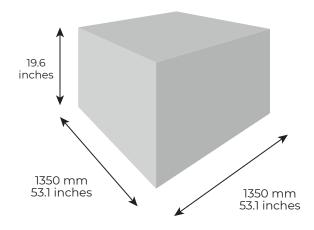

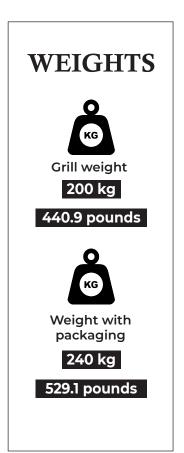




Component parts

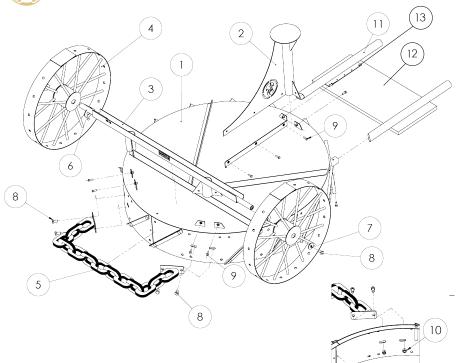


Part	Name	Qty
1	Main Body	1
2	Support bracket	1
3	Wheel axle	1
4	Wheel	2
5	Front Trim	1
6	Flat washer wheel axle	2
7	Flat washer wheel stop	2
8	Bolt M14 x 25mm	6
9	Bolt M8 x 25mm	12
10	Hex nut M14	4
11	Handle	2
12	Wooden Surface	ī
13	Wood screw	10

Accessories included

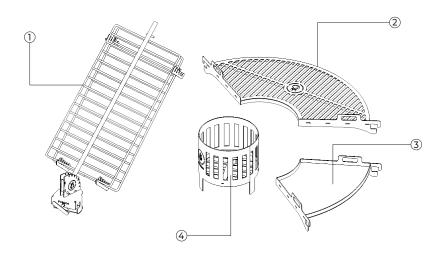


Part	Name	Qty
1	Clamp Rack Grill	1
2	Grill	1
3	Griddle	1
4	Brazier	1

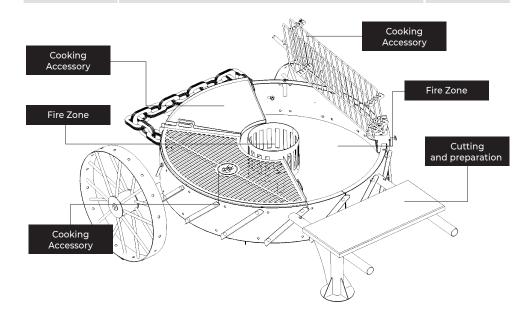


Assembly instructions


Step 1: Before starting the assembly of your grill, rotate the main body leaving the floor facing upwards, as shown in the picture.

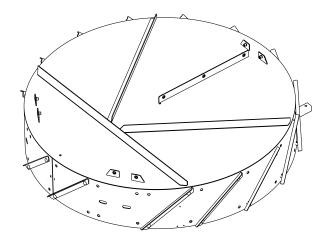




Necessary tools: Wrench N° 13 or similar

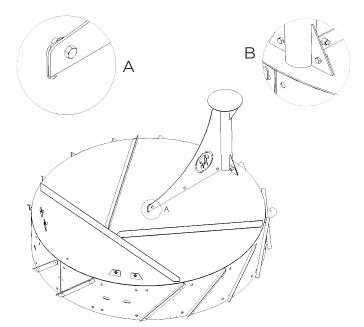

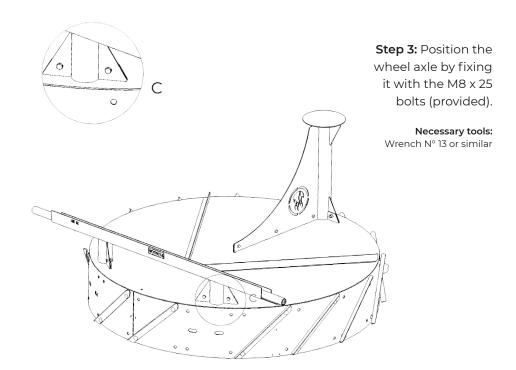


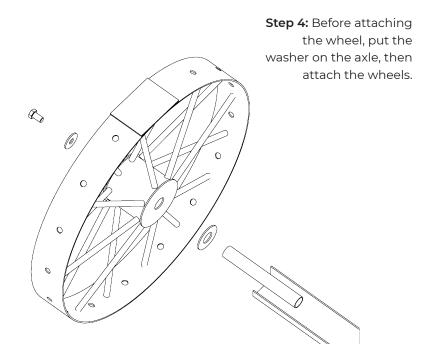

Step 5: Once the wheel is in position, place the M14 washer and fix the M14 x 25mm bolt (included).)

Necessary tools:


Wrench N° 22 or similar

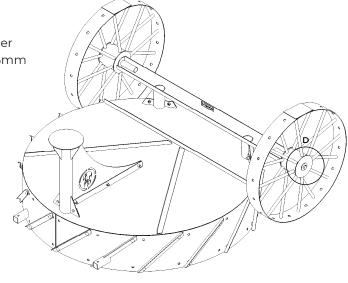



Step 6: Place the trim in position and fix the M14 x 25mm bolt with the nut M14 (included)

Necessary tools:

 Wrench N° 22 or similar



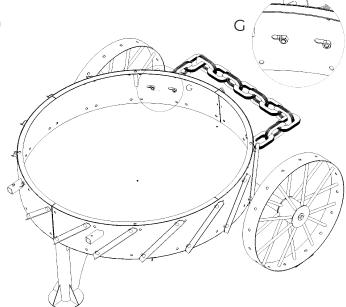

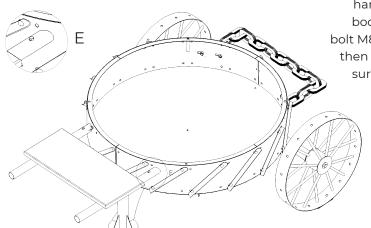


Assembly of Accesories
Clamp Rack Grill

Step 7: Insert the handles into the main body pipes and fix the bolt M8x25mm (included) then attach the wooden surface to the handles with the screws.

(included)

Necessary tools: Wrench N° 13 or similar


Step 8: To fix the clamp rack grill attachment turn the threaded handle until it stops with the metal sheet.

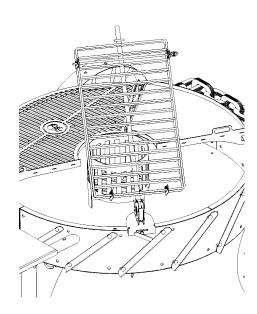


To cook with the clamp rack grill, remove the sword and lift the movable gratings. Then place the meat between the gratings, press and reposition the sword.




To adjust the position of the clamp rack grill, move the grating up slightly to unlock it, move it to the desired position and lock it again.

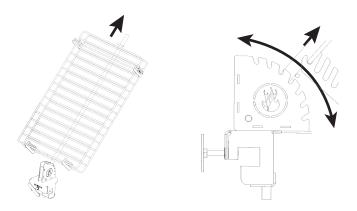

You can adjust the position of the clamp rack grill to achieve faster or slower cooking of the meat. In this way, you will be able to obtain different cooking points.

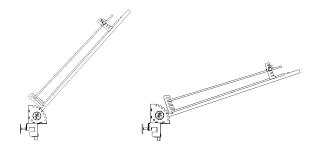

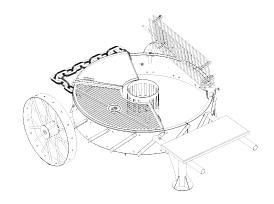



Part	Name	Qty
1	Main Body	1
2	Support bracket	1
3	Wheel axle	1
4	Wheel	2
5	Front Trim	1
6	Flat washer wheel axle	2
7	Flat washer wheel stop	2
8	Bolt M14 x 25mm	6
9	Bolt M8 x 25mm	12
10	Hex nut M14	4
11	Handle	2
12	Wooden Surface	1
13	Wood screw	10

Part	Name	Qty
1	Clamp Rack Grill	1
2	Grill	1
3	Griddle	1
4	Brazier	1

Part	Name	Qty
1	Assembly manual	1