

S machine no punch zone ignore

If the clamp zone doesn't work after Macros are downloaded you
following **PCODES**

514 = 0

530=0

Then reset

THESE ARE PCODE VARIABLES, access by press SET a few
them

Even if they are already zero type it AGAIN the controls knows