

Swurfer®

HANDCRAFTED SWINGBOARDS™

SW001
SSW-0004
SSW-0008
SSW-0009
SSW-0010

INSTALLATION INSTRUCTIONS

Checklist for Installation:

- Blade
- Tape
- Flame


Determine placement for the Swurfer and find a suitable tree branch. Consult with a local arborist if needed.

Visit www.swurfer.com for installation video, how to identify a safe branch, and how to tie a double overhand knot.

Step 1:

Fold rope in half by aligning ends. Drape rope evenly over the branch.

Tip: To install without a tall ladder, connect string or twine to a beanbag or a weighted sock. Make sure it's long enough to make it over the branch and back to the ground, and throw the weighted object over the branch. Then, tie the string to the center of the rope loop, and pull it up over the branch.

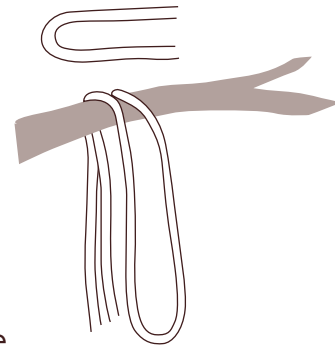


Step 2:

Pull the ends of the rope through the loop so it wraps tightly around the branch. Repeat steps 1-2 with the other rope. Both ropes should be placed 24-36 inches apart when done.

Step 3:


Lace the rope downward through the inside hole of the handle., Then wrap completely around the handle 1.5 times before placing downward through the second hole.

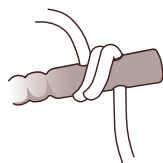

RIGHT




WRONG

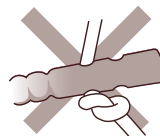

WRONG



WRONG

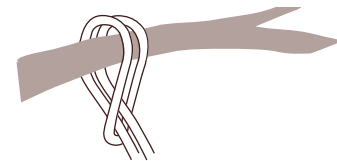


Step 4:

Lace rope through holes on your Swurfer board. Tie a double overhand knot beneath the board, and level your Swurfer by adjusting the four knots. Trim rope and melt ends with lighter to prevent fraying.

Note: Rope must be taped prior to cutting, otherwise it will fray before you melt it.



◀ 24 - 36" APART ▶

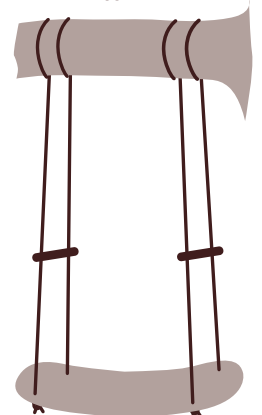


STEP 5:

Start Swurfing, and show us where you're hanging! Need more Swurf gear? Visit www.swurfer.com for SwurfGrips, more rope, and extra adjustable handles.

SWURFER HANGING CHART

RECOMMENDED CLEARANCE

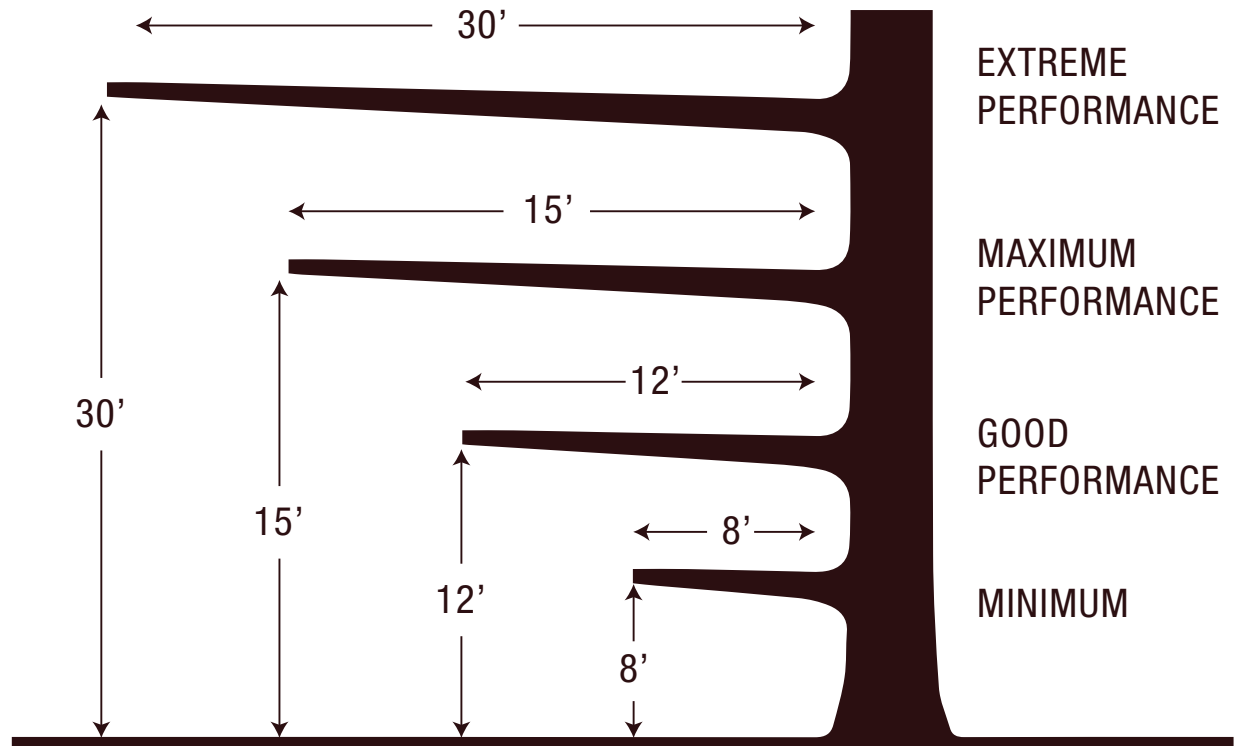

IF HANGING BETWEEN 20' & 30' YOU WILL NEED EXTRA ROPE KIT AVAILABLE ON SWURFER.COM

INSTRUCTIONS FOR USE:

1. Adjust handles to be midway between your waist and armpit.
2. Position feet shoulder width apart on the Swurfer board.
3. Always hold handles with a firm grip and keep your knees bent.
4. To get off your Swurfer, hold the handles while sliding down to a seated position.

CARE AND MAINTENANCE:

The Swurfer comes with a top of the line exterior varnish finish. However, this finish will eventually break down, depending on the climate. You can greatly extend the life of your Swurfer board and reverse the "graying" effect by washing with regular bleach and water, letting dry, and adding a few coats of exterior varnish periodically. Replace your rope if it shows signs of wear. Warranty information available at www.swurfer.com.

WARNING: You should have the same amount of distance from the trunk of the tree or any other objects as you have from the ground to the branch. Swinging with the Swurfer® involves inherent risk that can cause serious injury or even death. Purchaser and users assume all risk, responsibility and liability for use of the Swurfer®, including any resulting loss or damage to persons or property. Flybar Inc. assumes no liability arising from the use or application of any of its products and specifically disclaims any and all consequential and incidental damages. Flybar Inc. makes no warranty representation or guarantee regarding the safety or suitability of its products for any given purpose. The purchaser or user assumes the responsibility for installation and assembly PLEASE CHECK THE ROPES, HANDLES AND BOARD BEFORE EACH USE AND REPLACE IF SHOWS SIGNS OF WEAR. Be aware of your surroundings, and Swurf within you limits.

SHOW US YOUR #SOARSPOT @THESWURFER



Swurfer.com