#### A. APPEARANCE/FUNCTIONS

1) In Music or Bluetooth Mode, press to choose previous music selection.

2) "Rec" Press and hold to start recording. (Maximum 100 seconds until "beep" sounds)

3) "Play" Press once to play back recorded sound. Press and hold for voice changer function.

Press once for applause sound.

Press to play.

6) Music or Bluetooth Mode, press to choose next music selection

7) "OFF-LOW-HIGH" Switch, Slide from "OFF" postion to turn on microphone. Slide to "LOW/HIGH" position to choose microphone volume.

8) 🗱 , 🎜 or **Duet** mode switch. Slide to choose between Bluetooth mode, music only mode or duet mode.

9) Bluetooth Indicator:

Slow flashing means the microphone is playing music.

Quick flashing means the microphone is pairing. Long bright light means the microphone is successfully paired with a mobile phone/device.

10) Flashing lights

11) Microphone

12) Speaker

13) In Music or Bluetooth Mode, press to pause music.





# **B. BASIC FUNCTION**

#### Power on

1) Install batteries correctly.

2) Slide Selector Switch (7) to "LOW" or "HIGH" postion. (Start-up tone will play) 3) Lights with 3 colors (blue, green, red) will flash when pressing any button or when any microphone function is active.

#### Use of Microphone

1) To use without music, just sing! Speaker (12) will amplify your voice. 2) To use with music, slide the Mode Switch (8) to the J, Duet, or 3 position. NOTE: When singing, hold microphone approximately 1-2 inches from your mouth.

#### Music and Duet Function

Your microphone comes with 10 pre-installed songs. You can listen to them with just the music, or with the lyrics being sung so you can sing along! To listen to any of these songs, follow these steps:

- 1) Slide Mode Switch (8) to J position for the music only track or you can Slide Mode Switch (8) to the Duet position for the music and singing track.
- 2) Press  $\blacktriangleright$  (5) once to begin first song.
- 3) Press ₩ (1) or ▶ (6) to choose the previous or next track.
- 4) Press (13) to pause the current song.

NOTE: You can change between the Music and Duel position at any point during a song by moving the Slide Mode Switch (8) between the J-Duet and Duet positions.

#### **Bluetooth Function**

- Slide Mode switch (8) to the \$ position, the Bluetooth indicator (9) will flash fast.
- Enter the Bluetooth interface of the mobile phone/wireless device, choose "search for device" or "search for audio".
- When Pairing code "MF2652" shows on the display of the mobile phone/device, select the "MF2652" for pairing
- When pairing is successful, you will hear a "beep" from the microphone, the bluetooth indicator (9) will show long bright light.
- Press ► (5) once to play music. Press II (13) to pause music. Press ► (6) to choose next track or press 🛤 (1) to choose the previous track.
- When playing music, the Bluetooth indicator will flash slowly.
- The effective distance between the unit and bluetooth device is around 50 feet; when Bluetooth device moves past 50 feet, the connection will be lost and can be restored if Bluetooth device moves back within 50 foot range (under auto-connect status).
- When turning the microphone off and on again, it will automatically search and connect to the last Bluetooth device that was successfully connected.
- To erase the current Bluetooth pairing information, press and hold  $\blacktriangleright$  (5) button.
- When the microphone is successfully connected to one mobile phone, it can not be connected to other mobile phone/device until the pairing information is erased.

## **Recording Your Voice**

1) To record your voice without music, press and hold Rec Button (2) when music is off.

playing.

#### Using the Voice Changer

To hear a fun version of your recording follow these steps. 1) Press PLAY BUTTON (3) to listen to your recording 2) While the recording is playing, keep PLAY BUTTON (3) pressed down.

# Applause

go into power saving mode. Press any key to wake up. In Bluetooth Mode, if music is playing from mobile phone or other wirless device or not, after 20 minutes of no activity, the microphone will beep 3 times, turn off and go into power saving mode. Press any key to re-enter into Bluetooth pairing.

Low Batteries When batteries are weak, the 3 lights (10) will flash faster than normal and the microphone will beep 2 times and power off.

# C. TECHNICAL INFORMATION

Power Supply

0

2) To record your voice with music, press and hold REC BUTTON (2) when singing and playing music from Music Mode, Duet Mode or Bluetooth Mode,

3) After 100 seconds of recording, microphone will emit a beep sound and recording will stop. Beep will also sound if REC BUTTON (2) is released before 100 seconds.

NOTE: New recording will delete previous recodings.

#### Listening to Recording

To listen to your recording in Music or Bluetooth Mode, press PLAY BUTTON (3) at anytime. If music is playing from Music Mode or Bluetooth Mode, it will stop when the recording starts

Press **W** BUTTON (4) once to hear the applause at any time the microphone is powered on. During music playback from Bluetooth or pre-installed songs, press 🏈 BUTTON (4) and the applause will work together with the music.

#### Power Saving Mode

In Music Mode, after 20 minutes of no activity, the microphone will beep 3 times, turn off and

#### Bluetooth Specification Bluetooth v2.1+ EDR Battery: 3x "AAA" batteries Microphone power output Approximately 1.5W Speaker power output Approximately 0.25W Operating environmental temperature -5 to $40^{\circ}$ C

#MF-2652

10

2

4

12

#### ב. פונקציעס

#### אנצינדען

לייג אריין די באטעריעס ריכטיג. (1

אדער **"LOW"** אדער אויסוואל סוויטש (7) צו (7) אדער (א קלאנג וועט זיך הערן) (2 אז עס צינדט זיך אן)

3) לעקטערס פון דריי קאלירן (רויט, בלוי, גרין) וועלן בליצן ווען מען דריקט סיי וועלכע קנעפל, אדער ווען דער מייק איז אקטיוו.

#### נוצן די מייק

.) צו נוצן אן מוזיק, זינג! דער ספיקער (12) וועט מאכן דיין שטימע העכער. 2) צו נוצן מיט מוזיק זינג בשעת די מוזיק שפילט.

#### DUET נוצן מוזיק און

די מייק קומט מיט 10 ניגונים. די קענסט זיי אויסהערן אדער נאר די מוזיק, אדער די מוזיק צו הערן נאר די מוזיק, ריק די סוויטש (8) צו הערן גאר די מוזיק, ריק די סוויטש (8) צו 🞜. צו אין אין מיט די ווערטער .Duet די מוזיק צוזאמען מיט די ווערטער ריק עס צו

באמערקונג: דו קענסט טוישן צווישן מוזיק און Duet באמערקונג: דו קענסט טוישן צווישן מוזיק און פאזיציעס. Duet דעם סוויטש צו די מוזיק אדער

## BLUETOOTH נוצן

. - ריקט דעם סוויטש (8) צו 🎝 דער Bluetooth ריקט דעם סוויטש (8) בינקען שנעל.

אדער "Search for device", גיי צו Bluetooth אויף דעם - גיי צו ."Search for audio"

. ווען עס קומט ארויף די MF2652" code אויף די Device, וועהל עס אויס צו פארן. Bluetooth א "ביפ" פונעם מייק, און די - ווען עס איז געלונגען צו פארן, וועסטו הערן א

לעמפל (9) וועט בלייבן אנגעצונדען.

- דריקט ◄ (5) צו שפילן מוזיק. דריקט 🔢 (13) בו אויפהערן שפילן. דריקט 🛋 (6) צו אויסוועהלן דעם קומענדיגן ניגון אדער 🍽 (1) צוריקצוגיין צום פריערדיגן ניגון. . ווען עס שפילט מוזיק, וועט דער Bluetooth ווען עס שפילט מוזיק, וועט דער

ריקט זיך Bluetooth Device ריקט זיך Bluetooth ביז 50 פיס אוועק. ווען די ארויס פון די 50 פיס, וועט עס מער נישט ארבעטן. ווען מען ריקט זיך צוריק אריין אין די 50 (Auto connect איז אנגעשטעלט אויף Device פיס וועט עס זיך צוריק קאנעקטן (אויב די ווען מען לעשט אויס די מייק און מען צינדט עס צוריק אן, וועט עס אויטאמאטיש זיך -. או וואס עס איז געווען געפארט. Bluetooth Device קאַנעקטען מיט די לעצטע אפצוהאקן א קאַנעקשען פון א צאמ-געפּאַרטע דעווייס, דריקט און האלט ◄ (5) קנעפל. -קען עס נישט ווערן געפּאָרט מיט נאך א Device אוען דער מייק איז קאַנעקטעד מיט איין - ווען דער מייק איז ק . ביז די ערשטע קאַנעקשען ווערט אפגעהאקט. Device

#### רעקארדיר דיין זינגען

די קענסט ריקארדען ווען די זינגסט אַן מוזיק אדער מיט מוזיק, ביי סיי וועלכע פון די (1 .Modes דריי

נעפל, און האלט אראפ דעם קנעפל ווילאנג דו ווילסט **(2**) צו ריקארדען דריק די נאך ריקארדירן

צאך וואס מען האט שוין ריקארדירט פאר 100 סעקונדעס, וועט די מייק געבן א "ביפ" (3 **"REC"** און די ריקארדינג וועט זיך אויפהערן. ס׳וועט אויך ״ביפ״ן אויב מ׳לאזט אפ די קנעפל בעפאר די 100 סעקונדעס זענען פאראיבער.

באמערקונג: א נייע ריקארדינג וועט אויסמעקן די פריערדיגע ריקארדינגס.

#### אויסהערן דיין ריקארדינג

צו הערן דיין ריקארדינג דריקט דעם 🕨 קנעפל.

#### Voice Changer נוצן די

צו הערן דיין ריקארדינג אויף א פאַני וועג האלט אראפ דעם 🕨 קנעפל בשעת׳ן אויסהערן.

#### אפלאדירונג

דריק די 🎬 קנעפל איין מאל צו הערן הענט פאטשן. בשעת די מוזיק שפילט, דריקט די פאטשן קנעפל, און דער קלאנג פון פאטשן הענט וועט שפילן צוזאמען מיט די מוזיק.

#### Power Saving Mode

, נאך 20 מינוט אן קיין אקטיוויטעט, Bluetooth mode סיי אין מוזיק mode, און סיי אין מי אפי'. אפי', אויסלעשן און אריינגיין אין power saving mode וועט דער מייק "ביפ"ן 3 מאל, זיך אויסלעשן און אריינגיין אין אויב די מוזיק פון די Bluetooth אויב די מוזיק פון די אויב די מוזיק פון די אויב די מוזיק פון די אויפוועקן.

#### שוואכע באטעריעס

6

ווען באטעריעס ווערן שוואך, וועלן די 3 לייטס (10) בלינקן שנעלער ווי געווענליך, די מייק וועט ביפ׳ן צוויי מאל און זיך אויסלעשן.



Manufactured & Imported By: MITZVAH FAMILY BROOKLYN, NY 11205

© 2021 MITZVAH FAMILY sales@mitzvahfamily.com

6

#### א. קנעפלעך∖סוויטשעס

פונקציע. Voice Changer

5) 🕨 דריק צו אנהייבן שפילן.

דריק צו אויסוועלן די פריערדיגן ניגון. 🖊 (1

. דריק און האלט אראפ צו רעקארדירן **"REC"** (2

דריק איין מאל צו איבערשפילן די **"PLAY"** (3

רעקארדירטע קול. דריק און האלט אראפּ פאר

. ענט. 🎸 עריק איין מאל פאר קול פון פאטשן הענט 🎸 (4

מאקסימום 100 סעקונדעס ביז מ׳הערט די ״ביפ״.)

# **BLUETOOTH MICROPHONE**

5 6 13 ..... 8 •R , TIPS Let's לאמיר Sing זינגען Mitzyahi Famyli

צו **"LOW-HIGH"** אנצינדען די מייק. רוק צו אויסוועהלן ווי הויעך דער מייקראפאון זאל זיין.

רוק פון **"OFF-LOW-HIGH"** (7

.(6) 🛏 דריק צו אויסוועלן דעם קומענדיגן ניגון 🕨

דוק ארום צו אויסוועהלן DUET. אדער 🞵 , 🎗 (8 .Duet צווישן, אדער מוזיק, אדער Bluetooth

שטייטע ״בלינקען״ מיינט אז.Bluetooth Light (9 דער מייק שפילט מוזיק. שנעלע ״בלינקען״ מיינט אז דער מייק פּאַרט זיך צוזאם. ווען די לייט בלייבט אנגעצינדען מיינט עס אז דער מייק האט מצליח .Bluetooth געווען זיך צו פארן מיט די

Flashing Lights (10

11) מייקראפאון

12) ספיקער

ווען אין מוזיק אדער אין Pause Button 🚺 (13 Bluetooth mode, דרוקט צו אפשטעלן מוזיק.

