

# Dryers

## FIRST LADY AND MEGA PROFESSIONAL SALON DRYERS

### DRYER INSTRUCTIONS

This guide contains important instructions and facts about your professional Hair Dryer. These instructions are simple but they are very important.

Study the guide carefully and follow the instructions closely so that every stylist develops correct habits of operation which will ensure the continued efficient and trouble free performance from your Professional Dryer.

### DRYER IMPORTANT SAFEGUARDS

When using this Hair Dryer, especially when children are present, basic precautions should always be followed, including the following:

### NOTE: READ ALL INSTRUCTIONS BEFORE USE. KEEP AWAY FROM WATER.


DANGER: To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not place or store appliance where it can fall or be pulled onto a tub or sink.
3. Do not use while bathing.
4. Do not place in or drop in water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately .

### WARNING:

To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Use this hair dryer only for intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

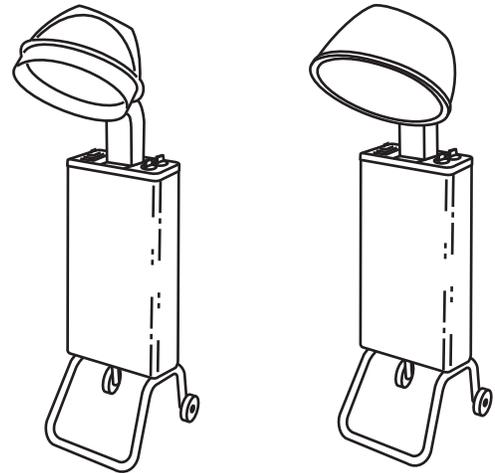


3. Do not operate with a damaged cord or plug. If hair dryer malfunctions or is damaged in any manner, contact authorized service representative for examination or repair.
4. Keep cord away from heated surfaces.
5. Never block the air opening of the hair dryer. Keep air openings free of lint, hair, etc.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate the hair dryer at the same time aerosol sprays products are being applied to hair.
8. See Grounding Instructions. Connect the hair dryer to a properly grounded outlet only
9. Do not direct airflow toward eyes or other heat sensitive areas.
10. Do not exceed rating of convenience outlet as marked.
11. Close supervision is necessary when the dryer is used by, on, or near children or invalids.
12. Do not use this dryer to dry a wig which is made of something that may burn, or a wig that has been cleaned in something that may burn and which may still have some of the cleaner on or in it.

### SAVE THESE INSTRUCTIONS

## DRYER HOOD ASSEMBLY

1. Remove the Arbor Screws from the hood duct.
2. Place the Spring which protrudes from the bottom of the hood duct into the dryer stack.
3. Tilt the hood forward so it is upright, and gently push the duct down into the stack.
4. Fasten the Arbor Screws through the holes in the duct and stack. (You may need to punch a hole in the felt strip behind the pivot holes.)

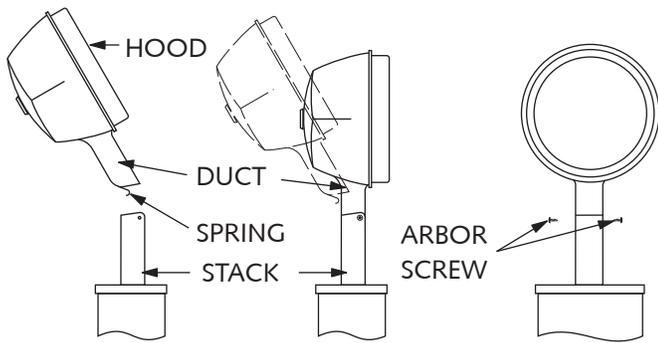

## DRYER CONNECTION

Make sure that the Control Knob on the Dryer is in the OFF position. Plug the unit into a 120 volt A.C., 60-cycle circuit. Before turning the dryer on, read through the OPERATING INSTRUCTIONS and carefully study the IMPORTANT SAFEGUARDS outlined in this manual.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short-circuit, grounding reduces the risk of electric shock by providing a path of low resistance for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in compliance with all local codes and ordinances.

## DANGER

Improper use of the grounding plug can result in a risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green, with or without yellow stripes is the grounding wire.

This appliance is for use with a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C may be used to connect this plug to a two-pole receptacle as shown in sketch B, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green rigid ear, lug or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

If it is necessary to use an extension cord, use only a 3-wire extension cord that has a three blade grounding plug and a three-slot receptacle that will accept the plug on the appliance. Replace or repair a damaged cord.


## GROUNDING METHODS

Check local electrical codes before using a Grounding Adapter. The use of a Grounding Adapter is prohibited in Canada by Part I of the Canadian Electrical Code.

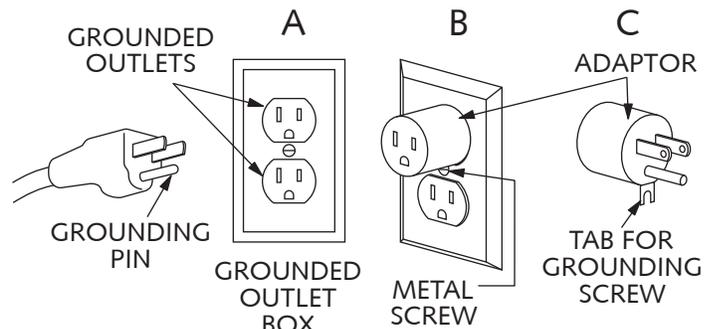

## INSTALLING THE DRYER INTO THE DRYER CHAIR

1. Remove the two screws holding the dryer strap to the back of the dryer box.
2. Place the assembled dryer into the dryer box. The bottom of the metal dryer "can" should be against the stop block. Be sure that the power cord is not pinched under or behind the dryer.
3. Replace the dryer strap.

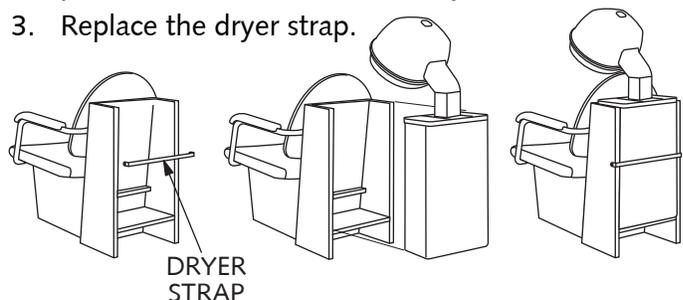

# **OPERATING INSTRUCTIONS: THIS PRODUCT IS FOR COMMERCIAL USE**

**WARNING: TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE COVER.** No user serviceable parts inside. Refer service to qualified personnel.

This dryer features an automatically re-setting thermal limiter. If the air intake is blocked, or if the filter becomes excessively dirty, the thermal limiter will shut off the dryer.

The dryer will remain off for approximately five minutes, before the thermal limiter re-sets. Check the filter before re-setting the timer.

## **DRYER OPERATION**

The front knob as you face the dryer is the **TIMER CONTROL**. Turn this knob to the drying time selected. The timer will automatically regulate the drying cycle from one to sixty minutes. Once the dryer is turned on, all phases of the drying cycle can transpire; the air is heated and the blower operates. The dryer can be **MANUALLY** shut off by turning the knob to the **OFF** position.

## **TEMPERATURE CONTROL**

The rear knob of the dryer offers five different temperature selections. These selections range from low to high heat.

## **DRYING TIME AND TEMPERATURE**

Drying times and temperatures will vary from client to client, depending upon hair texture, color, style and personal sensitivity. Normally, your dryer will dry hair within a thirty minute cycle.

## **PRE-WARMING THE DRYER**

This dryer has been designed utilizing a heating element which gives almost instant heat. The normal warm-up period recommended by other manufacturers for their models can be eliminated and the client can be seated under the hood without delay.

## **HOOD REMOVAL**

To remove the hood assembly from the dryer, remove the arbor screws that hold the hood assembly to the moveable air duct. With the hood removed, the hood band can be unscrewed, allowing the hood to be disassembled.

## **HOOD REMOVAL (CONTINUED)**

Carefully remove the hood band and separate inner and outer hood halves. Interior surfaces can now be washed and dried. (see **DRYER CLEANING**).

Reassemble in the reverse order of disassembly.

Locator tabs are built into the hood halves to ensure correct alignment.

## **DRYER CLEANING**

The dryer hood should be periodically washed with a diluted solution of mild detergent and lukewarm water.

**DO NOT USE SOLVENTS OR HALOGENATED HYDROCARBON TYPE CLEANERS. DO NOT USE ABRASIVE CLEANERS.** (Warranty terms will be voided by damage to hood through the use of abrasives, solvents or halogenated hydrocarbon type cleaners. See Warranty.)

## **MISCELLANEOUS**

If the dryer does not operate, contact an authorized service representative.

To protect the dryer cord, any extended storage of the dryer should be in a cool, dry place. The dryer cord should be coiled and held with tape to the back of the cabinet when stored.

When the dryer is in use, excess cord should be coiled.

Refer any other service required for this dryer to a qualified and authorized service representative.

## **DRYING WIGS AND HAIRPIECES**

**CAUTION:** Many wig/hairpiece cleaners are combinations of solvents or halogenated hydrocarbon type cleaners. Hanging or laying a wig/hairpiece saturated with such cleaners in the dryer hood will cause the failure of the material used in the hood and this will void the hood warranty.

If using such cleaners, be sure no contact is made between the dryer hood and the wig/hairpiece. Use a mannequin head to support wig/hairpieces and prevent contact.

## **HOOD POSITIONING**

Three separate movements may be used to position the hood. Set the height by moving the hood up or down to suit each client. Move the hood forward and back at its juncture with the dryer. The hood tilts through a 70-degree arc.

## **USER MAINTENANCE INSTRUCTIONS**

No lubrication of the dryer is required.

## THE AIR FILTER

The dryer utilizes unobstructed air intake filtration. Air enters through a large filter opening in the dryer top. It is filtered prior to warm-up and client contact.


Frequent cleaning of the filter is conducive to efficient, trouble-free operation. The filter is easily cleaned by washing in detergent and water, rinsing and drying.

The filter is accessible from the top of the dryer for fast and easy service without moving the dryer or chair. To remove the filter, take off the air inlet cover located on the left side of the dryer top. The filter is accessible for removal by hand. When replacing the filter, be sure that it is positioned correctly so that all air entering the dryer will pass through it. Prongs on the filter housing secure the filter in place.

New filters are available from your beauty supply distributor.

## DRYER CART ASSEMBLY

Fasten the cart to the Dryer cabinet by driving (4) screws (included) through the holes in the dryer cart and into the mounting holes in the bottom of the dryer cabinet.

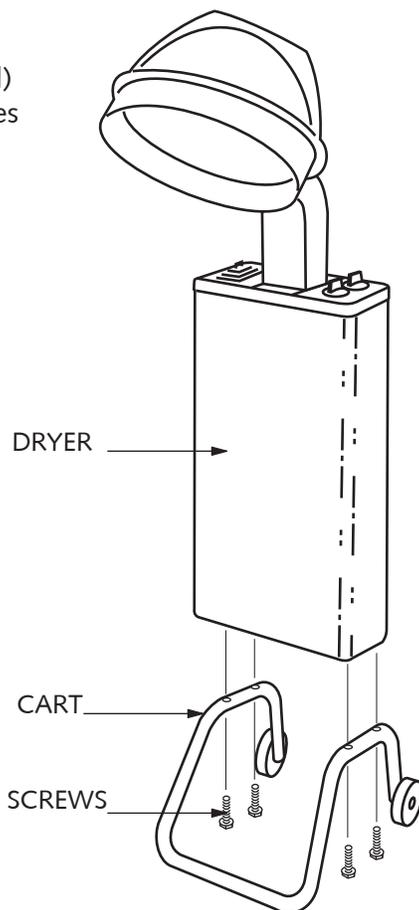

## WARRANTY

Your Commercial Hair Dryer is warranted to the original purchaser for beauty salon use to be free from defects in material and workmanship for a period of one year after the date of original purchase from an authorized distributor.

The obligation under this warranty is limited to the replacement or repair at the factory, or a factory authorized service center, of parts found defective through normal use and only after the manufacturer receives written notice for such defect from the original purchaser within the applicable warranty period, and the dryer is delivered to the manufacturer at its plant or service center.

The warranty against breakage in use of the hood will terminate if the hood is damaged through the use of abrasives, solvents or halogenated hydrocarbon type cleaners. Many wig cleaners are combinations of solvents or halogenated hydrocarbon type cleaners. Hanging or laying wigs or hairpieces treated with solvents or halogenated hydrocarbon type cleaners in the dryer hood will damage the hood material and terminate the hood warranty.

The manufacturer reserves the right to make changes in design and other improvements in its products without thereby assuming any obligation to make such changes or install such improvements upon its products theretofore manufactured.

No person is authorized to make any promise, representation or warranty with respect to the Commercial Hair Dryer contained herein. This is the only warranty relating to the Commercial Hair Dryer and none other shall be implied by law.

To place the above warranty into effect, the original purchaser must complete and return the Registration Card to the manufacturer within fifteen (15) days after the original purchase. If the Registrtrion Card is not returned within this fifteen (15) day period, neither this warranty nor any other warranties, expressed, implied, or implied by law shall be in effect with respect to the Commercial Hair Dryer.

## SAVE THESE INSTRUCTIONS