

# User Manual

 
MIX it to the MAX



**MIX-MAX**  
**ELECTRICAL COLOR PREPARING SYSTEM**  
Professional Beauty Instrument



## Name of product component

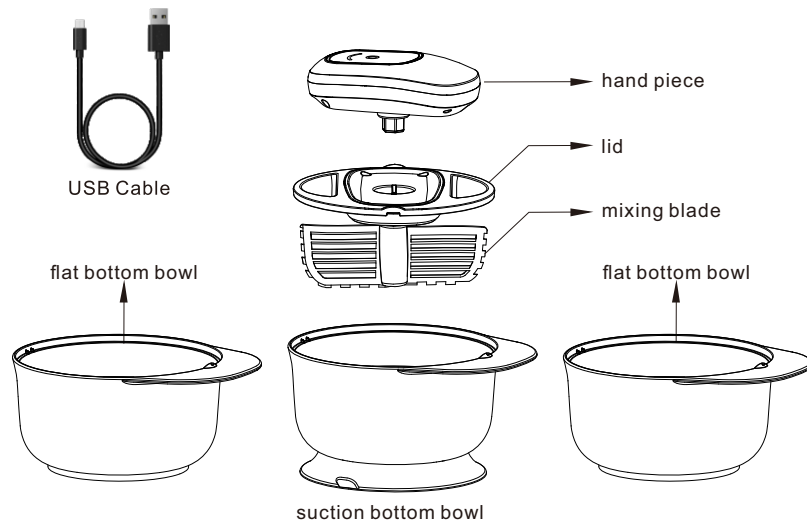

## Specification Parameters

Rated Voltage	5V
Rated Current	0.8A

## Features


It's not just about freeing your hands from manually whisking the color, it's about achieving the ultimate result of color preparation.

- Battery operated, up to 70 times usage each charging
- Powerful motor, completely mix any color cream with oxygen in 5 minutes
- Electrical hand piece separated from main body, so that the bowl and lid can be washed with water and detergents safely
- Uniquely designed mixing blade (Patent Pending), make sure 100% of the colors in the bowl are nicely mixed. No need extra whisking with hands

## Operation Instructions


1. Touch the ON/OFF button with finger and hold for 2 seconds to turn on the unit. The LED indicators will illuminate to show the battery level.

- \* Green indicator only = LOW
- \* Green indicator + yellow indicator = MEDIUM
- \* Green indicator + yellow indicator + red indicator = FULL

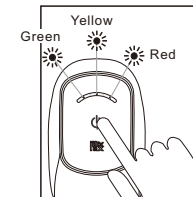

2. Touch the ON/OFF button to set up desired time of operation. Depending on the volume of color creams and peroxides, they will be perfectly mixed in 3-5 minutes.


- \* Green indicator only = 3 minutes
- \* Yellow indicator = 4 minutes
- \* Red indicator = 5 minutes

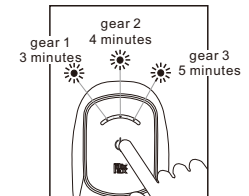

Once the time is set up, the unit will start working until reaching the preset time. Then the unit will stop working and the indicator will show the battery level again. The unit will automatically switch off if it's left unattended for 3 minutes.

3. To stop operation, touch the ON/OFF button for 2 seconds and the unit will turn off.

4. To charge the battery, plug the type C USB cord into the charging port. Once charging is started, the LED indicators will illuminate in turn. When the battery is fully charged, all the green, yellow and red LED indicators will illuminate at the same time.

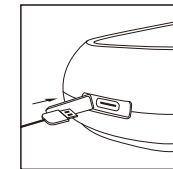

5. Charging will stop when the battery has been charged for more than 6 hours. All the LED indicators will blink at the same time as a reminder

## Warning

- The hand piece is NOT waterproof. Please do not wash the hand piece in any occasion. Wipe with moistured cloth for cleaning.
- This device is designed for use by professionals properly trained in its use.
- Use this product for its intended use only.
- This product should never be operated by or in close proximity to children.
- Do not operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in water.
- Do not use outdoors. This product is designed for indoor use only.
- Do not place the hand piece where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid, and always store in a dry place.
- Never attempt to disassemble or repair the product yourself.