




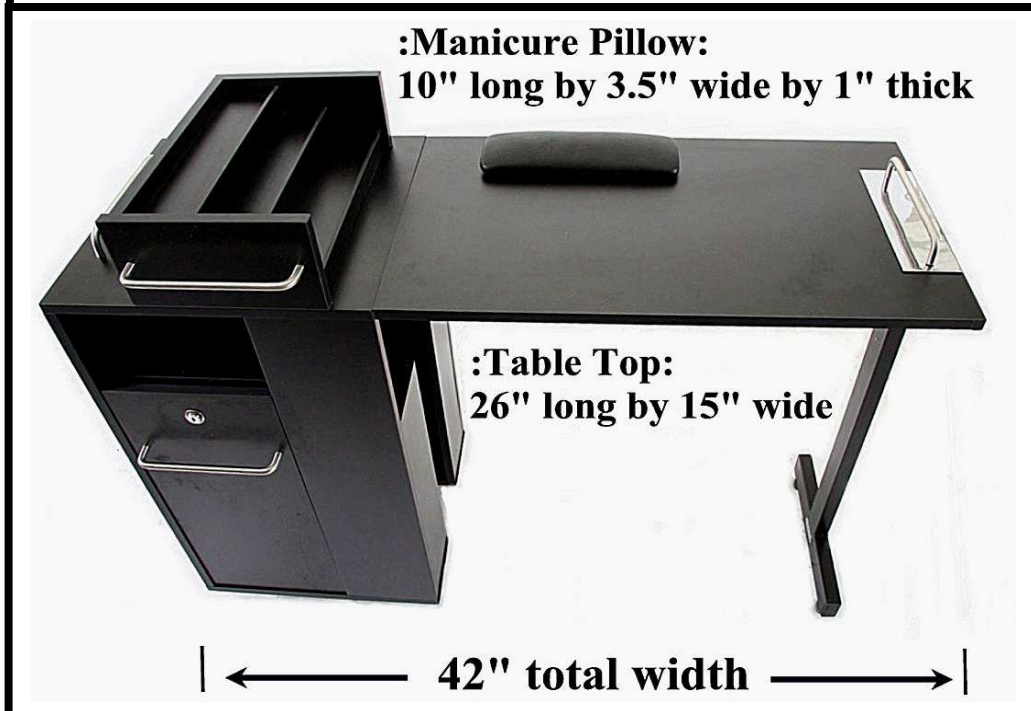



KELLER INTERNATIONAL, LLC
1431 LAKE RD, HAMLIN NY 14464
Info@kellerinternational.com
T: 1-800-578-8772 ▪ F: 1-585-964-8093
KELLER4SALON.COM

K5040 Portable Manicure Table

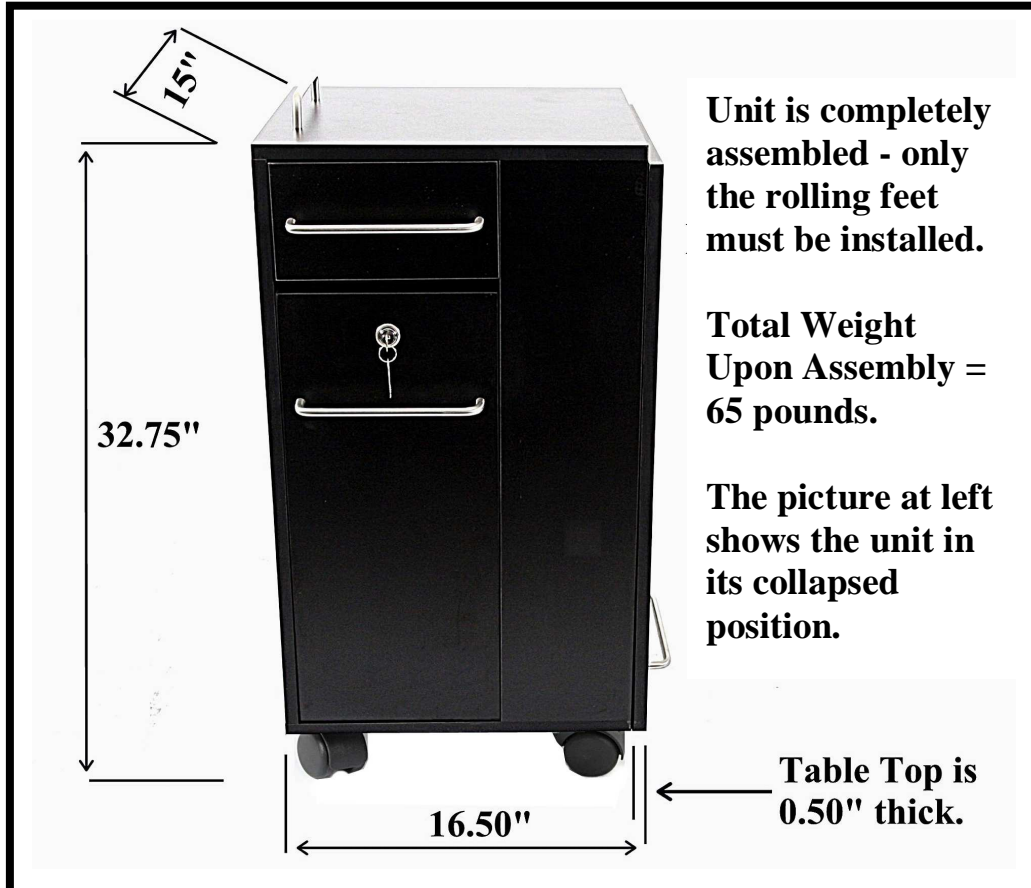


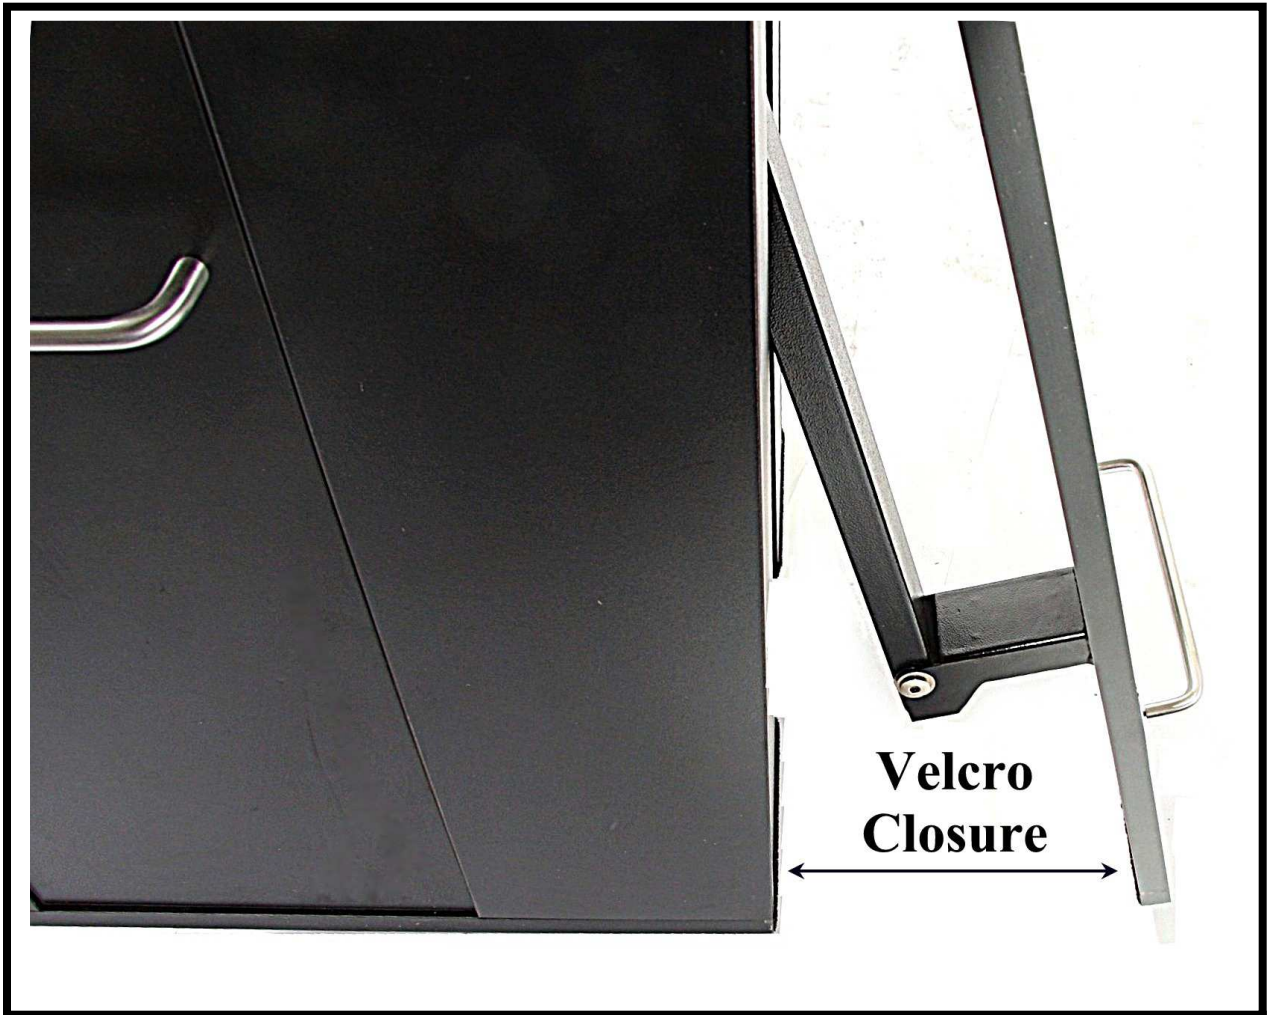

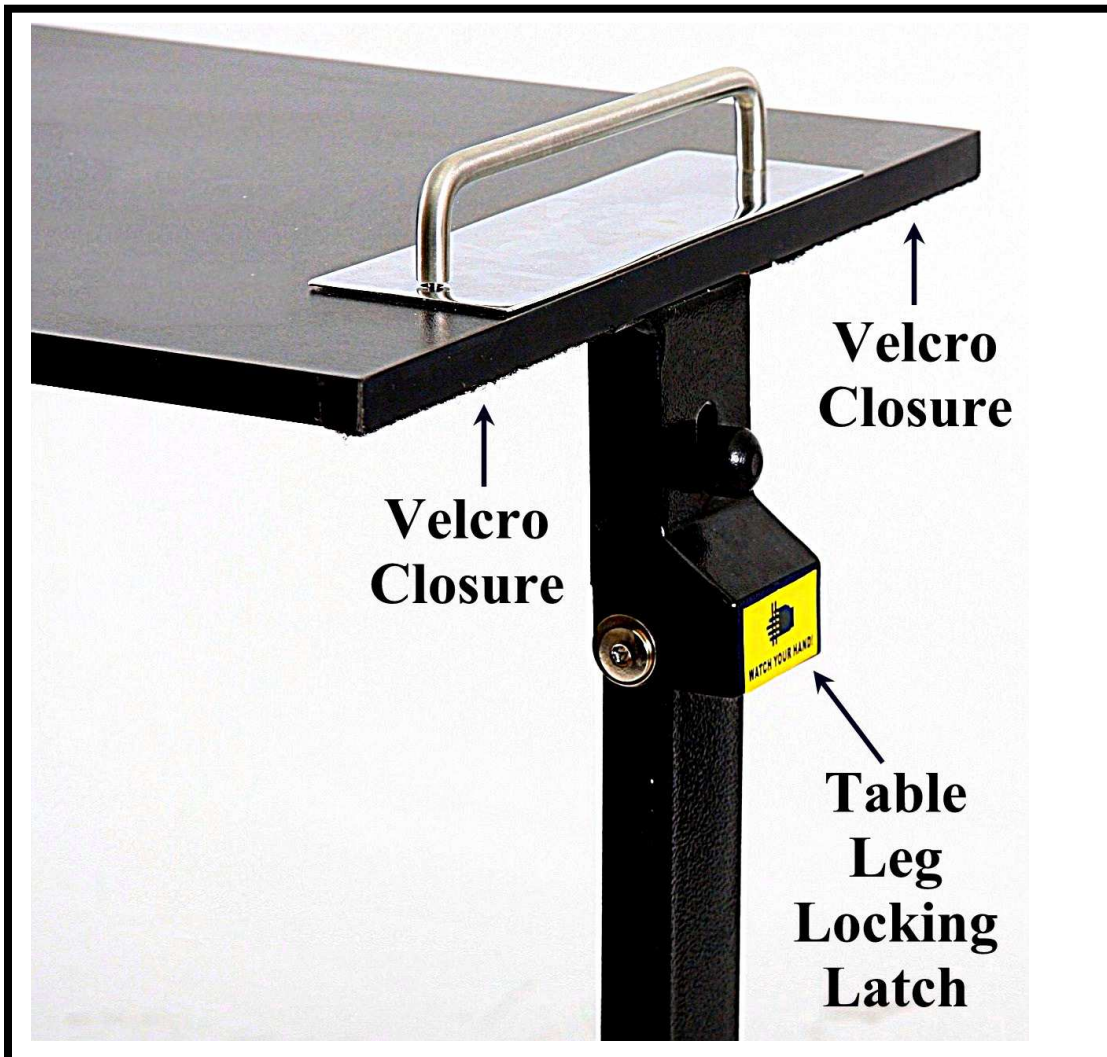

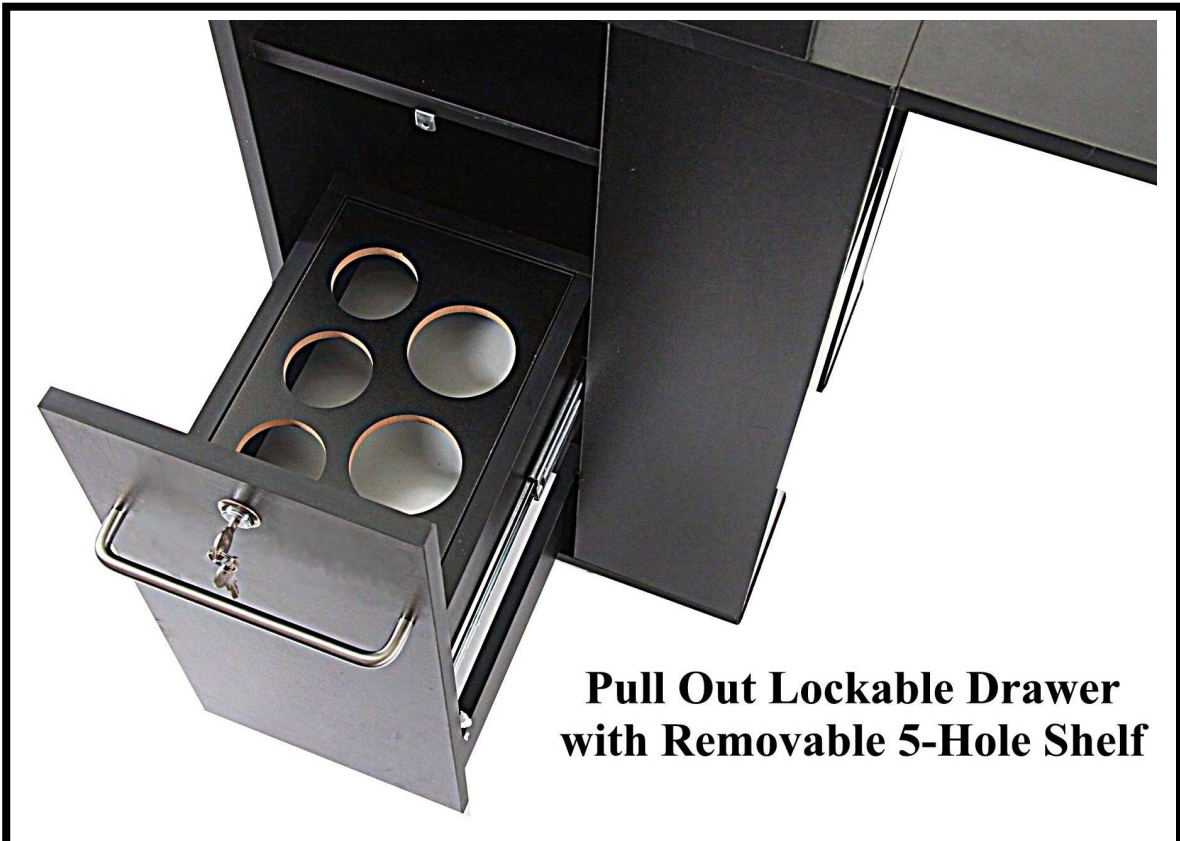

**Pull Out Lockable Drawer
with Removable 5-Hole Shelf**

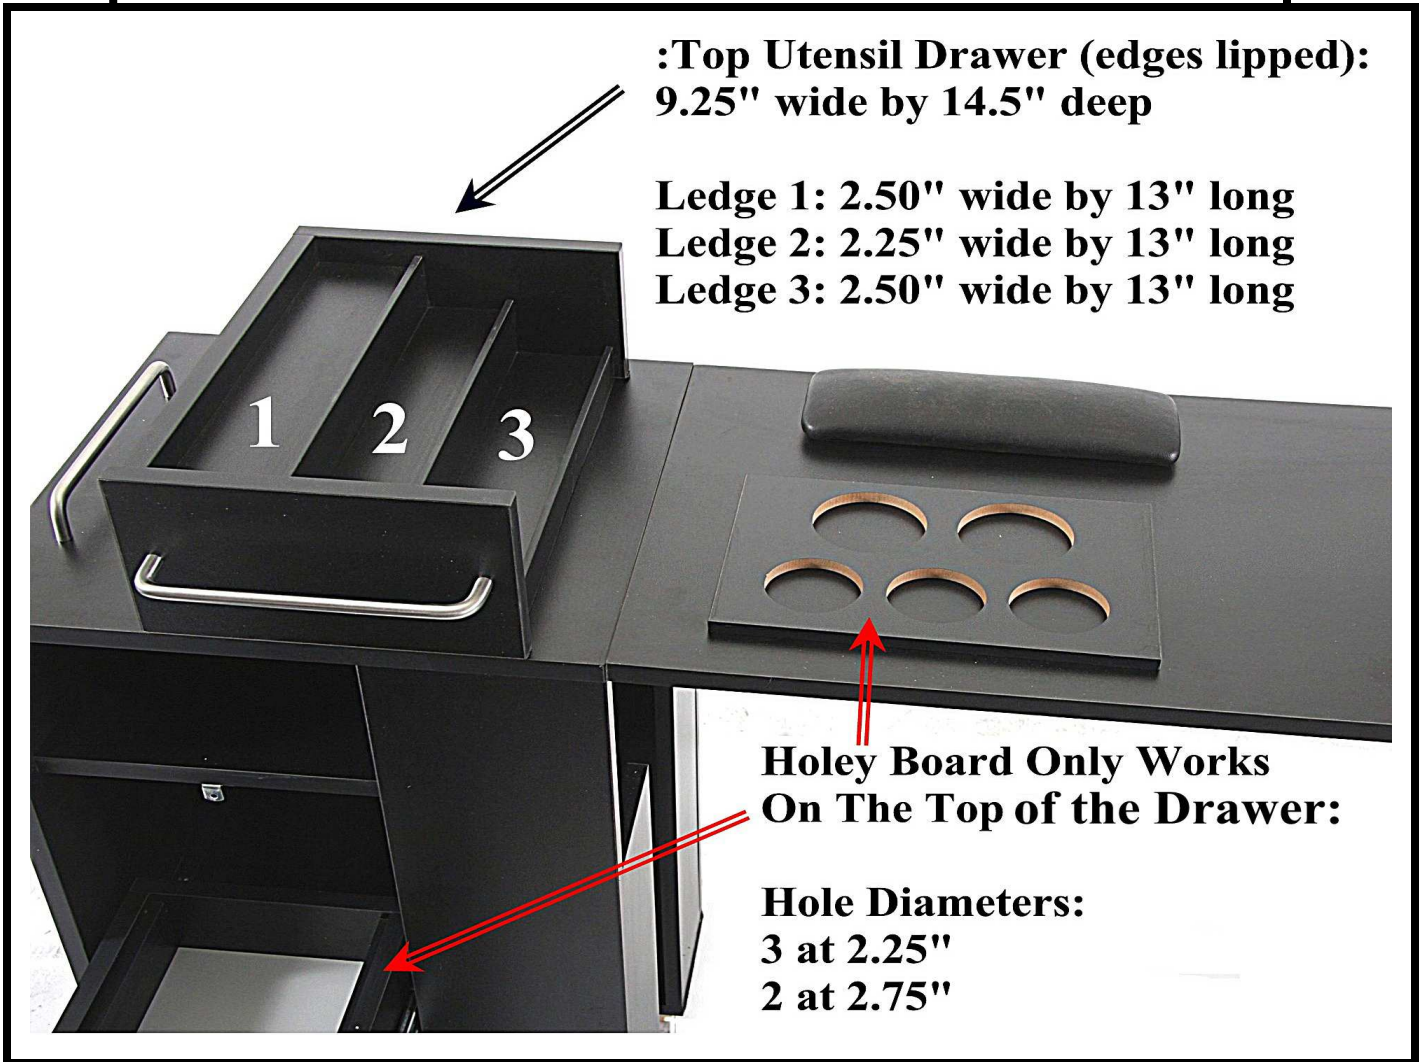

**:Top Utensil Drawer (edges lipped):
9.25" wide by 14.5" deep**



**Ledge 1: 2.50" wide by 13" long
Ledge 2: 2.25" wide by 13" long
Ledge 3: 2.50" wide by 13" long**

**Holey Board Only Works
On The Top of the Drawer:**


**Hole Diameters:
3 at 2.25"
2 at 2.75"**

Drawer Removal from Keller Products

Typical Slide Out Drawer - Front View

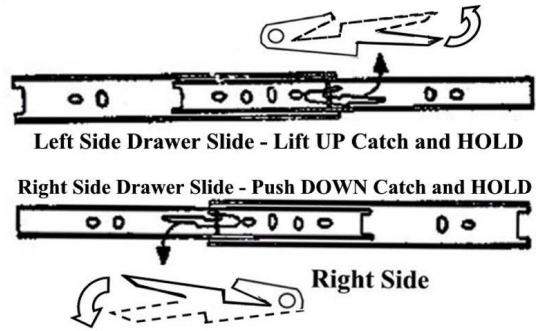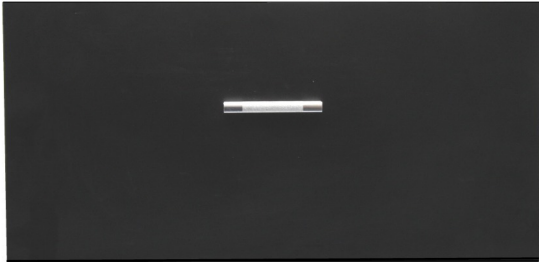


Left Side Drawer Slide - Push UP Catch and Hold

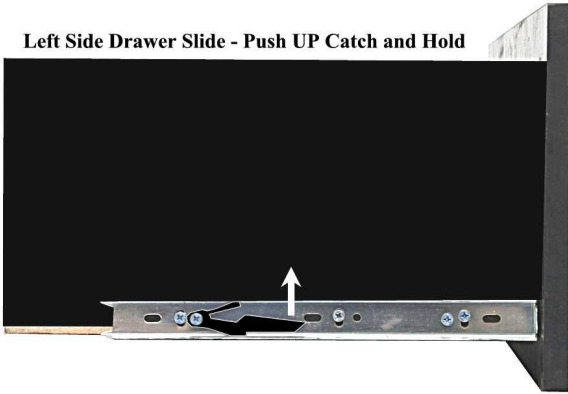

1. Pull Drawer **OUT** until it stops.
2. Push **UP** on the Left Side Drawer Catch and **HOLD**.

Right Side Drawer Slide - Push DOWN Catch and HOLD

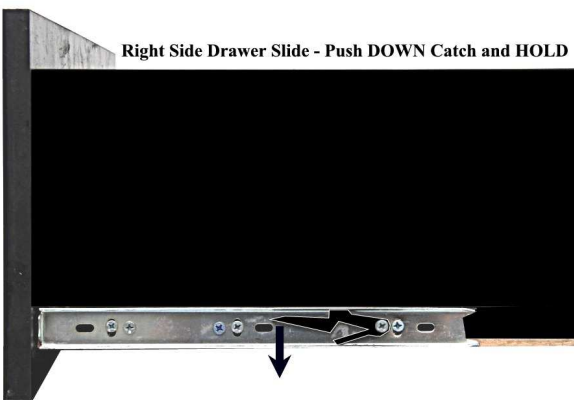

1. Pull Drawer **OUT** until it stops.
2. Push **DOWN** on the Right Side Drawer Catch and **HOLD**.

Once the drawer is pulled **OUT** and both Drawer Slide Catches are **HELD** in their proper directions – continue pulling the drawer the rest of the way **OUT**. See Upper Right Diagrams. To re-install – simply guide the drawer slides back into the ball-bearing slides – **DO NOT PUSH** Catches **UP** or **DOWN**.