










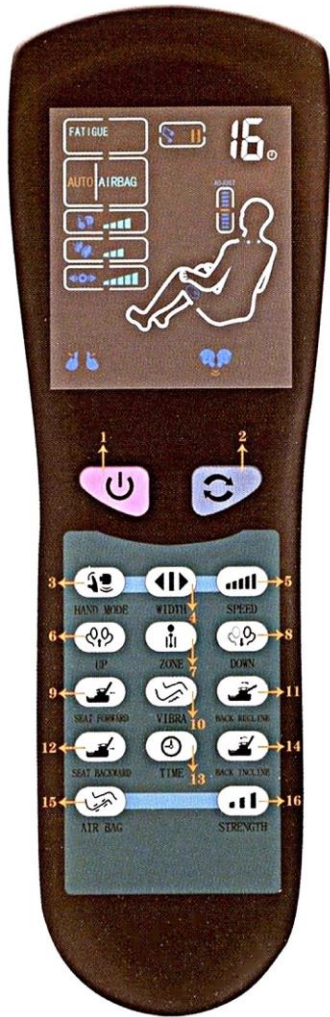

KELLER INTERNATIONAL, LLC
1431 LAKE RD, HAMLIN NY 14464
Info@kellerinternational.com
T: 1-800-578-8772 • F: 1-585-964-8093
KELLER4SALON.COM

Diamond Spa Pedicure Chair (KM-S830) Massage Chair Remote Control




REMOTE CONTROL FUNCTION KEY DESCRIPTIONS







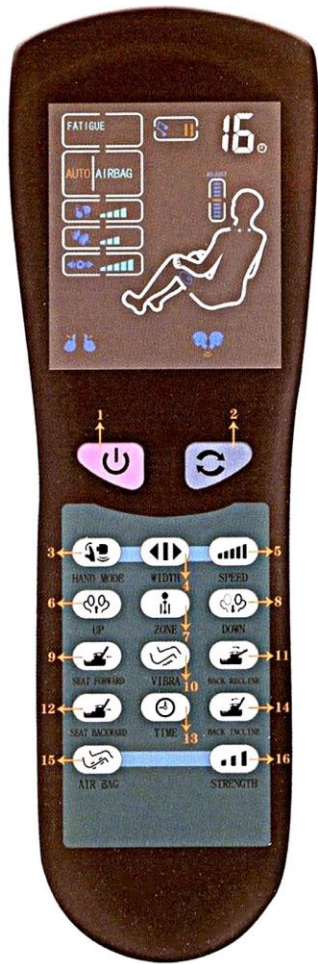

-  **1: Power "ON /OFF" Button for the Chair**
-  **2: Automatic Mode Button**
-  **3: Manual Massage Mode Button: "Kneading," "Finger-Pressing," "Knead-Knocking," "Knocking-Rolling."**
-  **4: This Button adjusts the width of the Massage "Robot" Rollers to either Wide, Medium or Narrow.**
-  **5: This Button offers 3 different adjustments to the Speed of the "Kneading," "Finger-Pressing," "Knead-Knocking."**
-  **6: Press this Button to regulate the massaging position in the Manual Mode during armchair massage.**
-  **7: This Button offers 3 different massage "Zones" to be targeted: Neck Area, Mid-Back Area, Lower Back Area.**
-  **8: Pressing this Button causes the Display Screen to Shift Down.**

CAUTIONS:

1. Do NOT unplug the Remote Control while the Chair is working.
 - a. Press the "ON / OFF" button to "OFF", let the Chair finish cycling. Then unplug.
2. Do NOT operate the Remote Control with wet hands.
3. Disconnect the Power Plug from the outlet after use or before cleaning.
4. Do NOT drop the Remote Control.
5. Do NOT drop Remote Control into Water. Do NOT pull on the Remote Control connecting wires.
6. Do NOT place anything Heavy on the Remote Control.
7. Do NOT allow children to play with the Remote Control.
8. Do NOT step on the Remote Control or the Power Cord.



REMOTE CONTROL FUNCTION KEY DESCRIPTIONS

-  **9: Press & Hold this Button to move the Chair Forward.**
-  **10: Vibration Button.**
-  **11: Press & Hold this Button to Recline the Back of the Chair.**
-  **12. Press & Hold this Button to move the Chair Backwards.**
-  **13. Timer Button Options Include: 5, 10, 15, 20, 25 and 30 minutes.**
-  **14: Press & Hold this Button to Incline the Chair Back.**
-  **15: This Button is for the Seat Air Bags.**
-  **16: This Button offers 3 different adjustments for the "Strength" of the Seat Air Bags.**

ATTENTION:

1. To avoid wasting electricity:
 - a. Turn power "OFF" after massage.
2. Contact the Seller for instructions:
 - a. On how to repair.
 - b. Ordering replacement parts.
3. Before Reclining the Chair:
 - a. Ensure there are no obstructions behind the Chair.
 - b. Watch for small children playing around the Chair.
4. If the Buttons get sticky or don't respond:
 - a. Do NOT Over Exert finger pressure when using the Buttons.
 - b. Contact Seller.
5. Seller – Clean Electron Plate:
 - a. Open Remote Control Plastic Cover.
 - b. Remove the Electron Plate.
 - c. Scrub Electron Plate with Alcohol and a Toothbrush.
 - d. Re-install Electron Plate after Alcohol dries.

