



BASIC TROUBLESHOOTING CHART


FUEL

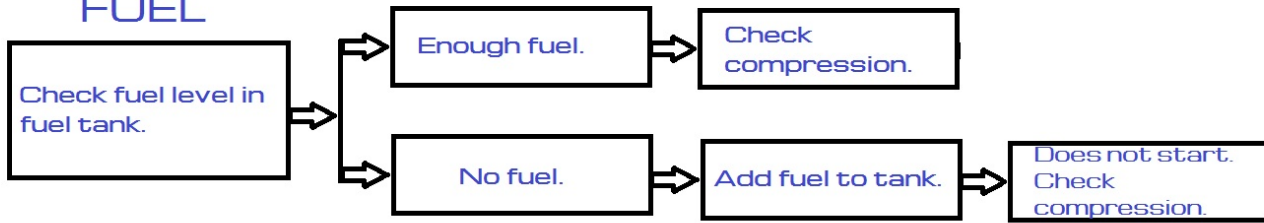


IGNITION

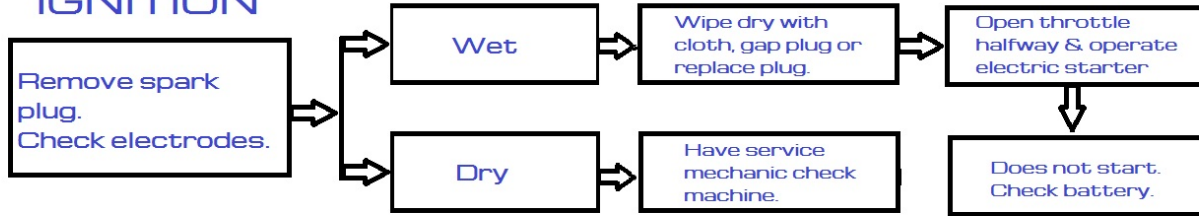

BATTERY

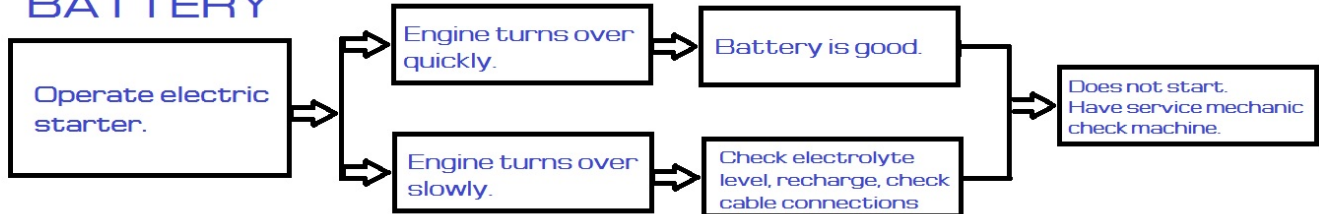

COMPRESSION

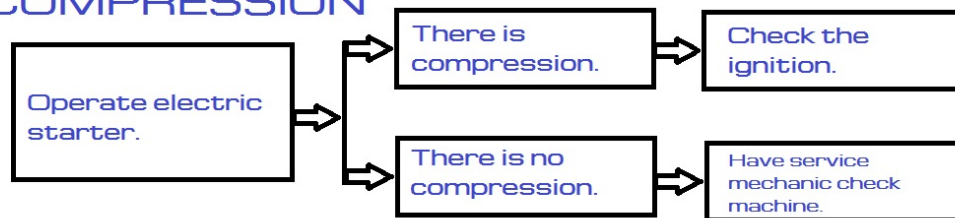

*Simple way to check compression without compression gauge is to remove plug, hold finger over spark plug hole to seal it and crank engine. If finger is pushed off the spark plug hole, there is usually enough compression to start and run engine.