



**Coffee gets everywhere.** Once a day, spend 2-3 minutes cleaning to prevent Puq from gaining weight it doesn't need.




1. Press "Cleaning".

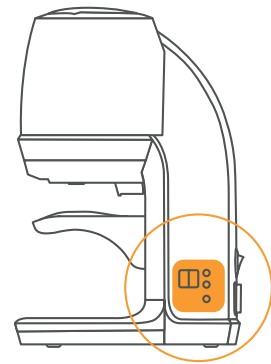


2. Remove top cover and get the Allen key.

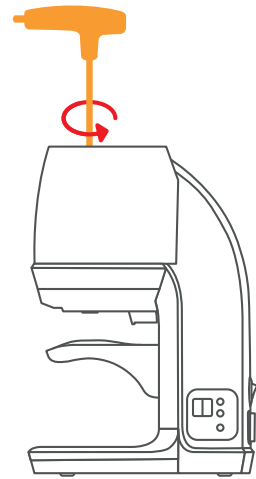


3. Unscrew by turning counter-clockwise.

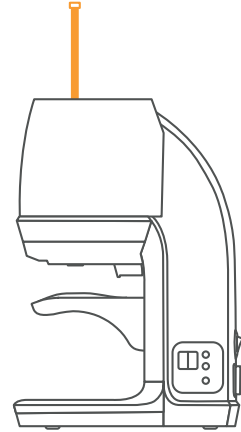

4. Remove bolt.

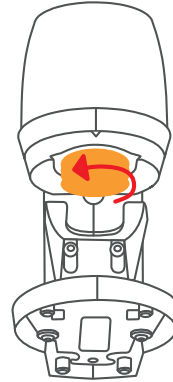

5. Remove tamper base by turning counter-clockwise.

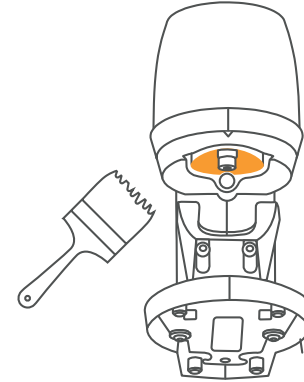

6. Clean the cavity with a brush.

**Check cycle counts** by using the display.

**I. Tamping cycle count**



In **standby mode**, press and hold '+' and '-' button for **3 sec.**

The display will flash a number for 5 sec. Multiply this number by 5.000 to get cycle count.

**II. Cleaning cycle count**




1. Press the **'CLEAN'** button to bring tamper in cleaning position. Now press and hold '+' and '-' button for **3 sec.**

Multiply this number by 20 to get cycle count.

# Hey there!


Set up the Lower Clamp, **before you do anything else.** **Only then, every tamp will be perfectly level and safe.**

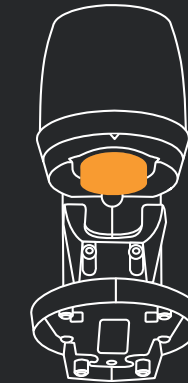


**Cleaning during your shift**

Coffee can stick to your tamper while making coffees. Give it a quick wipe with a dry towel or cloth and you're good to go again!


**Clean your PUQPRESS every day!**

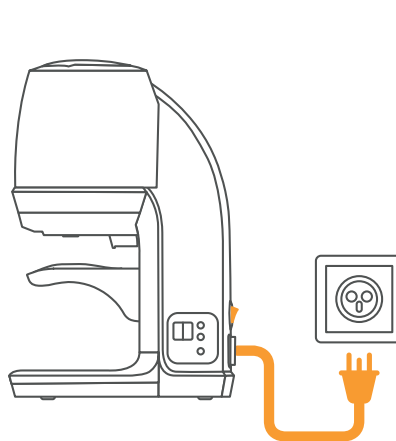


1. Insert power cable and turn on PUQpress. The tamper base will move to the upper position.

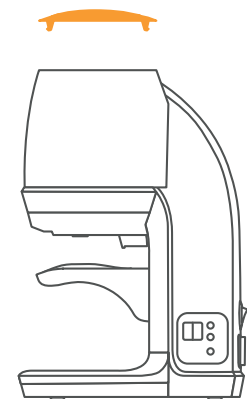


3. Remove the top cover.

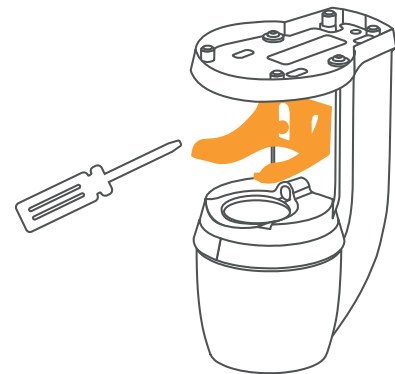


4. Turn Puq upside down on the table and unscrew the lower clamp.

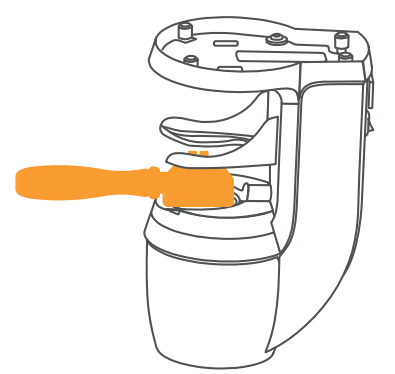

5. Push Portafilter (PF) in-between the upper- and lower clamp. Push the lower clamp downward and tighten the screws.

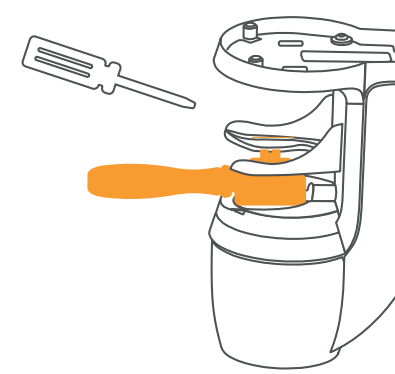

6. Check fitting and tighten screws firmly.

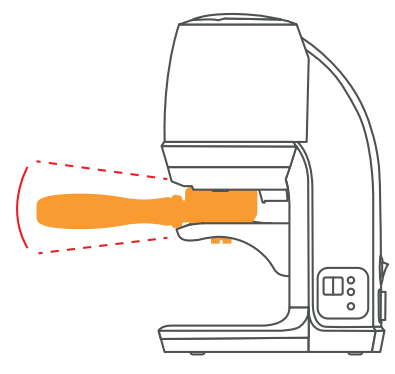


7. Put Puq back on its feet and test if the PF fits well.



**WARNING:** Failure to adjust the lower clamp to optimum working position may allow contact with moving parts. Portafilter should not wiggle! Improper lower clamp setting may also cause damage to drive mechanism.

For instruction video check [www.puqpress.com/support](http://www.puqpress.com/support)

### A. Activate menu

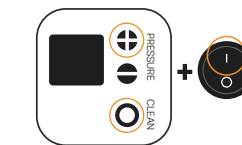

1. Switch off the power. Press and Hold the 'CLEAN' and '+' button while the power is switched back on. "SE" flashes in the display.



2. Press 'CLEAN' button to step through menu (B to F).

Problems with your puck falling out? Use this setting!

B. Not in use	C. Change tamp weight setting (KG or LBS)	D. Slow tamp mode	E. Firmware version	F. Reset factory default
<p>2. 'SE' not in use. Go to setting C0 by pressing 'CLEAN' button.</p>	<p>1. Activate menu and press 'CLEAN' 1 time so that 'C0' is shown (see step A).</p> <p>2. Use '+' and '-' to change setting. 00 = KG 01 = LBS</p> <p>3. To finish selection, press 'CLEAN' button 4 times to exit menu.</p>	<p>1. Activate menu and press 'CLEAN' 2 times so that 'C1' is shown (see step A).</p> <p>2. Use '+' and '-' to change setting. 00 = NORMAL TAMPING 01 = SLOW TAMPING</p> <p>Tamping cycle time increases with 0.8 s.</p> <p>3. To finish selection, press 'CLEAN' 3 times to exit menu.</p>	<p>1. Activate menu and press 'CLEAN' 3 times so that 'C2' is shown (see step A).</p> <p>2. Press '+' or '-' to see the revision number.</p> <p>3. Press 'CLEAN' 2 times to exit menu.</p> <p>Use this function only after contact with your local dealer.</p>	<p>1. Activate menu and press 'CLEAN' 4 times so that 'Fr' is shown (see step A).</p> <p>2. Press '+' and '-' for 1 sec. to reset the device back to default settings.</p> <p>3. Press 'CLEAN' to exit menu.</p> <p>Use this function only after contact with your local dealer. Cycle counter cannot be reset using this function.</p>