 


Instruction Manual


for
Quick Fold Indoor/Outdoor Screen

PARTS LIST:


Folding frame

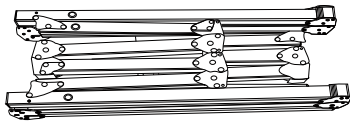


Front projection screen fabric

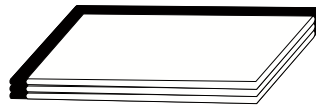

Screen fabric bag

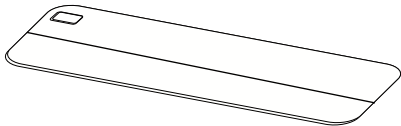

Extra Support Legs
(For 225" Only)

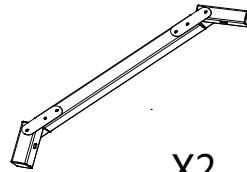


X2


Left and right folding legs



Carrying bag

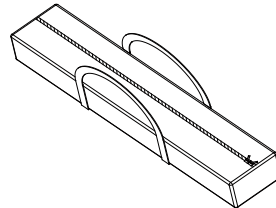

Rope

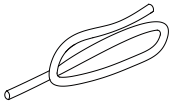


X2

Eye bolt



X2

Stakes

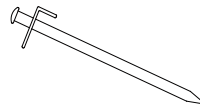

X4

Knob screw




X6

This product was designed to be easily repaired, please contact us
After installation, please keep instructions for future reference.


ASSEMBLING THE FRAME

①

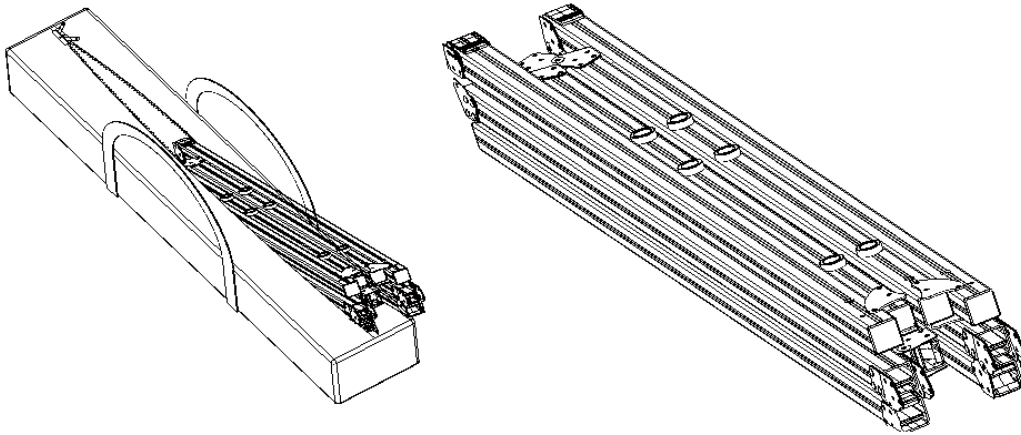


Take the folding frame out of the carrying bag and find a clean, flat surface to set up the screen.

②

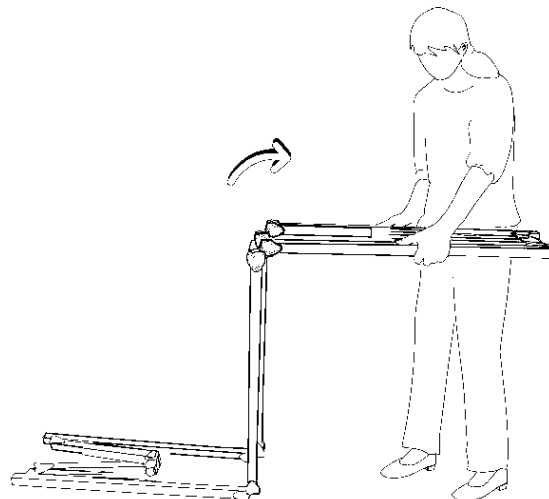


Gently unfold the frame first.

③

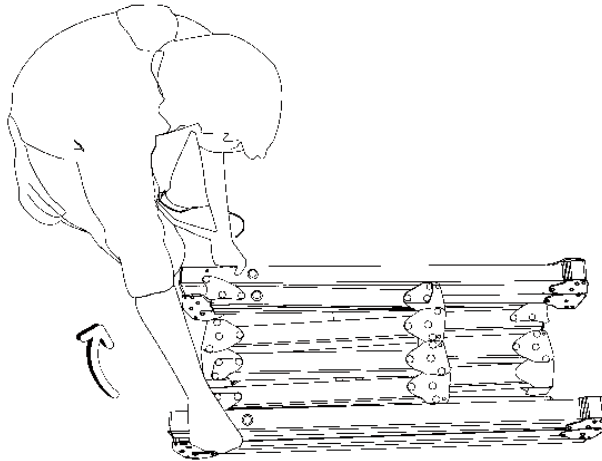


Unfold, making sure the snaps are up. Be careful to support the hinges when unfolding the frame. DO NOT cause awkward pressure to the joints as it can break a hinge. If a hinge or corner does break, please contact us. Hinges and corners are very easy to replace.

④

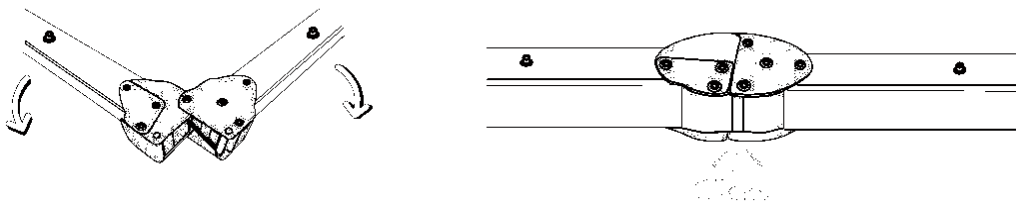

Unfold the frame until the latch on the hinge “clicks” into place. Sometimes, added pressure on the latch will help it lock into place. If a hinge does not lock into place, apply some lubricant (such as WD-40) to the hinge and wipe away the excess. The hinge will then lock into place.

⑤

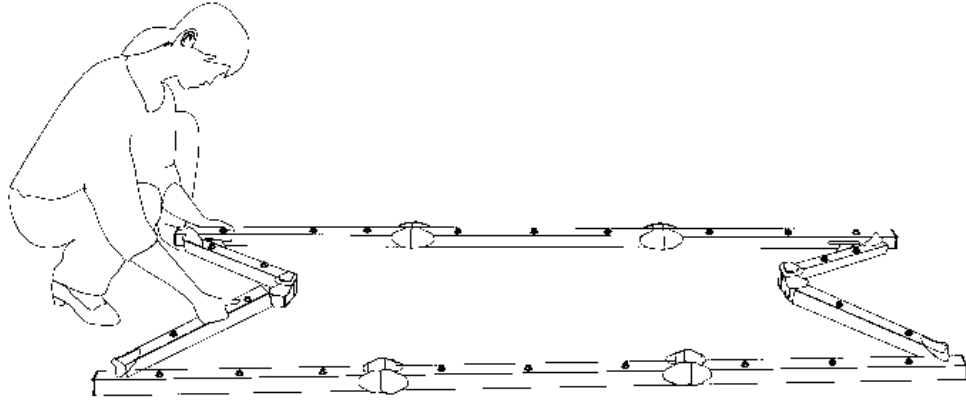


Snaps should be facing up. Repeat the procedure with the remaining hinges. While opening, keep the frame close to the ground at all times. This causes less awkward pressure on the hinges. Then lock all the hinges into place.

⑥



After the hinges are locked into place, secure the four corner latches.


7

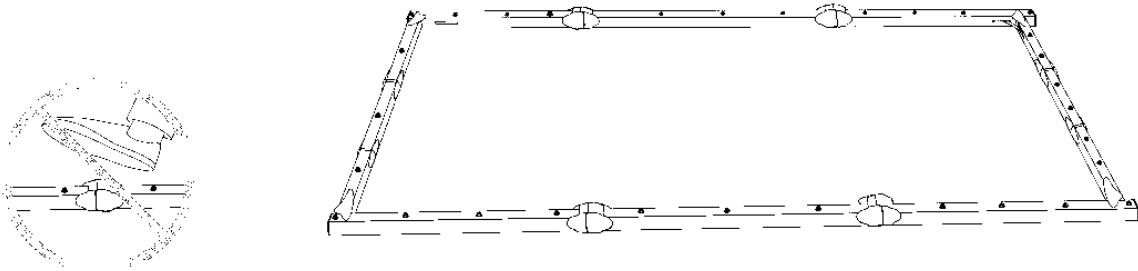

Please do not step on the frame especially on the joints of the frame.


8

Only for the STO-169225S

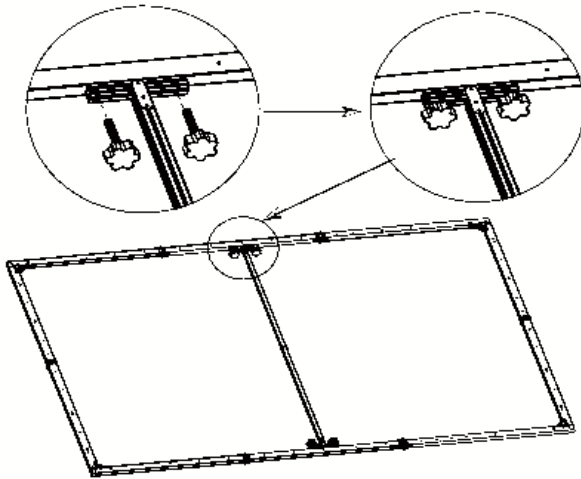


Install the vertical support bar. The threaded holes on the support bar should be facing down. Fold the ends of the support bar keeping the rubber pads toward the frame. Then secure the support bar to the frame with the included knob screws.

9

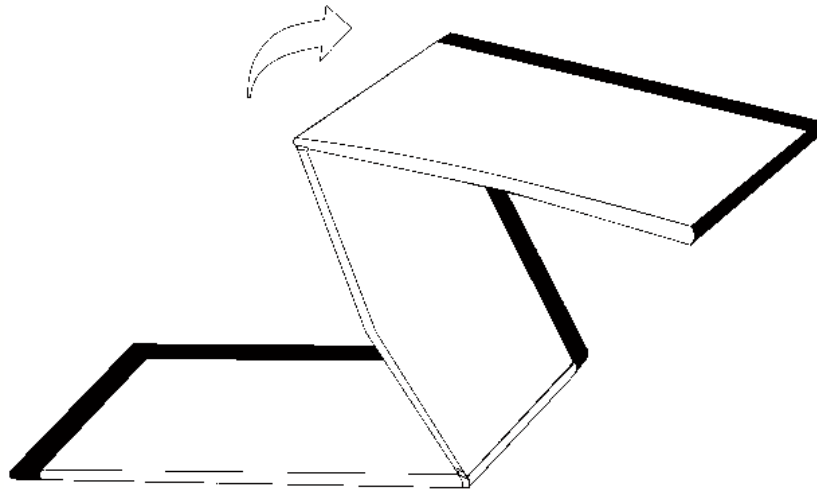


Take the screen material out of its bag and carefully unfold it.

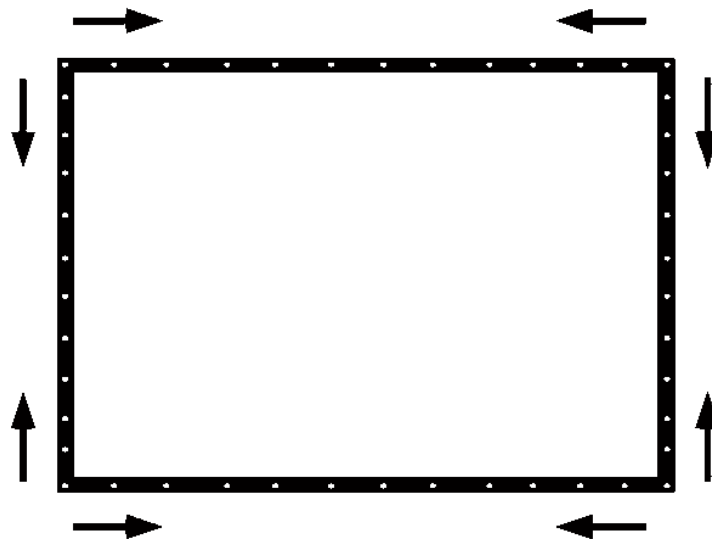


Align the corners of the material with the inside corners of the frame.

10

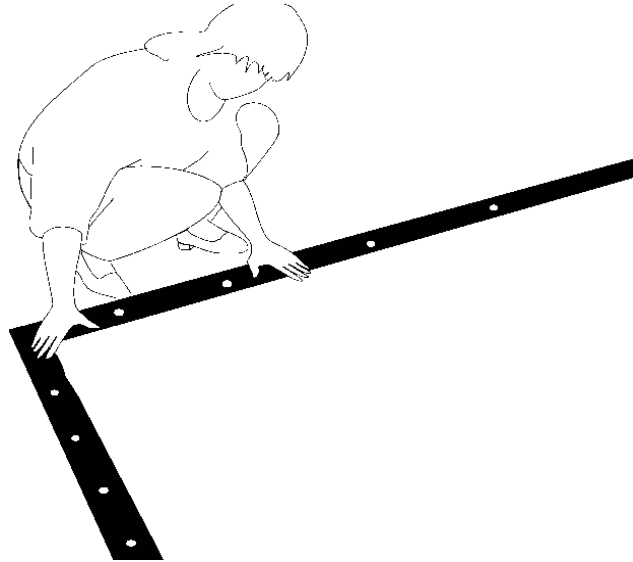


Begin by snapping the 3 corner snaps on each corner first. Then continue snapping the snaps around the frame. If the material is too cold or was folded improperly from previous use, then it may be difficult to stretch the material to the four corners. **DO NOT** stretch the material too hard to tear the screen. In this case, simply start on one snap and continue snapping around the whole frame one snap at a time.

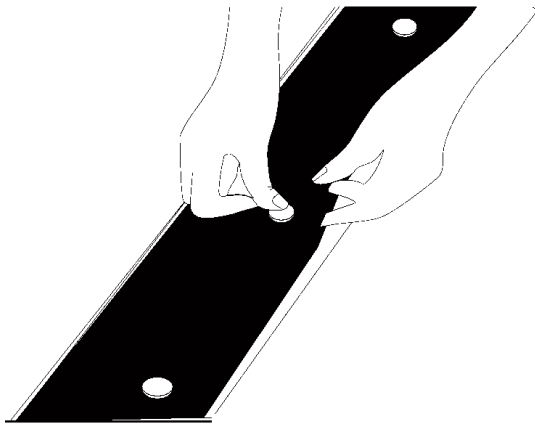

Note: If a snap is ever damaged, it can easily be replaced on the frame and screen material. Please contact us for help.


11

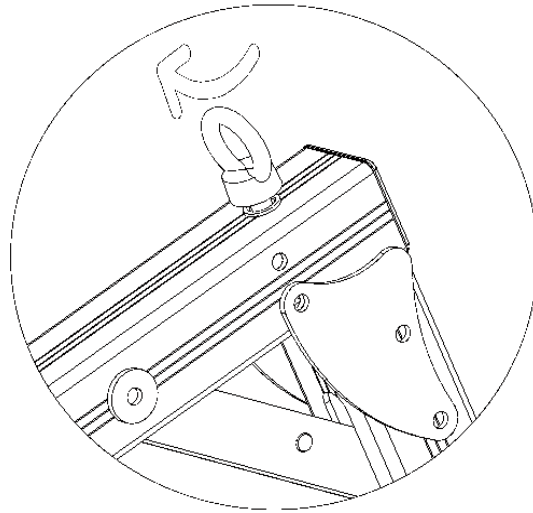

Screw the eye bolts into the threaded holes on top of the frame. Then run the ropes through the eye bolts.


12

Only for the STO-169225S

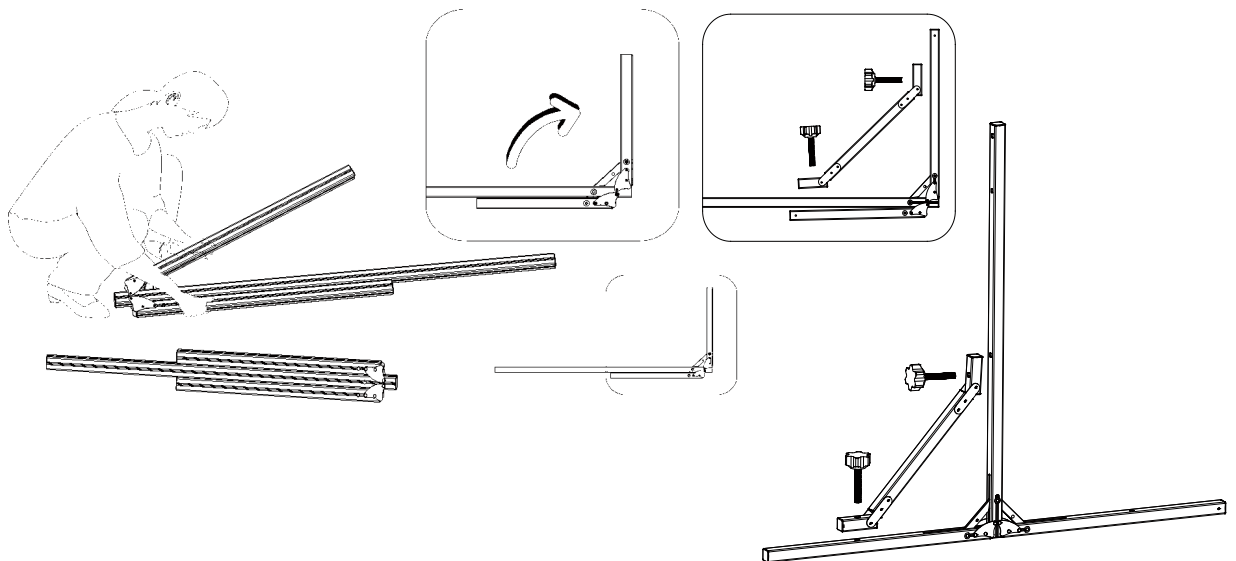


Remove the frame legs from the bag.

13

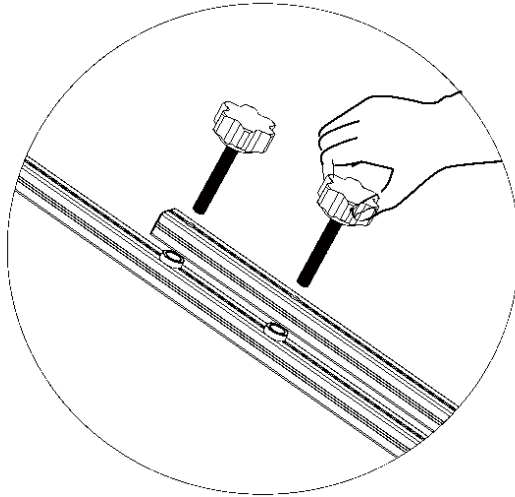


Secure the legs to the frame by fastening the knob screws into the threaded holes.

14

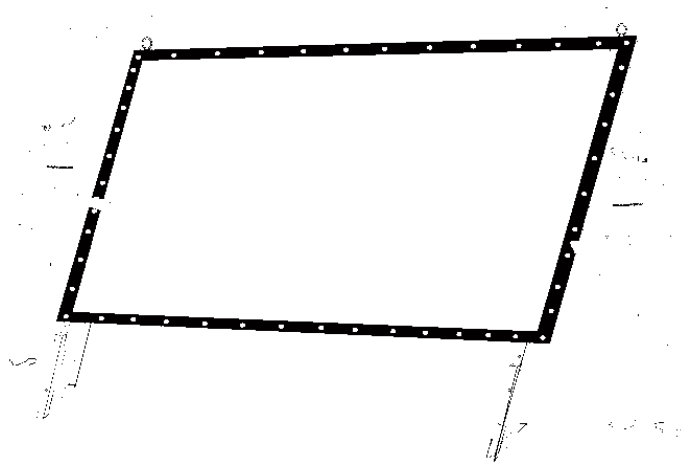


The screen is ready to stand. DO NOT use the screen when there is wind. The screen will act as a giant sail as wind is very powerful. It can damage the frame, surrounding property and even cause bodily harm. If the screen size is over 200", 2-3 people are recommended when lifting the screen up.

15

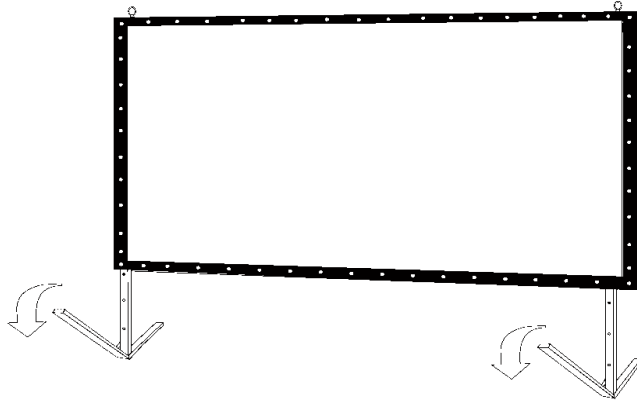

Lock the legs hinges after standing.

16

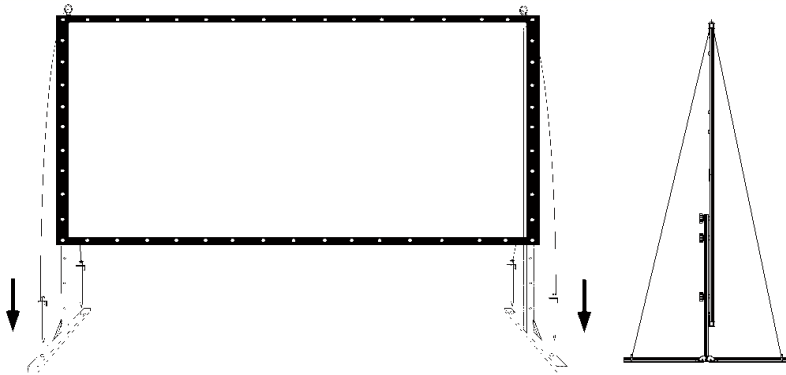

To secure the frame, place a stake into each hole located on the frame footing. If more support is needed, the stakes and rope can be placed at a greater distance and angle outside the frame. Tie the ropes from the eye bolts to the stakes to prevent the screen from tilting or falling. Pull and tighten the rope to help the screen stand upright.

17



Installation is complete.

Never leave the screen unattended.

Never leave the screen standing overnight.

Never leave the screen up permanently.


The screen should be taken down after each use.

IMPORTANT

PACKAGING YOUR SCREEN


THE SCREEN CAN BE DAMAGED WHEN TAKING IT DOWN AND BY
STORING IT INCORRECTLY.

1

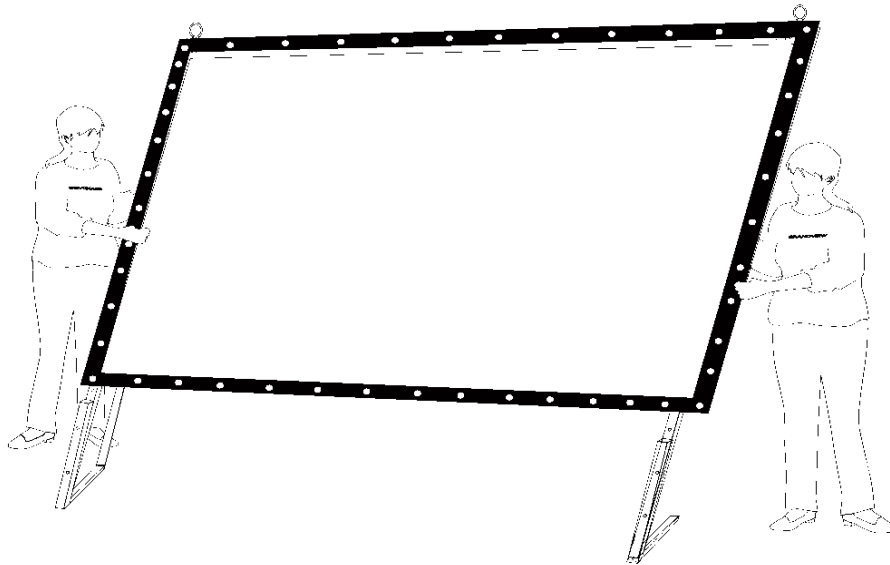


Remove the ropes and stakes. Unlock both of the back feet and lay the screen down.
Take off the legs.

②

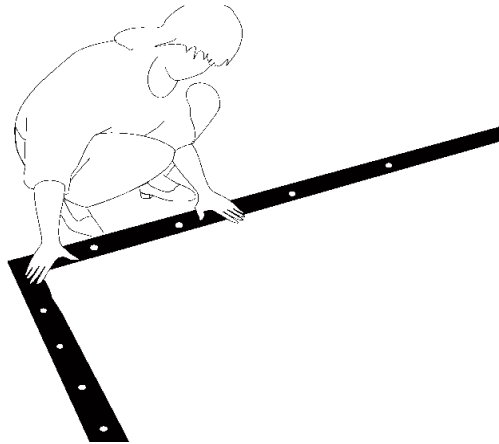


Begin anywhere and remove one snap at a time. Place both hands underneath the screen and lift up until the snap comes off. Do Not whip the screen material off of the frame. This can damage the snaps and the screen. If snaps are damaged, they can easily be replaced with a snap kit.

③

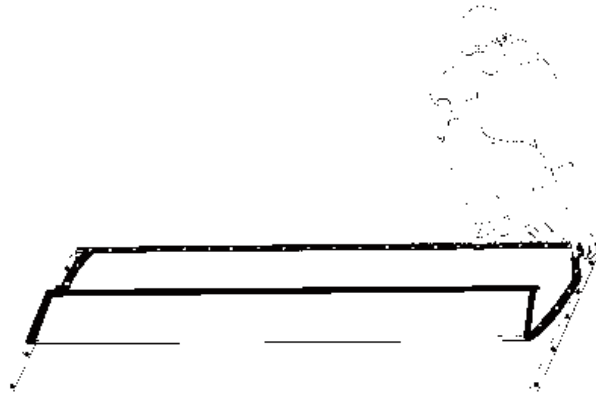


Fold the material corner to corner, making sure it is flat. On the next fold, stop before the pocket so the screen material is not near the snap. Do Not fold the pockets onto the viewing material as the snaps can puncture the screen material. Continue folding by stopping before the snaps and pockets.

④

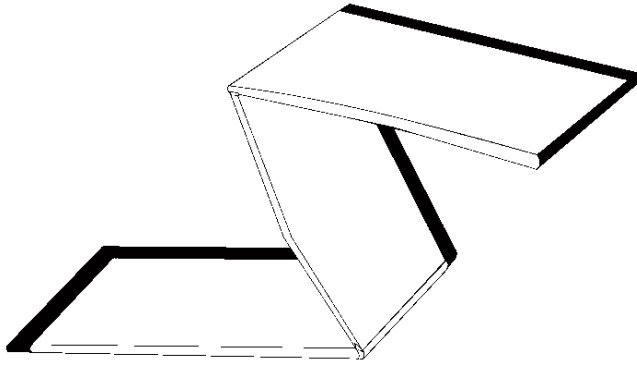


Fold the material in a Z shape.

⑤

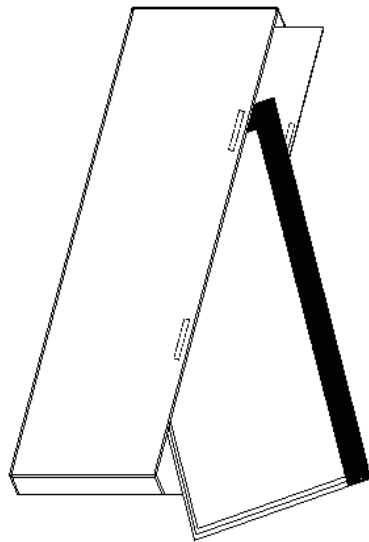


Put the material into the bag and set aside.

⑥

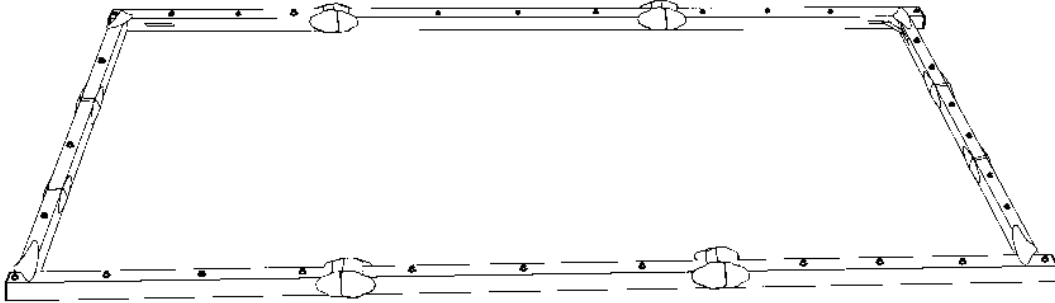


Remove the support bar if the screen has one.

⑦

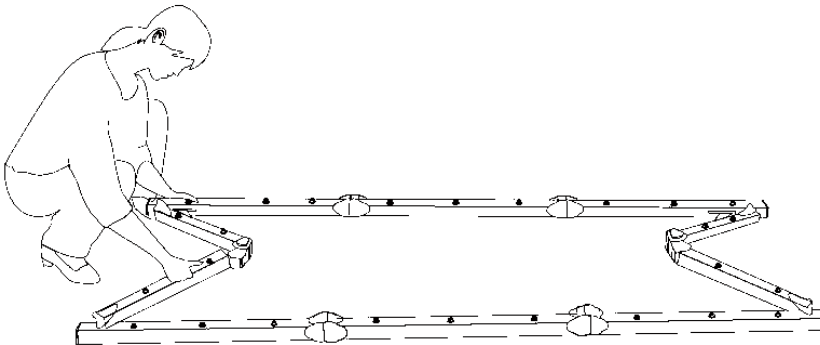


Unlock the corners and hinges and start collapsing the frame. Keep the frame close to the ground at all times. The weight of the frame or awkward pressure to the hinges and corners will cause damage.

⑧

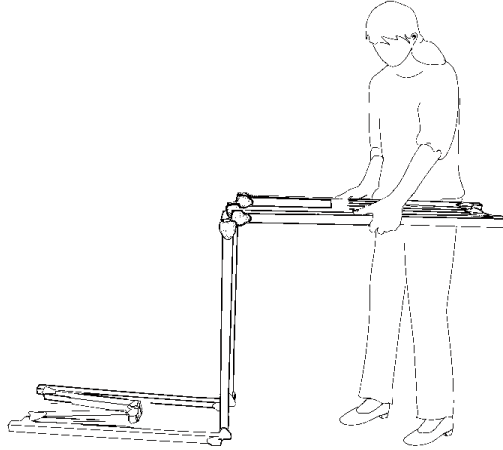

Unlock the hinges and gently fold the frame together.

⑨

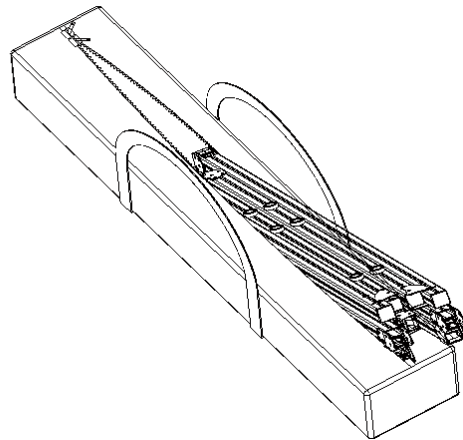

Put the frame and legs into the carrying bag first. Then put the stakes, ropes, eye bolts and knob screws inside the carrying bag. Then put the material protector, material and instruction manual on top. Zip the bag, prepare the handle, and store your screen in a clean, dry place.

Caution:

- Always position your screen horizontally on a stable and level surface.
- Do not hang or place anything on the screen when unfolded.
- Unfold the screen material on a clean, flat surface.
- Do not touch the screen surface.
- Do not draw on the screen surface.
- Keep folded when not in use.
- Check both the front and back of the screen for foreign material before folding it.
- Do not use the screen when it is windy. It can damage the frame and cause bodily harm.
- Never leave the screen unattended.
- Never leave the screen standing overnight.
- Never leave the screen up permanently.
- The screen should be taken down after each use.

Care and Cleaning:

- The new screen can be effectively cleaned with a soft cloth using mild soap and water.
- Do not use harsh detergents or chemicals to clean the screen; doing so may result in severe damage to the screen or frame.