

FS-FPTBL Vesta Fire Table

Locate the gas outlet close to the inside corner of the table nearest the Key Valve hole.

The gas source should be limited to 40k btu's.

If using natural gas, connect directly to the key valve and follow all instructions provided with the trough gas kit. A certified heating and plumbing contractor must install to assure safe operation.

If using propane, an air mixer must be installed between the flex line and T-burner that limits the flow to 40k btu's or less. Follow all instructions provided with the trough gas kit. A certified heating and plumbing contractor must install to assure safe operation.

