





Sinar BeanPro Moisture Analyser

- Fast accurate moisture results in 6 seconds
- Designed for Coffee displays both moisture and density results
- Portable rugged construction, light enough to carry with you. Comes in a carry case and battery powered
- Fully Automatic no charts, scales or thermometers required
- Easy to use Just pour in the sample press 2 buttons and the BeanPro gives you the information you need to make the right decisions
- Flexible can measure Green Beans, Roast Beans, Parchment and even Ground Coffee

Product Description

The Sinar BeanPro simultaneously measures the moisture content, density and temperature of a coffee sample in less than 6 seconds. It will measure whole beans or ground Coffee with the minimum of effort making it ideal for use next to a roaster to check green beans or freshly roast beans. It's also fully portable allowing you to take it where ever you need to measure Coffee moisture.

The Sinar BeanPro uses the latest technology so you can measure your Coffee samples with the minimum of preparation. Simply fill the hopper with whole beans, choose the type of Coffee you're measuring and the results are displayed in seconds. The Sinar BeanPro also displays the temperature and the density of the Coffee beans in g/l.

The Sinar BeanPro can store calibrations for up to 25 different Coffee types e.g. Green Whole Beans, Decaf Whole Green Beans etc. allowing it to be tailored to your exact needs. It's easy to use backlit alphanumeric display means that switching from measuring one commodity to another is as simple as choosing from a list.

You can also connect a printer (supplied separately) or link the BeanPro directly into your computer to store your results.

The Sinar BeanPro will revolutionise the way you measure your Coffee's moisture and density.

Typically 0.3 STD for %mc and 1.0 g/l STD for

Product Features

Accuracy:

density Repeatability: 0.05 to 0.15 STD for %mc Measurement Range: 1 to 35% mc dependant on application **Operating Environment:** 0 to 55 °C Dimensions: 325mm x 164mm x 120 mm Weight: 2.2 kg Power Supply: 4 x C size 1.5V Alkaline Batteries Sample Cell: 290ml Volume, 50 - 240g Printer Output: RS232C, 300 or 4800 baud Processor: Intel 8DC31 microprocessor 35K EPROM, 32K RAM Memory:



USER GUIDE Book 1. (Modes 0 to 1b).

Sinar Technology BeanPro Moisture Analyser. Model 6070-BeanPro.



DOC No: 6070-BeanPro DATE 08-06-12 ISS 2 For use with V7.7 software.



1.0 Introduction:

Thank you for choosing the SINAR TECHNOLOGY BeanPro.

The Sinar[™] 6070 BeanPro Moisture Analyser houses the latest moisture measuring technology in a compact, portable package. It has been designed to provide fast moisture results using whole crop samples. In addition to % moisture content, the BeanPro simultaneously measures and displays sample density in grams per litre and sample temperature.

The BeanPro is a battery powered moisture analyser with only one operator mode making the instrument extremely quick and easy to use.

The BeanPro can store up to twenty five different crop calibrations. Contact Sinar Technology or your Sinar agent if your calibration requirements change.

The RS232 port on the side of the instrument can transmit time, date, moisture and temperature data to a serial printer, data logger or PC. This data can be used to generate your own quality assurance files.



2.0 6070 BeanPro Display Layout.

0 Reference 0 Down Up Run F1 F2 F3 F4
F1 F2 F3 F4
I O MODE CLEAR ENTER

BeanPro front panel layout.

Key Pad Functions.

|--|

The "F" or function keys action the command shown in the display window above each function key.

The "MODE" key is used to step through the user modes, mode 0, 1 and 1b.




The "CLEAR" key is used to clear wrongly entered numerical data allowing you to start again.

ENTER

The "ENTER" key is used to enter all numerical data.



3.0 Mode 0, Display Description.

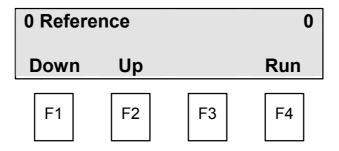

Mode 0 screen.

0 Reference.

Denotes that the 0 reference curve is currently selected. This curve is used when a capacitance, (code 0) reading is required for calibration purposes.

0

Shows the number of the selected mode. Press the MODE key to step through the modes.

Down/Up (F1 & F2).


Used to step through the crop calibrations (curves) installed in the BeanPro.

Run. (F4).

Used to take a moisture reading.



4.0 Mode 1, Display Description.

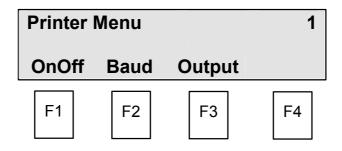

Mode 1 screen.

Printer Menu

Denotes: Printer Menu has been selected.

1

Shows the number of the selected mode. Press the MODE key to step through the modes.

OnOff (F1).

Used to switch the printer option on or off.

Baud (F2).


Selects the communication speed (300 or 4800) between the instrument and serial printer. The factory default setting is 300 baud.

Output (F3).

With the printer switched on, this feature allows a unique batch number to be printed each time a measurement is taken. Once set, the number increments by 1 for each subsequent test.



5.0 Mode 1b, Display Description.

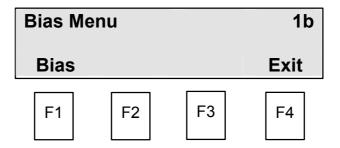

Mode 1b screen.

Bias Menu.

Denotes Bias mode has been selected.

1b

Shows the number of the selected Mode. Press the MODE key to step through the modes.

Bias (F1).

Used to alter the displayed moisture reading for a specific crop calibration.

Exit. (F4).

Used to exist and save the entered data.



Using your Bean-Pro Moisture Analyser.

6.0 System Power Up.

Your first power up.

Press the "I" key. The BeanPro powers up in mode 0 showing "**0 Reference**" in the display. Use the "**Up**" (**F2**) key to step through the crop calibrations.

Ongoing power up's

The Bean-Pro remembers the last selected crop calibration. On power up, the Bean-Pro returns to the previously selected calibration.

Always check the correct crop is selected before carrying out a test.

0 Refere	nce	0
Down	Up	Run

Mode 0 screen.

Warning – Do not rotate the measuring cell anti-clockwise while putting on or removing from the machine.

7.0 Selecting a Crop Calibration (Mode 0, F1 & F2).

Using the **Down** (**F1**) or **Up** (**F2**) key, step through the crop calibrations until the required calibration is displayed. One key press indexes one crop position.

1 Green	0	
Down	Up	Run
F1	F2	

Mode 0 screen.

The display shows the Green Coffee Bean calibration has been selected, and its curve number is 1.



8.0 Loading the sample.

The BeanPro is supplied with -

- 1off Loading Hopper
- 1off Beaker
- 1off Strike off blade

We strongly recommend the use of all of the above items to achieve the maximum accuracy from your machine.

Method:

Over fill the beaker with sample.

Strike off flush using the stainless steel wiper provided.



Place the *closed* loading hopper on the 3 support posts around the measuring bowl. Pour the sample from the beaker into the loading hopper.



Steady the hopper with one hand and give an upwards tap to the slider with the other. The slider will snap open dropping the sample into the measuring bowl.

Remove the hopper from the machine.




9.0 Taking a measurement. (Mode 0, F4).

With the sample loaded press and release the Run (F4) key.

1 Green	0			
Down	UP		Run	
F1	F2	F3	F4	
Mode 0 screen.				

The display will change showing the selected crop on the top line and Testing.... on the bottom.

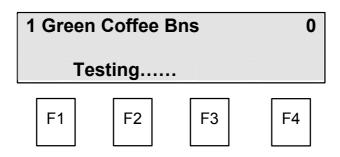

After approx 3 seconds the results are displayed.



To continue testing with the same crop remove the measuring bowl, empty and replace.

Refill the measuring bowl with sample, see Section 8.

Press and release the Run (F4) key.



10.0 Mode 1. Printer Menu.

This mode is used to set up a printer.

Printer	Menu		1
OnOff	Baud	Output	
F1	F2	F3	F4

By pressing **OnOff (F1)** the display changes to:

Printer Switched			On
On	Off		Exit
F1	F2	F3	F4

By selecting either **On (F1)** or **Off (F2)** the printer output can be turned on or off. Once selected press **Exit (F4)** to save and exit the screen.

By pressing **Baud (F2)** from the printer menu the display changes to:

Baud F	Rate =		300
300	4800		Exit
F1	F2	F3	F4

By selecting either **300 (F1)** or **4800 (F2)** the printer output speed can be selected. Once selected press **Exit (F4)** to save and exit the screen.



By pressing **Output (F3)** from the printer menu the display changes to:

Printer Output				
	Batch			
F1	F2	F3	F4	

By pressing Batch (F2) from the Printer Output menu the display changes to:

Select number		000 <u>1</u>	
•	►	-	+
F1	F2	F3	F4

F1 and F2 move the flashing curser to the left or right. – (F3) and +(F4) index the number above the flashing curser up or down.


When the correct number is displayed press the **ENTER** key to save and exit the screen.



11.0 Mode 1b, Bias menu.

The bias function is used if the moisture reading needs to be adjusted in line with the reference method or another piece of equipment. The bias should only be used if the readings are too high or too low by a constant amount over a varying moisture range.

The bias menu enables you to independently enter a bias or offset to each selected crop calibration.

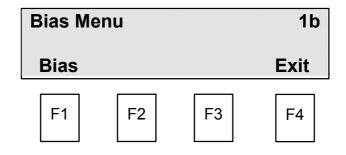

By pressing Bias (F1) the display changes to:-

1 Green Coffee			0.0%
Down	UP		Exit
F1	F2	F3	F4

The display shows that calibration number 1, Green Coffee has been selected for adjustment. This calibration selection is made in Mode 0. See Section 7, Selecting a calibration.

All bias values will be factory set to zero on shipment.

By pressing the **F1** or **F2** keys the required +ve or –ve bias value can be displayed. A positive value will increase the displayed moisture value, a negative value to reduce it. Each press of the key increases or decreases the value by 0.1%.

When the correct bias value is displayed, press the **Exit (F4)** key to save and return to Mode 1b.

Your bias value for the selected crop has now been stored.



12.0 Protected Modes.

When in Mode 1b, by pressing the MODE key again the display changes to.

Password Required for	
Higher Modes	
-	

Followed by:


Enter Pa		000	
•	►	-	+

The modes beyond this point are protected by a password. Please speak with your supervisor to gain access.

If the wrong password is entered the display changes to:

Sorry, wrong !		
_		

and then returns to the Mode 0 screen.

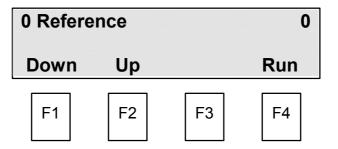



APPENDIX 1

REPLACEMENT OF BATTERIES

Battery Low indicator

Should the batteries begin to fail, a warning signal will appear when the instrument is switched on.

WARNING! Battery Low!!!

To replace the batteries:

- remove the sample cell from the instrument.
- unscrew the battery cover from the underside of the instrument.
- remove the old batteries and replace with four standard 1.5V alkaline batteries (Size C, MN 1400 or equivalent).

BE SURE TO INSERT BATTERIES THE CORRECT WAY ROUND - AS MARKED IN BATTERY BOX - replace the battery cover and screw into position.

Important! Always use alkaline batteries. If you are not going to use the moisture analyzer for some time, remove the batteries from the instrument.

If the optional (factory fitted) 1900-6358 12v Power Kit is fitted the correct DC voltage to operate the FP is provided from a 115v to 240v Power supply.



APPENDIX 2

Technical Specification

Dimensions:	325mm x 164mm x 120mm	
Weight:	2.1kg	
Construction:	HD Polyurethane Foam Injection Moulding	
Operating Environment:	5°C to 40° C; 41° to 104° F	
Storage Temperature:	-20° C to +55° C ; -4° F to 131° F	
Humidity:	Up to 95% non condensing	
Display:	Alphanumeric 2 x 20 characters	
Power Supply:	Four C size 1.5V alkaline batteries or Optional 12v Power Kit.	
Processor:	Intel 80C31 Microprocessor	
Memory:	32K. EPROM and 32K. RAM	
Password:	Factory default - 226	
Measurement Range:	1-40% moisture, wet basis (depending on application)	
Printer Output:	RS232C, 300 or 4800 Baud	
Accuracy:	Manufactured in accordance with ISO 7700/1, OIML International tolerances for Class 1 meters	
Weight balance:	Measures and corrects for weights between 115-240 grams	
Temperature Correction:	Thermistor sensor. The correction is software programmable	
Cell volume:	290 ml.	



APPENDIX 3

ERROR CODE SUMMARY

Error Code	Explanation	Recommended Action
Err.0	Sample weight too low	Use large sample (greater than 115g)
Err.1	Sample cell not correctly mounted	Remount the sample cell firmly on to the interface
Err.2	Capacitance reading is too high (over 100)	Check hardware. If necessary, scale down capacitance by changing byte 28
Err.3	Capacitance reading is too high at low moisture	Check hardware. If necessary, scale down capacitance by changing byte 28
Err.4	High moisture reading at low capacitance reading	Check hardware. If necessary, this can be rectified by shifting the calibration
Err.5	Capacitance reading is too low for the calibration curve (i.e. %MC would be negative)	Check hardware. Check calibration curve
Err.6	Communication error in RS232	Check cable and start again
batt	Battery low indicator	Replace the batteries



Brewing Gadgets General Trading LLC | P.O.Box 125813 Shop No.1, Building EMR 25 | Emarati Cluster, International City | Dubai, U.A.E. Phone: +971 4 447 4261 | Email: info@brewinggadgets.com | Website: www.brewinggadgets.com



Sinar Technology Unit 5 Camberley Business Centre, Bracebridge, Camberley, Surrey, England GU15 3DP. Tel +44 (0)208 328 0727 Fax +44 (0)1276 29941