 




4L EVAPORATIVE AIR COOLER

MODEL NO: PM 777

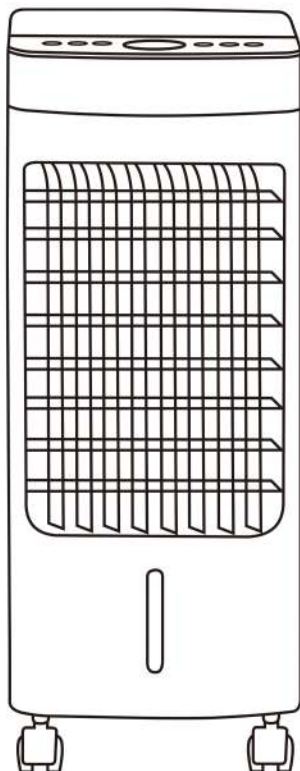

INSTRUCTION MANUAL

Thank you for purchasing the innovative PureMate 4L Evaporative Air Cooler PM 777. We wish you many years of healthy indoor air with this efficient and effective product.

 
SAFETY GUIDELINES

- ALWAYS use the appliance only on the voltage specified.
- NEVER immerse the product or power cable with water or other liquids.
- DO NOT leave the appliance unattended around children.
- DO NOT insert any objects or fingers into any openings.
- DO NOT use around heated surfaces, open flames, flammable substances or in direct sunlight.
- Please turn off and unplug the appliance before cleaning or maintenance.
- DO NOT operate if there are signs of damage to the cord, plug or appliance. Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Please Call Customer Service for assistance.
- NEVER tilt, move, or attempt to empty tank while it is operating. Ensure the air cooler is in an upright position.
- NEVER cover or restrict airflow to the air cooler whilst in use.
- Dispose of used water, this is NOT suitable for drinking.


- When the appliance is not in use for a prolonged period, please turn it off, unplug it, dry it, pack it well, and store it in dry cool place. Please ensure water tank is always emptied before storing the air cooler.
- DO NOT leave water in the unit when not in use. ENSURE fresh water is added every use.
- DO NOT run the cord under throw rugs, runners, or similar coverings. Arrange cord away from traffic in the area and where it will not be tripped over.
- DO NOT use the appliance for any other purpose than its intended use, as described in the manual.
- This air cooler is for indoor use only. DO NOT use outdoors.
- Avoid the use of extension cables to prevent risk of overheating and re risk.
- This air cooler may be utilized by children aged from 8 years and over and individuals with reduced physical, sensory or mental capabilities or lack of experience and knowledge HOW EVER they must have be supervised or instructed concerning use of the appliance in a safely and understand the hazards involved.
- This appliance is for domestic use only. It should not be used for commercial purposes.
- ENSURE to follow the cleaning process detailed by the manufacturer. DO NOT attempt to clean in any other way.

- DO NOT add any other liquid than water into the ice packs.
- Only fill the water tank with fresh water and-or ice cubes made with fresh water.
- Unplug the appliance when refilling and cleaning.
- In the rare occurrence the unit should malfunction, DO NOT attempt any repairs. All repairs are required to be taken out by a professional. Please contact PureMate Customer Services.
- When using ice packs, condensation may form on the surface of the unit. Ensure condensation is wiped to prevent slipping hazard.


COMPONENTS

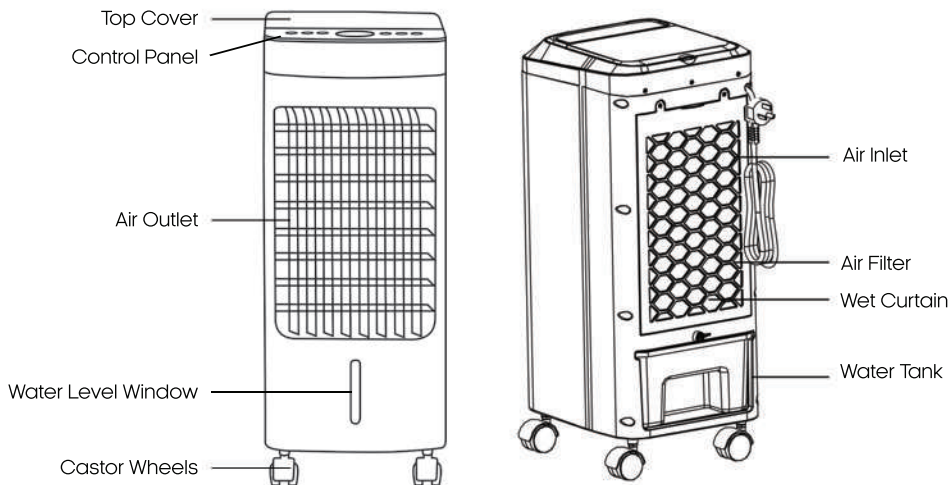

CONTROL PANEL

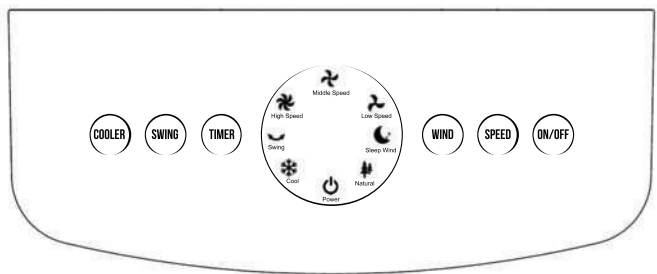 

REMOTE CONTROL

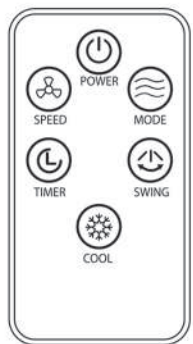 

OPERATING INSTRUCTIONS

Before using the air cooler make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline.

- Set all switches to OFF position, then insert the plug directly into a standard AC socket outlet. Be sure plug fits tightly into outlet.

POWER ON/OFF: Turns the air cooler power ON/OFF.

- Press the ON/OFF button. The device starts operating.
- Press ON/OFF again and the device will stop working.

MODE: Press to choose from 3 different breeze patterns:

- Normal: A continuous wind
- Natural: Nature Setting
- Sleep: Natural Wind Mode

SPEED MODE: When the wind speed is high, after running for 30 minutes in the high speed of natural wind, it will automatically switch to the medium speed, after 30 minutes then switch to low speed.

SPEED: Press to choose from 3 different breeze speeds:

- High
- Medium
- Low

TIMER: Press the timer button to activate the timer function. Each time the button is pressed the timer will be increased by 1 hour up to a maximum of 12 hours.

SWING: Press the swing button to activate the vertical louvers oscillation. Press again to stop the oscillation.

COOL: Press to activate the air cooling feature, reducing the surrounding air's temperature.

NOTE: The water tank must not be removed while the air cooling feature is activated.

COOLING MODE

For the cooling mode to function, the water tanks requires filling, and the ice packs freezing for enhanced cooling. Ensure fresh water is added to the water tank prior to every use.

ICE PACKS

- Add clean water to the ice packs and fill two thirds of the way.
- Put the ice packs into the freezer until completely frozen.
- Open the top cover and place the frozen ice packs into the compartment for enhanced cooling.

NOTE: The air cooler is supplied with two ice packs, the cooling effect can last for approximately four hours.

FILLING THE WATER TANK

- Turn off the air cooler and unplug from the power socket.
- Turn the water tank locking clip clockwise 90 degrees and gently pull the water tank out until it stops.
- Fill the water tank with fresh water to the maximum water level.
- Carefully push the water tank back into position and turn the water tank locking clip anti clockwise 90 degrees to secure the tank.

EMPTYING THE WATER TANK

- Turn off the air cooler and unplug from the power socket.
- Place the air cooler in a sink, bath tub or over a drain.
- Turn the water tank locking clip clockwise 90 degrees and gently pull the water tank out until it stops.
- Remove the plug located in the bottom of the water tank and drain.
- Reinsert the plug into the water tank and push the water tank back into position and turn the water tank locking clip anti clockwise 90 degrees to secure the tank.

CLEANING & MAINTENCE

- Your appliance must be switched OFF via the main power supply and unplugged before proceeding with any cleaning.
- To clean the exterior surfaces simply wipe over with a clean, dry soft cloth. Avoid all other types of detergents, cleaners, solvents that may contain chemicals, which could damage parts of the unit.
- Never use flammable or abrasive cleaning agents such as benzene or spirits to clean the appliance.
- Never immerse the appliance in water.
- Never spray the appliance with liquids or submerge it in water or any other liquid.
- Do not stick any foreign objects or your fingers inside the unit.

CLEANING THE AIR FILTER

- Turn off the air cooler and unplug from the power socket.
- Unscrew and remove the filter from the rear of the unit.
- Use a firm brush and/or vacuum nozzle to remove any dust or loose debris from the filter.
- Wash with a mild detergent and rinse with clean water.
- Ensure the filter is completely dry before installing and operating the unit.

CLEANING THE WATER CURTAIN

- Turn off the air cooler and unplug from the power socket.
- Unscrew and remove the filter from the rear of the unit.
- Remove the water Curtain.
- Rinse with clean tap water.

Avoid all other types of detergents, cleaners, solvents that may contain chemicals, which could damage parts of the unit.

CLEANING THE WATER TANK

The water tank should be cleaned regularly, every 2-3 weeks, to prevent the growth and build up of mould and bacteria.

- Turn off the air cooler and unplug from the power socket.
- Pull the water tank out until it stops.

- Dry the water tank with a clean soft cloth.
- Carefully push the water tank back into position and turn the water tank locking clip anti clockwise 90 degrees to secure the tank.

WARRANTY & SERVICE

Items purchased directly with PureMate, or one of our approved resellers, you will automatically register your warranty for 1 (ONE) year. You do not require to register again for your warranty. All warranties will execute our terms and conditions you will find these via our website at www.puremate.co.uk

SPECIFICATIONS

Model:	PM 777
Power supply:	220~240V 50Hz
Power Consumption:	65W
Water Tank Capacity:	4 litres
Wind Speed:	8.0 m/s
Evaporation Capacity:	500ml/hr
Noise Level:	<60dB
Net Dimensions:	29 x 24 x 60 cm
Net Weight:	4.7 kg
Certifications:	UKCA, CE, Rohs
Warranty:	1 Year

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection Point for the recycling of electrical and electronic equipment.

FIND US ONLINE



YouTube



4L EVAPORATIVE AIR COOLER | MODEL NO-PM 777

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK

© Copyright 2021