
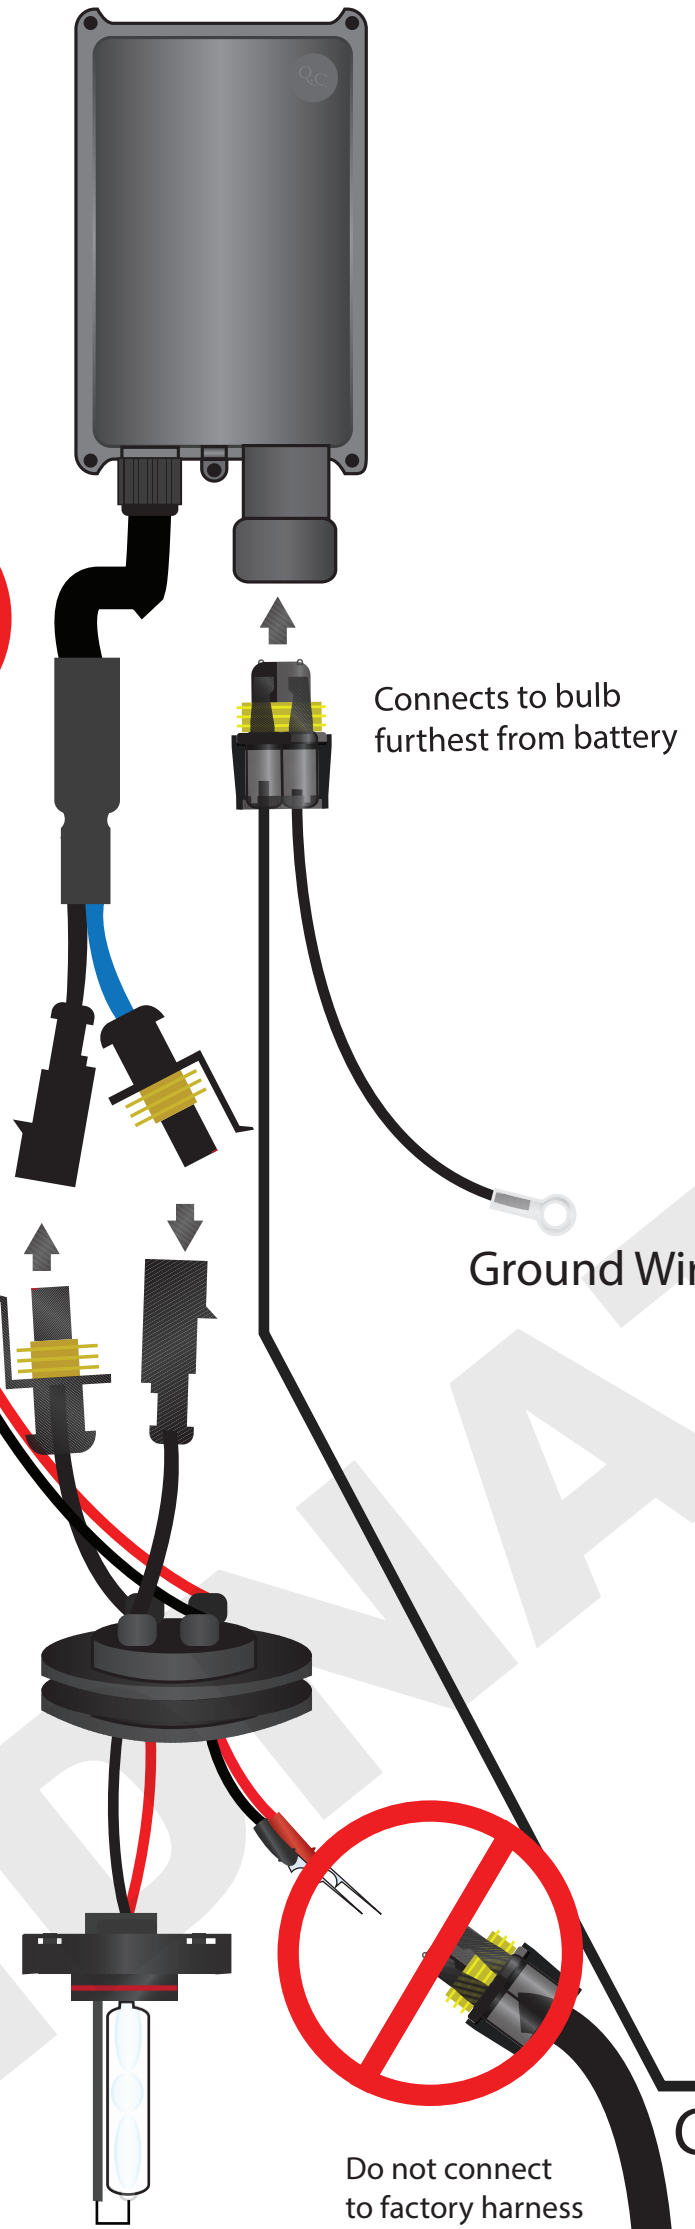


No connection required

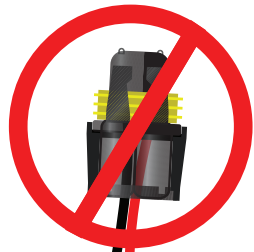

Connects to bulb furthest from battery

Ground Wire

Do not connect to factory harness to relay on side away from battery

Car Factory Harness

BATTERY

1. Connect to Battery

Ground Wire

Car Factory Harness

