 



Simply follow these four steps to manually install the software/firmware for your Asgard™ speaker, by using a USB memory stick.

Step 1) Copy the firmware file/s onto a freshly formatted USB memory stick (FAT32 formatted).



Step 2) Power ON the speaker. Once it is booted up, insert USB stick into speaker.

Step 3) Press and hold VOL+ and MUTE buttons simultaneously for 4-5 seconds until LEDs power OFF.
Now Speaker will reboot and install the Firmware.
During installation, all five LEDs will flash brightly.*
After 1-2 mins the speaker will reboot automatically.*

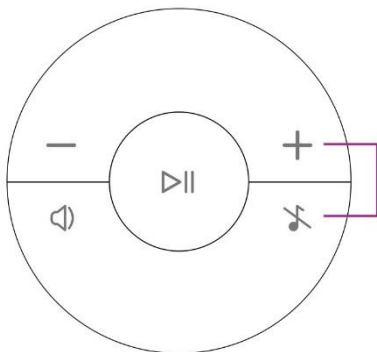

Step 4) When speaker has finished rebooting it needs to be reset and thereafter re-connected to your Wi-Fi network again. Reset is done by pressing and holding the Vol- and Vol+ buttons simultaneously for 4-5 seconds until speaker reboot.

*PS: If you has installed the "in shop DEMO Firmware", then speaker just need to be reset.
A speaker running the DEMO firmware cannot connect to a Wi-Fi Network.
(This is only for dealers who use the "in shop DEMO Firmware").*

*PS: If all 5 LEDs keep flashing (more than 4 minutes), then the speaker cannot read correctly from the USB stick. Please try to reformat the USB stick or try to use another USB stick.

For any further questions about Asgard Firmware Update, please contact your local dealer or help@clintdigital.com