



Watershot® PRO for iPhone®6

'On, In, Under Water - Capture it with Watershot'




Watershot Inc.
11211 Sorrento Valley Road, Suite O
San Diego, CA 92121

858.678.8552
support@watershot.com
www.watershot.com

1



2

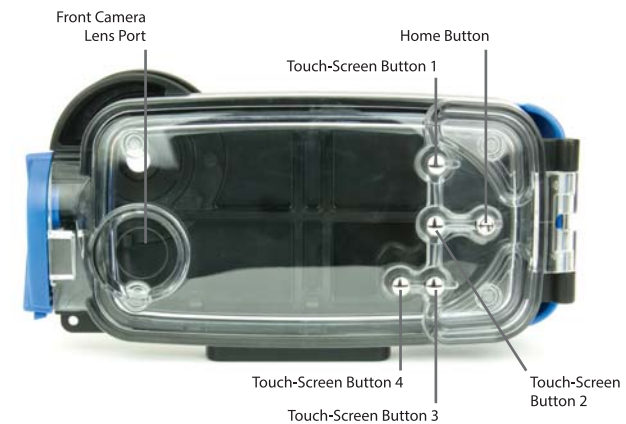

3

Introduction

Watershot Incorporated continues the company's water imaging legacy with the introduction of the purpose-built Camera Housing for the Apple iPhone 6 – designed and developed for the extreme abuses of water sports. This is no basic Housing, the Watershot PRO for iPhone is a multi-feature waterproof Housing specifically made to optimize photo and video capabilities for those who have traded their digital cameras for the simplicity of their smart phone. The unit comes complete with a glass Lens Port and black rubber light baffle, custom App for imaging optimization and social media sharing, lens and filter ready, with a smart, yet robust & simple mounting system. Able to withstand 60 meters of depth (195 feet), the iPhone is fully suspended within the Housing ensuring that the phone and screen are effectively shielded from wear, tear, shock and pressure. The Watershot PRO is a serious tool, yet seriously fun.

Go to www.watershot.com for more information, FAQ, instruction videos, tips & tricks, product accessories, etc.

4

Important Safety Instructions

1. Read and follow the instructions in this manual.
2. Perform recommended test and checks.
3. Do not use the Housing beyond the rated depth rating 60m/195ft
4. After each use the Housing should be closed shut, latched and soaked (20min in fresh water), micro fiber cloth dried, then air dried with the Housing open.
5. Always follow installation and removal process per the manufacturers instructions.
6. Replace o-ring(s) that are deformed, exhibit hairline cracks, stretch marks, wear marks or cuts.
7. Apply o-ring lubricant sparingly and only when necessary, a light, thin film is all that is required.
8. If cracks, deformation, or other damage is observed – DO NOT USE.
9. Keep away from heat sources.
10. Phone may overheat (and shut off) if installed in the Housing and exposed to prolonged direct sunlight.
11. Contains small parts which may be a choking hazard. Not suitable for children under 3 years old.
12. Watershot is not liable for damage to contents.
13. Desiccant pack is provided, use if lens fogging occurs (due to condensation within the Housing which may be caused by high relative humidity when loading your phone). Place the desiccant pack into the Housing (place pack flat in the front Housing between the ribs below the iPhone) and keep the Housing closed for at least 5 minutes before going into the water. Visit www.watershot.com for additional details and instructions for installing the desiccant into the Housing.



5

Initial Waterproof Confidence Test Instructions

Perform this confidence test prior to the 1st operational use of the Housing

1. Inspect the Watershot PRO for iPhone Housing and ensure it is contaminant free and appears in new condition.
2. Confirm that the o-ring(s) are in good condition. Replace o-ring(s) that are deformed, exhibit hairline cracks, stretch marks, wear marks or cuts.
3. Test Touch Screen Buttons. All buttons should return to original position after being depressed.
4. Open the Housing by sliding the Cam Latch Lock Button with your thumb and simultaneously rotating the Cam Latch 180 degrees, Counter Clockwise CCW to the OPEN position.
5. Place a tissue or piece of paper inside the Housing.
6. Close the Housing, ensuring that the Cam Latch is 'locked' to the CLOSED Position and that the Cam Latch Lock Button 'clicks' and 'pops' into the fully extended position.
7. Submerge the Housing in water for 5-10 minutes.
8. Remove the Housing, dry it, and then open it.
9. Check to ensure the tissue or paper is dry.
10. Do not use if water is found inside the Housing. Contact Watershot support.

It is the user's responsibility properly test, use, care for, and store the product.

6

Installing the iPhone

Prior to installing the iPhone, ensure that Safety and Initial Waterproof Testing Instructions have been read, understood and followed.



1. Open the Housing by sliding the Cam Latch Lock Button with your thumb and simultaneously rotating the Cam Latch 180 degrees, Counter Clockwise CCW to the OPEN position.




2. Place the iPhone into the Housing so that the phone camera lens aligns with the black rubber lens baffle on the Housing. The edges of the iPhone should rest securely within the black rubber vibration isolation bumpers.

7

Installing the iPhone (cont.)

3. Close the hinged clear back cover until the main body o-ring seal is fully seated into the Housing.

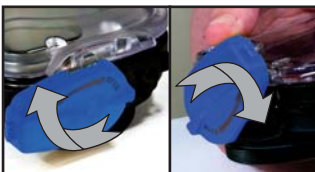

4. Rotate the Cam Latch 180 degrees, Clockwise CW, to the CLOSED Position and verify that the Cam Latch Lock Button 'clicks' and 'pops' into the fully locked position. A secondary tactile and visual verification, that the Cam Latch is CLOSED & LOCKED, can be achieved by very gently attempting to rotate the Cam Latch, when it is positioned in the CLOSED & LOCKED position, with the Cam Latch Lock Button fully extended into the locking hole.



5. Visually inspect the main body o-ring seal and ensure that you see even contact between the main body o-ring seal and the Housing around the full circumference of the Housing.

8

Changing or Removing Lens Ports on the Housing



1. Remove the Lens Port by firmly holding the Housing in one hand and grasping the diamond knurled outside edge of the Lens Port with the other hand. Rotate the Lens CCW (counter clockwise) until the Lens Port separates from the Lens Mount on the Housing.



2. After detaching the Lens Port from the Housing place it down on a smooth flat surface with the rear end up to avoid scratching the lens surface.

3. With the Lens Port removed, the PRO Housing is no longer waterproof. NEVER use a PRO Housing near the water when a Lens Port is not installed on the Housing.

9

Changing or Removing Lens Ports on the Housing (cont.)



4. Visually inspect the Lens Port prior to re-installing it onto the Housing. Inspect for damage to the screw threads and the two o-ring seals on the Lens Port. These two o-ring seals must be free from any kind of contamination such as hair, sand, dust and dirt. There should be no deformation, hairline

cracks, stretch marks, wear marks or cuts visible in the o-rings.

5. If any visible damage to either o-ring is discovered during inspection DO NOT USE. Replacement o-rings kits are available from Watershot. If any visible damage to the Lens Port threads is discovered DO NOT USE.

6. Lightly lubricate the two o-ring seals with a thin coat of silicone lubricant only when necessary. If the o-ring seals have a "shiny" appearance, there is no need to lubricate.

10

Changing or Removing Lens Ports on the Housing (cont.)



7. Visually inspect the Lens Port mating surfaces on the Housing prior to installing the Lens Port. Inspect for damage to the screw threads and the mating surfaces where the Lens Port o-rings contact. These surfaces must be free from any kind of contamination such as hair, sand, dust and dirt. If any visible damage to the Lens Port threads or mating surfaces is discovered DO NOT USE.

8. To re-install the Lens Port onto the PRO Housing, firmly hold the Housing in one hand and grasp the diamond knurled outside edge of the Lens Port with the other hand. Align the threads of the Lens Port with the threads on the Housing. Rotate the Lens Port CW (clockwise) until the Lens Port stops - DO NOT OVERTIGHTEN, DO NOT USE ANY TOOL TO TIGHTEN

9. Repeat the Initial Waterproof Test Instructions prior to using the Housing

11




12

Watershot APP Installation Instructions

13

1. Download the "Watershot for iPhone" App from the App Store or iTunes.
2. Install the App onto your iPhone.
3. Drag the Watershot for iPhone App onto your iPhone "HOME" Screen into the bottom right position (see below).

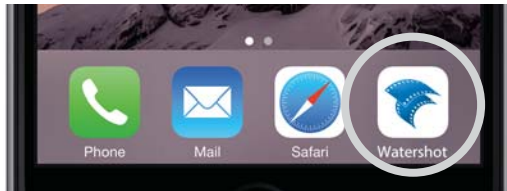


For more details on installing and using the App, go to www.watershot.com for additional instructions and online tutorials.

Using the Watershot PRO for iPhone

14

1. Prior to installing an iPhone into the Housing, change the General Setting on the iPhone so that the "Auto-Lock" feature is set to "Never".
2. Turn on, then install your iPhone into the Housing per the installation instructions.
3. Press the "HOME" Button.
4. Press "Touch Screen Button 1" to open the Watershot for iPhone App (App icon must be placed in proper location on your iPhone HOME Screen). This will open the App.
5. Once the App is loaded, you will be in "CAMERA MODE."

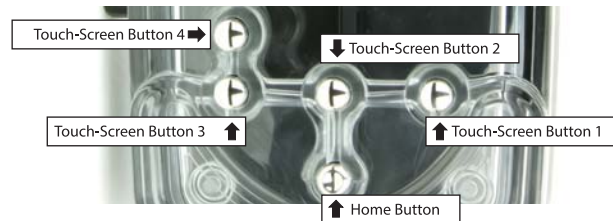

Using the Watershot PRO for iPhone (cont)

15

While in CAMERA MODE:

1. Press 'Touch Screen Button 1' to toggle between PHOTO and VIDEO MODES.
2. Press 'Touch Screen Button 2' to take a picture when in PHOTO MODE (or start/stop recording if in VIDEO MODE).
3. Press 'Touch Screen Button 3' to switch to "PLAYBACK MODE."
4. Press 'Touch Screen Button 4' to turn ON/OFF the focus lock feature (only functions in PHOTO MODE).
5. Hold Down 'Touch Screen Button 1' to turn ON/OFF the compass feature.
6. Hold Down 'Touch Screen Button 3' to open menu for changing the settings and the operating features within CAMERA MODE.
7. Hold Down 'Touch Screen Button 2' to place the App in SLEEP MODE.

Using the Watershot PRO for iPhone (cont)

16

While in PLAYBACK Mode:

1. Press 'Touch Screen Button 1' to scroll FORWARD thru the recorded photos/videos.
2. Press 'Touch Screen Button 2' to scroll BACKWARD thru the recorded photos/videos.
3. Press 'Touch Screen Button 3' to switch to "CAMERA MODE."
4. Hold Down 'Touch Screen Button 3' to OPEN the menu for posting images & videos to social media sites (Facebook, Twitter, etc.)
5. Press 'Touch Screen Button 4' to play the video displayed on the screen

Note: Additional App features may be accessed when the iPhone is not in the Housing. Press the Watershot Film Wave Logo to access features such as: Tutorials, Action Camera Settings, Album, Services, and Info. Visit www.watershot.com to view online tutorials with details about how to utilize all the App features and tools.

WARRANTY

17

Watershot Inc. ("Company") warranty obligations for the Company product(s) you have purchased ("Product") are limited to the terms set forth in this document as well those set forth in the Warranty section of the company website if published. Company warrants: (i) if the Guidelines for Appropriate Use (GAU) are followed the Product will perform substantially in accordance to the specifications furnished by Company; and further warrants: (ii) the Product against substantial defects in materials and workmanship under normal use for a period one (1) year from the date of original purchase ("Limited Warranty"). This limited warranty is non-transferable and covers only the original end purchaser. An original or copy of the sales receipt from the original sales retailer or Company website and warranty card on file with Watershot is required for one year coverage. This limited warranty does not cover products purchased through non-authorized dealers and/or online auction websites. Non-authorized dealer receipts and/or online sales auction confirmations are NOT accepted for warranty verification. Warranty claims must be made directly to the Company. No warranty either expressed or implied will be extended to iDivesite or iPix camera Housing s purchased either inside or outside the United States and its territories.

Exclusions and Limitations

18

Company's limited warranty applies only to the Product. The warranty does not apply to any non-Company product, even if packaged or sold with the Product. This warranty applies only to the normal use of the Product. This warranty does not apply to damage caused by accident, abuse, misuse, force majeure, or modification of the Product.

Sole and Exclusive Remedy

Your sole and exclusive remedy for a breach of this limited warranty, and Company's sole and entire liability is, at Company's option, to repair or replace the defective Product or refund the purchase price of the defective Product within thirty (30) calendar days of the date of purchase. Repair or replacement (including parts, labor and shipping costs) shall be made at Company's expense. Company reserves the right to send you a replacement product that is the same or of a similar style or an equivalent substitute. Replacement products will be furnished only on an exchange basis. Replacement products are warranted as above for the remainder of the original applicable Product warranty period.

Warranty Disclaimers

19

EXCEPT AS EXPRESSLY SET FORTH ABOVE IN THIS LIMITED WARRANTY, THE PRODUCT IS PROVIDED ON AN "AS IS" BASIS AND THE COMPANY MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES TO THE EXTENT PERMITTED BY LAW AND SPECIFICALLY DISCLAIMS AND EXCLUDES ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF SUCH DISCLAIMER OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF ANY SUCH IMPLIED WARRANTIES IS LIMITED TO THE DURATIONS SET FORTH IN THIS LIMITED WARRANTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

Limitation of Liability

20

IN NO EVENT SHALL COMPANY, ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES ARISING OUT OF THE USE OF THE PRODUCT, INCLUDING, WITHOUT LIMITATION, PROPERTY DAMAGE, LOSS OF VALUE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, OR LOSS OF USE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, EVEN IF COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. COMPANY HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE IN THE PRODUCTS, INCLUDING, WITHOUT LIMITATION, LAPTOPS, CELLULAR PHONES, OR OTHER HANDHELD DEVICES, OR ANY LOSS OF DATA CONTAINED IN THE FOREGOING DEVICES, ETC. NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT, TORT (INCLUDING NEGLIGENCE OR OTHERWISE), THE ENTIRE LIABILITY OF COMPANY AND ANY OF ITS DISTRIBUTORS AND/OR SUPPLIERS SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Obtaining Warranty Service

21

If you wish to make a claim under this warranty with respect to the Product, please e-mail support@watershot.com with the following information:

1. Attach photocopy of original purchase receipt or packaging slip.
2. Provide product SKU.
3. Provide purchase date.
4. Brief description of problem (under 500 words)
5. A telephone number and e-mail address at which you can be reached during normal business hours.
6. All of the above information is required before a warranty claim will be accepted. Once Company validates your claim, we will issue you an RMA (Returned Merchandise Authorization) receipt number and shipping information from support@watershot.com.



22



Watershot Resources

Copyright Notice

This owner's manual is copyrighted, all rights reserved. It may not, in whole or in part, be copied, photocopied, reproduced, translated, or formed into any electronic format without prior consent in writing. Watershot and the Film Wave logo are the registered trademark of Watershot Inc.. Apple, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Watershot products are protected by Pending US Patents.

INTENTIONALLY LEFT BLANK

INTENTIONALLY LEFT BLANK