



Watershot SPLASH for iPhone® 6

'On, In, Under Water - Capture it with Watershot'




Watershot Inc.
11211 Sorrento Valley Road, Suite O
San Diego, CA 92121

858.678.8552
support@watershot.com
www.watershot.com

1

2

3

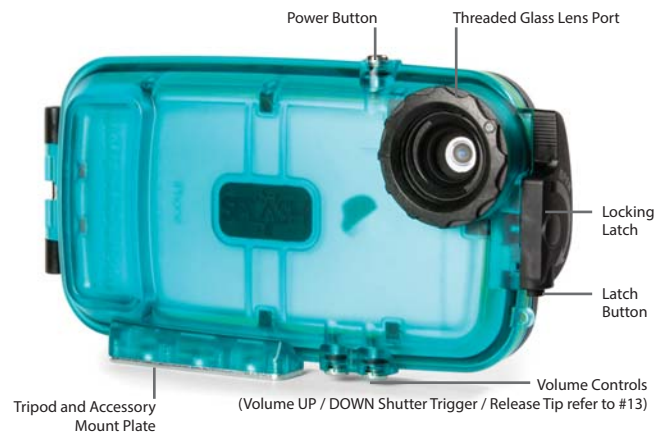

Introduction

Watershot Incorporated, expands the company's water imaging legacy with the introduction of a full-day-use waterproof Housing for the iPhone. This new concept was designed and developed for capturing memories in and on any of these favorite aquatic action and activity environments: arroyo, beach, bayou, bight, brook, bay, billabong, boil, basin, barachois, canal, channel, cove, creek, delta, estuary, fjord, firch, gulf, harbor, headland, inlet, lake, lagoon, loch, marsh, moat, ocean, pond, pool, reservoir, river, spring, sea, slough, swamp, sound, strait, tide pool, tributary, waterpark, waterfall, wetland, waterway, wash, or vernal pool, just to name a few. The Watershot Splash affords the added flexibility of allowing complete touch screen access to all of your iPhone apps on and out of the water. There's no longer a need to remove your iPhone from the Housing and no longer a requirement to download a Watershot App to your iPhone. Able to withstand 10 meters of depth (33 feet), the iPhone is fully suspended within the Housing ensuring that the phone is shielded from wear, tear, shock, and pressure. The Watershot Splash is an essential tool and genuinely fun.

Go to www.watershot.com for more information, FAQ, instruction videos, tips & tricks, product accessories, etc.

4

Important Safety Instructions

1. Read and follow the instructions in this manual.
2. Perform recommended test and checks.
3. Do not use the Housing beyond the rated depth rating 10m/33ft
4. After each use the Housing should be closed shut, latched and soaked (20min in fresh water), micro fiber cloth dried, then air dried with the Housing open.
5. Always follow installation and removal process per the manufacturers instructions.
6. Replace o-ring(s) that are deformed, exhibit hairline cracks, stretch marks, wear marks or cut.
7. If cracks, deformation, or other damage is observed - DO NOT USE.
8. Keep away from heat sources.
9. Phone may overheat (and shut off) if installed in the Housing and exposed to prolonged direct sun exposure.
10. Contains small parts which may be a choking hazard. Not suitable for children under 3 years old.
11. Watershot is not liable for damage to contents.
12. A desiccant strip is provided, use it if lens fogging occurs (due to condensation within the Housing which may be caused by high relative humidity when loading your iPhone). Place the desiccant strip into the Housing (place a desiccant strip flat in the front Housing between the ribs below the iPhone) and keep the Housing closed for at least 5 minutes before going into the water. Visit www.watershot.com for additional details and instructions for installing the desiccant strip into the Housing.
13. Protect the touch screen membrane from exposure to excessive force, sharp objects, and direct impact.



5

Initial Waterproof Test Instructions

Perform this test process prior to use.

Perform this confidence test prior to the 1st operational use of the Housing

1. Inspect the Splash for iPhone Housing and ensure it is contaminant free and appears in new condition.
2. Confirm that the o-ring(s) are in good condition. Replace o-ring(s) that are deformed, exhibit hairline cracks, stretch marks, wear marks or cuts.
3. Test the Volume Buttons. Each Volume Button should return to its original position after being depressed and released.
4. Open Housing by pressing the lock button and rotating the cam latch to the open position.
5. Place the replica iPhone (provided with your unit) and a small piece of tissue inside the Housing.
6. Close the Housing, ensuring that the latch fully closes and locks.
7. Submerge the Housing in water for 5-10 minutes.
8. Remove the Housing from the water and then thoroughly dry the entire Housing with a soft towel before opening it.
9. Check to ensure the tissue or paper is dry.
10. DO NOT USE if there is any indication of water intrusion into the Housing. Contact Watershot Support as soon as possible for assistance.

It is the user's responsibility properly test, use, care for, and store the product.

6

Installing the iPhone

Prior to installing the iPhone, ensure that Safety and Initial Waterproof Testing Instructions have been read, understood and followed.



1. Open the Housing by pushing the Latch Locking Button with your thumb and simultaneously rotating the Latch 90 degrees, Clockwise CW to the OPEN position.
2. Place the iPhone into the Housing so that the iPhone camera lens aligns with the black rubberized lens shroud on the Housing. The edges of the iPhone should rest securely within the black rubber vibration isolation bumpers.

7

Installing the iPhone (cont.)




Note: After closing the Housing a small, isolated pocket of air will be trapped between the inside surface of the touch screen membrane on the Housing and the touch screen on the iPhone.

3. Close the hinged black back cover until the protruding tab engages with the cam latch.
4. Swivel the latch closed (so that it hooks onto the lid) and press until the latch snaps closed and the lock slides to the "locked" position.
5. Visually inspect the main body o-ring seal and ensure that you see even contact between the main body o-ring seal and the Housing around the full circumference of the Housing.

8

Purge & Vent Excess Air from the Housing

To Purge & Vent the trapped air between the touch screen membrane on the Housing and the touch screen on the iPhone, simply "burp" the housing by following these two simple steps: (No "Burping" Tip refer to #13)

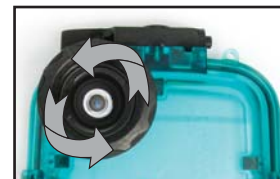

1. Remove the Lens Port by firmly holding the Housing in one hand and grasping the outside edge of the Lens Port with the other hand. Rotate the lens CCW (counter clockwise) 120 degrees until the "O" on the Lens Port aligns with the "—" on the Housing. In this position, the Lens Port is free to be removed. Pull the Lens Port away from the Housing to remove.
2. Reinstall the Lens Port while placing the palm of your hand flush up against the outside surface of the touch screen membrane. This will prevent air from being trapped between the touch screen membrane and the touch screen on the iPhone.

9

Changing or Removing Lens Ports on the Housing

10



1. Remove the Lens Port by firmly holding the Housing in one hand and grasping the outside edge of the Lens Port with the other hand. Rotate the lens CCW (counter clockwise) 120 degrees until the "O" on the Lens Port aligns with the "—" on the Housing. In this position, the Lens Port is free to be removed. Pull the Lens Port away from the Housing to remove.
2. Included are two Lens Ports Wide Angle and Flat. A Lens Port must be installed on the Housing for the Housing to be waterproof.

Changing or Removing Lens Ports on the Housing (cont.)

11



3. With the Lens Port removed, the Splash Housing is no longer waterproof. NEVER use a Splash Housing near the water when a Lens Port is not installed on the Housing.
4. Visually inspect the Lens Port prior to re-installing it onto the Housing. Inspect for damage to the mount and the o-ring seal on the Lens Port. The o-ring seal must be free from any kind of contamination such as hair, sand, dust and dirt. There should be no deformation, hairline cracks, stretch marks, wear marks or cuts visible in the o-rings.
5. If any visible damage to the o-ring is discovered during inspection DO NOT USE. Replacement o-ring kits are available from Watershot. If any visible damage to the Lens Port threads is discovered DO NOT USE.
6. Lightly lubricate the o-ring seal with a thin coat of silicone lubricant only when necessary. If the o-ring seal has a "shiny" appearance, there is no need to lubricate.

Changing or Removing Lens Ports on the Housing (cont.)

12



7. Visually inspect the Lens Port mating surfaces on the Housing prior to installing the Lens Port. Inspect for damage to the mount and the mating surfaces where the Lens Port o-rings contact. These surfaces must be free from any kind of contamination such as hair, sand, dust and dirt. If any visible damage to the Lens Port threads or mating surfaces is discovered DO NOT USE.
8. To re-install the Lens Port onto the Splash Housing, firmly hold the Housing in one hand and grasp the outside edge of the Lens port in the other hand. Align the "O" on the Lens Port with the "—" on the Housing, then press the Lens Port onto the Housing to engage the o-ring. Rotate the Lens Port CW (clockwise) 120 degrees until the Lens Port stops and the "—" on the Housing aligns with the "—" on the Lens Port. DO NOT OVERTIGHTEN, DO NOT USE ANY TOOL TO TIGHTEN.
9. Repeat the Initial Waterproof Test Instructions prior to using the Housing.

Using the Splash for iPhone

13

1. The Splash Housing allows access to the iPhones HOME Button, Power Button, Volume Control Buttons, front and rear facing cameras and touch screen.
2. Install your iPhone into the Housing per the provided installation instructions.
3. The Splash Housing features a touch screen membrane that allows for easy use of your iPhones touch screen around water. Keep in mind that the iPhones touch screen responds to the conductive physical properties of your finger touching the screen. Likewise the conductive physical properties of water work against the ability of your finger to transfer its conductive physical properties to the iPhones touch screen when you have your device submerged in water.

Tip: Selecting the Camera app on the iPhone automatically configures the Shutter Trigger / Release feature on the Volume UP / DOWN Control Push Buttons.

Tip: Not "Burping" the Housing through the Lens Port, may allow just enough air gap for the touch screen to work just a few feet underwater.

Note: Due to the robust waterproof sealing of the Watershot Splash Housing, sound will be muffled when making phone calls while the phone is inside the Housing. We recommend using speaker mode to improve sound quality.

WARRANTY

14

Watershot Inc. ("Company") warranty obligations for the Company product(s) you have purchased ("Product") are limited to the terms set forth in this document as well those set forth in the Warranty section of the company website if published. Company warrants: (i) if the Guidelines for Appropriate Use (GAU) are followed the Product will perform substantially in accordance to the specifications furnished by Company; and further warrants: (ii) the Product against substantial defects in materials and workmanship under normal use for a period one (1) year from the date of original purchase ("Limited Warranty"). This limited warranty is non-transferable and covers only the original end purchaser. An original or copy of the sales receipt from the original sales retailer or Company website and warranty card on file with Watershot is required for one year coverage. This limited warranty does not cover products purchased through non-authorized dealers and/or online auction websites. Non-authorized dealer receipts and/or online sales auction confirmations are NOT accepted for warranty verification. Warranty claims must be made directly to the Company. No warranty either expressed or implied will be extended to iDivesite or iPix camera Housings purchased either inside or outside the United States and its territories.

Exclusions and Limitations

15

Company's limited warranty applies only to the Product. The warranty does not apply to any non-Company product, even if packaged or sold with the Product. This warranty applies only to the normal use of the Product. This warranty does not apply to damage caused by accident, abuse, misuse, force majeure, or modification of the Product.

Sole and Exclusive Remedy

Your sole and exclusive remedy for a breach of this limited warranty, and Company's sole and entire liability is, at Company's option, to repair or replace the defective Product or refund the purchase price of the defective Product within thirty (30) calendar days of the date of purchase. Repair or replacement (including parts, labor and shipping costs) shall be made at Company's expense. Company reserves the right to send you a replacement product that is the same or of a similar style or a equivalent substitute. Replacement products will be furnished only on an exchange basis. Replacement products are warranted as above for the remainder of the original applicable Product warranty period.

Warranty Disclaimers

16

EXCEPT AS EXPRESSLY SET FORTH ABOVE IN THIS LIMITED WARRANTY, THE PRODUCT IS PROVIDED ON AN "AS IS" BASIS AND THE COMPANY MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES TO THE EXTENT PERMITTED BY LAW AND SPECIFICALLY DISCLAIMS AND EXCLUDES ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF SUCH DISCLAIMER OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF ANY SUCH IMPLIED WARRANTIES IS LIMITED TO THE DURATIONS SET FORTH IN THIS LIMITED WARRANTY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, SO SUCH LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION.

Limitation of Liability

17


IN NO EVENT SHALL COMPANY, ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES ARISING OUT OF THE USE OF THE PRODUCT, INCLUDING, WITHOUT LIMITATION, PROPERTY DAMAGE, LOSS OF VALUE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, OR LOSS OF USE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, EVEN IF COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. COMPANY HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE IN THE PRODUCTS, INCLUDING, WITHOUT LIMITATION, LAPTOPS, CELLULAR PHONES, OR OTHER HANDHELD DEVICES, OR ANY LOSS OF DATA CONTAINED IN THE FOREGOING DEVICES, ETC. NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT, TORT (INCLUDING NEGLIGENCE OR OTHERWISE), THE ENTIRE LIABILITY OF COMPANY AND ANY OF ITS DISTRIBUTORS AND/OR SUPPLIERS SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Obtaining Warranty Service

18

If you wish to make a claim under this warranty with respect to the Product, please e-mail support@watershot.com with the following information:

1. Attach photocopy of original purchase receipt or packaging slip.
2. Provide product SKU.
3. Provide purchase date.
4. Brief description of problem (under 500 words)
5. A telephone number and e-mail address at which you can be reached during normal business hours.
6. All of the above information is required before a warranty claim will be accepted. Once Company validates your claim, we will issue you an RMA (Returned Merchandise Authorization) receipt number and shipping information from support@watershot.com.

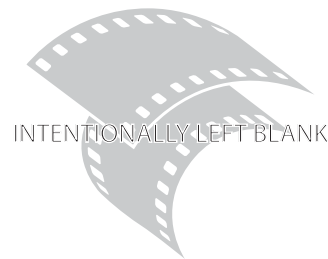


19

INTENTIONALLY LEFT BLANK



20

INTENTIONALLY LEFT BLANK

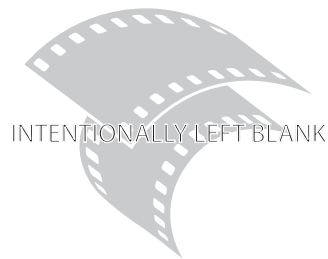

21

INTENTIONALLY LEFT BLANK



22

INTENTIONALLY LEFT BLANK



23

INTENTIONALLY LEFT BLANK



24



Watershot Resources

Copyright Notice

This owner's manual is copyrighted, all rights reserved. It may not, in whole or in part, be copied, photocopied, reproduced, translated, or formed into any electronic format without prior consent in writing. Watershot and the Film Wave logo are the registered trademark of Watershot Inc. Apple, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Watershot products are protected by Pending US Patents.