


M1 HIGH-FIDELITY MODULATION MACHINE

DEFAULT PRESETS


BANK A, PRESET 1 (RED)

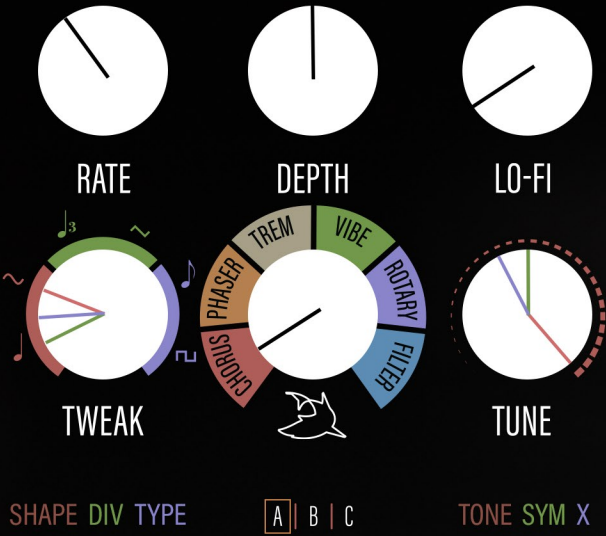

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - Min | Drive - Min | Space - 9 | Age - 10 | Noise - Min | Warble - 9
Settings are in clock format.


BANK A, PRESET 2 (GREEN)

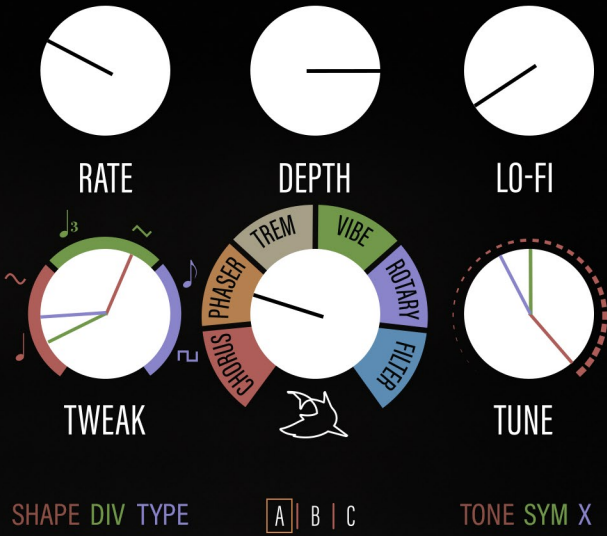

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - 11 | Drive - Noon | Space - 1 | Age - Noon | Noise - Min | Warble - 10
Settings are in clock format.

BANK A, PRESET 3 (BLUE)

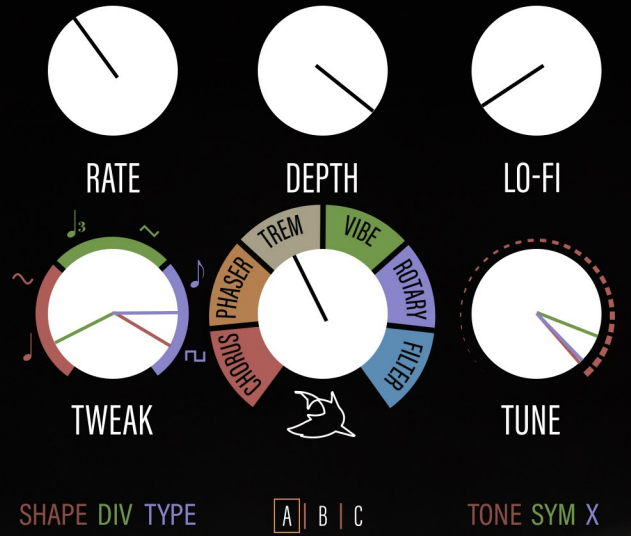

Output volume adjust: Min

Increasing the Lo-Fi knob will introduce the following settings:
Env - 1 | Drive - Min | Space - 1 | Age - 1 | Noise - 8 | Warble - 11
Settings are in clock format.


BANK B, PRESET 1 (RED)



Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - Min | Drive - 8 | Space - 8 | Age - Noon | Noise - Min | Warble - Noon
Settings are in clock format.


BANK B, PRESET 2 (GREEN)

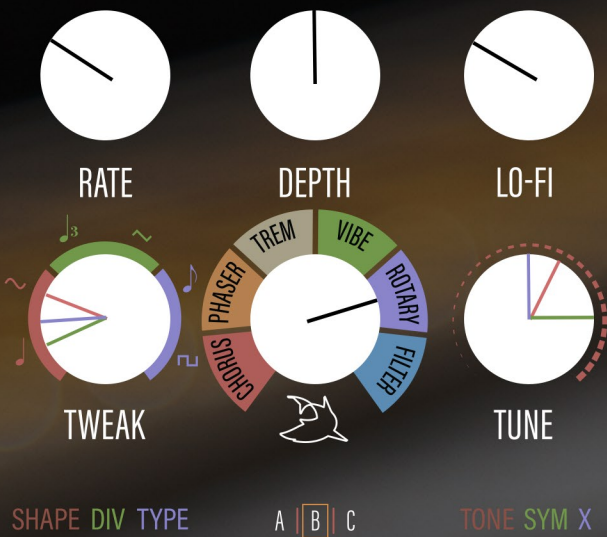

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - Min | Drive - 1 | Space - Noon | Age - 2 | Noise - Min | Warble - Min
Settings are in clock format.


BANK B, PRESET 3 (BLUE)

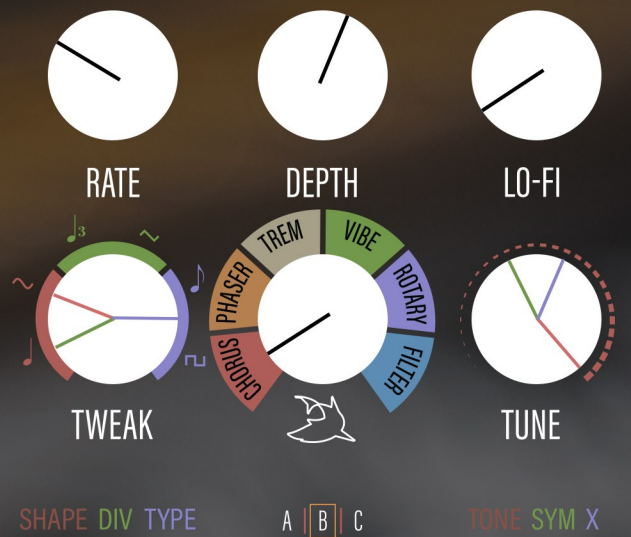

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - 10 | Drive - Min | Space - 11 | Age - 1 | Noise - 8 | Warble - Min
Settings are in clock format.


BANK C, PRESET 1 (RED)

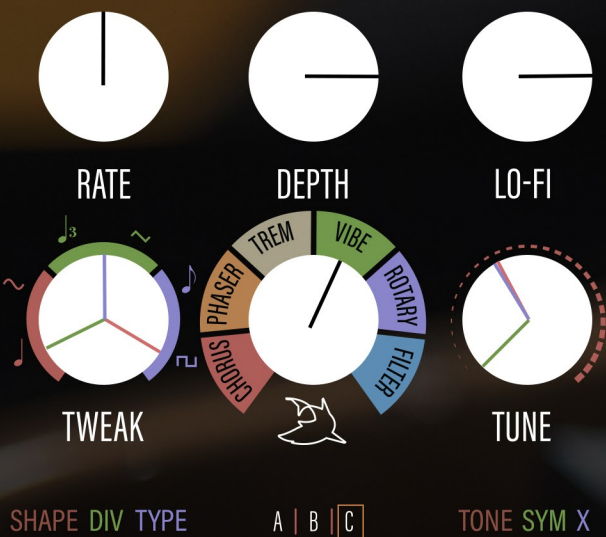

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - 10 | Drive - 9 | Space - 2 | Age - 2 | Noise - 10 | Warble - 11
Settings are in clock format.

BANK C, PRESET 2 (GREEN)

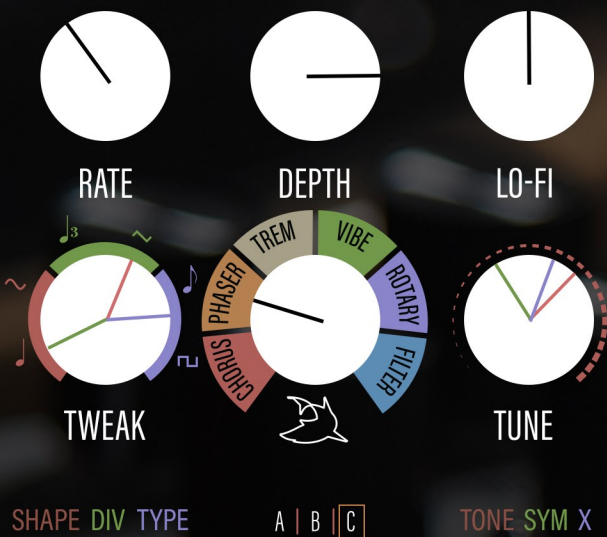

Output volume adjust: Noon

Increasing the Lo-Fi knob will introduce the following settings:
Env - 10 | Drive - Noon | Space - 10 | Age - 10 | Noise - Min | Warble - 10
Settings are in clock format.

BANK C, PRESET 3 (BLUE)



Output volume adjust: Min

Increasing the Lo-Fi knob will introduce the following settings:
Env - 3 | Drive - 10 | Space - Noon | Age - Noon | Noise - 10 | Warble - Noon
Settings are in clock format.