



www.i-zen.net



## SHOWER TOILET SEAT

# Installation Manual and Operating Instructions

### • IB-7000, 7500R Series

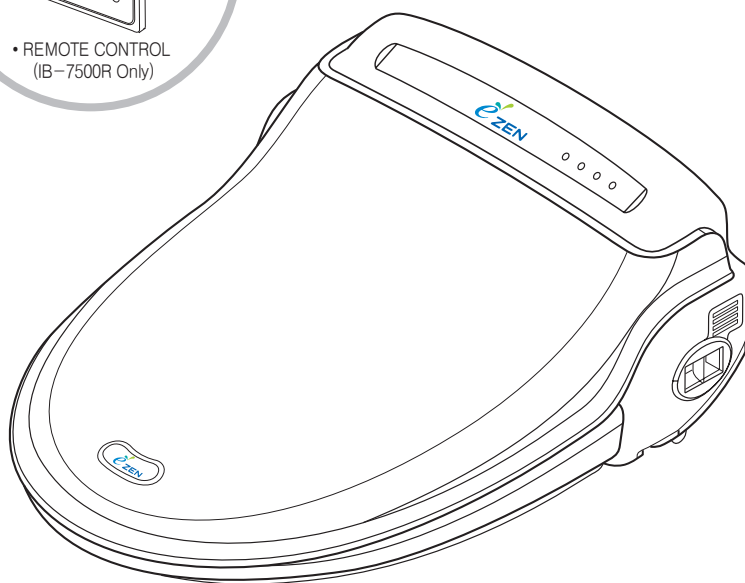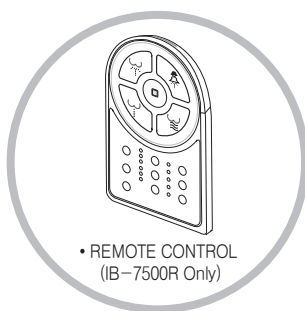

- This Product should be installed according to this manual.
- Please read this manual carefully and install properly.
- Please keep this manual for future reference.
- Please register Warranty for proper service.



Thank you for purchasing 'e-zen' shower toilet Seat(Electric Bidet) .  
This unit was manufactured for household use.

# Contents

- IMPORTANT SAFEGUARDS / ..... 4
- GENERAL CAUTIONS
- CAUTIONS BEFORE INSTALLATION ..... 6
- CARTON CONTENTS / IDENTIFICATION ..... 8

## PREPARATION

- OPERATION (BASIC) ..... 9
- OPERATION (DETAILS) ..... 10

## OPERATION

- INSTALLATION ..... 14
- SEPARATION OF THE UNIT FROM ..... 17
- THE TOILET BOWL

## INSTALLATION

- MAINTENANCE ..... 18
- WATER DRAINING ..... 19
- TROUBLE SHOOTING ..... 20
- SPECIFICATIONS ..... 21
- WARRANTY ..... 22
- INFORMATION TO THE USER ..... 23

## MAINTENANCE

# 1

## IMPORTANT SAFEGUARDS/GENERAL CAUTIONS

### ● READ ALL INSTRUCTIONS BEFORE INSTALLATION AND USE

The following terms are used in this manual to indicate hazards of varying degrees of severity

<b>DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
<b>WARNING</b>	Indicates potentially hazardous situation which, if not avoided, could result in death or serious injury.
<b>CAUTION</b>	Indicates potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in damage to the product or other property.



**DANGER** - To reduce the risk of electrocution



**WARNING** - To reduce the risk of burns, electrocution, fire, or injury to persons



**PLEASE OBSERVE THE FOLLOWING PRECAUTION BEFORE USING**  
e-zen Shower Toilet Seat (Electric Bidet)




Do not dismantle

Do not open the product to repair or remodel.  
Only qualified service personnel should service the e-zen Shower Toilet Seat. Do not use attachments not recommended by the manufacturer.




Prohibited

Connect the e-zen Shower Toilet Seat to cold water supply pipe carrying potable water. Do not connect to an industrial water supply line that does not carry water of drinking quality. This will negatively effect hygiene and performance.

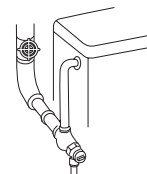

Prohibited

Do not plug in the power cord before connecting the water supply hose.

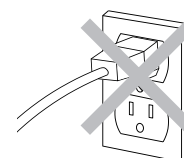

Grounding


The e-zen Shower Toilet Seat must be grounded.  
An approved Ground Fault Circuit Interrupt, (GFCI) must be used.





Observe at all times

Never operate this product if it has a damaged cord or plug. e-zen Shower Toilet Seat must be connected to a standard GFCI voltage power source. Do not connect power cord if the cord is damaged or broken. Do not plug the unit into a loose electric outlet.

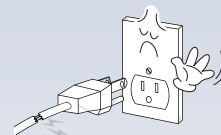



Use of fire prohibited

Keep the electrical cord away from heated surfaces to prevent a fire hazard. Also, keep any flammable materials away at all times from the e-zen Shower Toilet Seat.



Wet hands prohibited

Do not touch the power cord with wet hands. Do not reach for a product that has fallen into water. Unplug immediately!

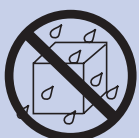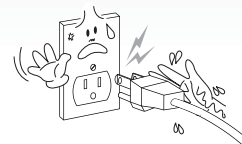

Do not spray water

Do not splash water on e-zen Shower Toilet Seat. Do not install in a location exposed to excessive moisture in that condensation would form on the e-zen Shower Toilet Seat surfaces. To avoid damage to electronic components due to high levels of humidity, it is necessary to provide adequate ventilation with a fan, open door or open window when bathing.



Observe at all times

The supervision of children, some elderly people or persons that have other limitations in body movement, illness or disabilities is necessary for the safety and full benefit of the e-zen Shower Toilet Seat.



Prohibited

About Low Temperature Burns-


A burn occurs when the skin has been exposed to high temperatures. However, a low temperature burn may occur when the skin has been in contact with an object at relatively low temperature (about 104 °F).

Close supervision is necessary when this product is used by, on, or near children, some elderly or persons that have limitations in body movement, illness or disabilities.




Prohibited

Unplug the electric cord from the e-zen Shower Toilet Seat if vomiting.

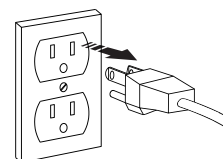


Observe at all times

Please disconnect the power cord when you clean the e-zen Shower Toilet Seat or detach it from toilet bowl. Do not supply electrical power to the unit until the plumbing installation work has been completed.

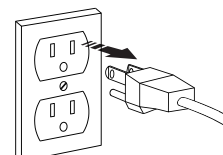

Prohibited

If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto e-zen Shower Toilet Seat. Do not use benzene or any acid chemical detergent. Only neutral detergent permitted.

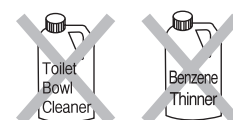

## CAUTION



Prohibited

Never operate this product if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair



Prohibited

Do not obstruct or put anything into the dry air outlet. Do not apply excessive force to the shower nozzle.



Prohibited

Do not stand or sit on the seat coverlid. It is not designed to support a user's body weight.



Prohibited

Do not bang the seat and lid.



Prohibited

Do not strain or push the connected hose and tube connector; it may cause water leakage. Never drop or insert any object into any opening or hose



Observe at all times

Use e-zen Shower Toilet Seat only as described in the operating instructions. Never use while sleeping or drowsy. Do not use while bathing.




Observe at all times

Be careful so that e-zen Shower Toilet Seat does not become stained with excrement and urine.



Observe at all times

If the e-zen Shower Toilet Seat will not be used for 14 days or longer, disconnect the power cord and drain the water tank to prevent the build up of unwanted bacteria.

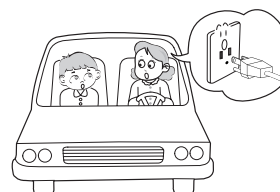

- SAVE THESE INSTRUCTIONS -

## 2

## CAUTIONS BEFORE INSTALLATION

### WIRING REQUIREMENT

e-zen Shower Toilet Seat must be plugged into a regular voltage Grounded GFCI outlet(North America 120V AC, 60Hz / Europe 230V AC, 50/60Hz)and the rated power consumption is 660W. In locations where only a standard two-prong outlet is available, it is the responsibility of the user to install a grounded three-prong outlet.

Using a higher voltage is dangerous and may result in a fire or other accident. The IZEN CO., LTD. is not responsible for damage resulting from the use of e-zen Shower Toilet Seat on other than specified voltage, or operating it without proper grounding.



e-zen Shower Toilet Seat must be on a separated circuit. No other appliance should share the circuit with e-zen Shower Toilet Seat. Sharing a circuit could cause the branch circuit fuse to blow or the circuit breaker to trip. Continuous usage under these conditions could result in fire or property damage.


## GROUND INSTRUCTIONS

- (1) e-zen Shower Toilet Seat has a three-prong grounding plug, which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

- (2) This product is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated in Figure 1.

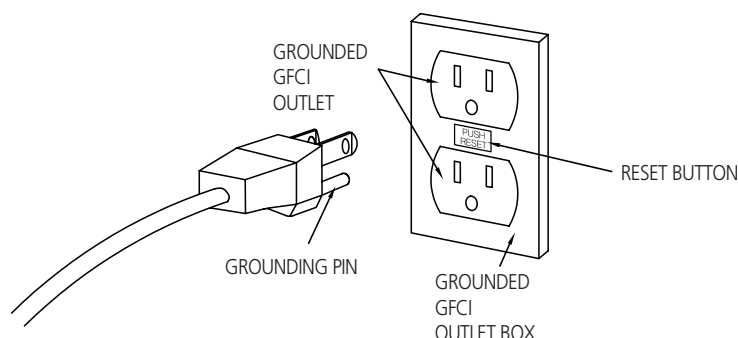

- Figure 1-



**IMPROPER GROUNDING CAN RESULT IN A RISK OF ELECTRIC SHOCK.**

Electric wiring has to be done in accordance with all local codes, or in the absence of local codes, with the National Electrical Codes.


The use of an extension cord is not recommended or advised. If it is necessary to use an extension cord, use only a three-prong extension cord, and a three slot built-in GFCI receptacle that will accept the plug on e-zen Shower Toilet Seat. The marked rating of the extension cord should be equal to or greater than the electrical rating of the unit (10amp). Consult a qualified electrician or service person if you are not sure whether the unit is properly grounded.

# 3


## IDENTIFICATION

### IB-7000, IB-7500R Series

#### 1 MAIN UNIT

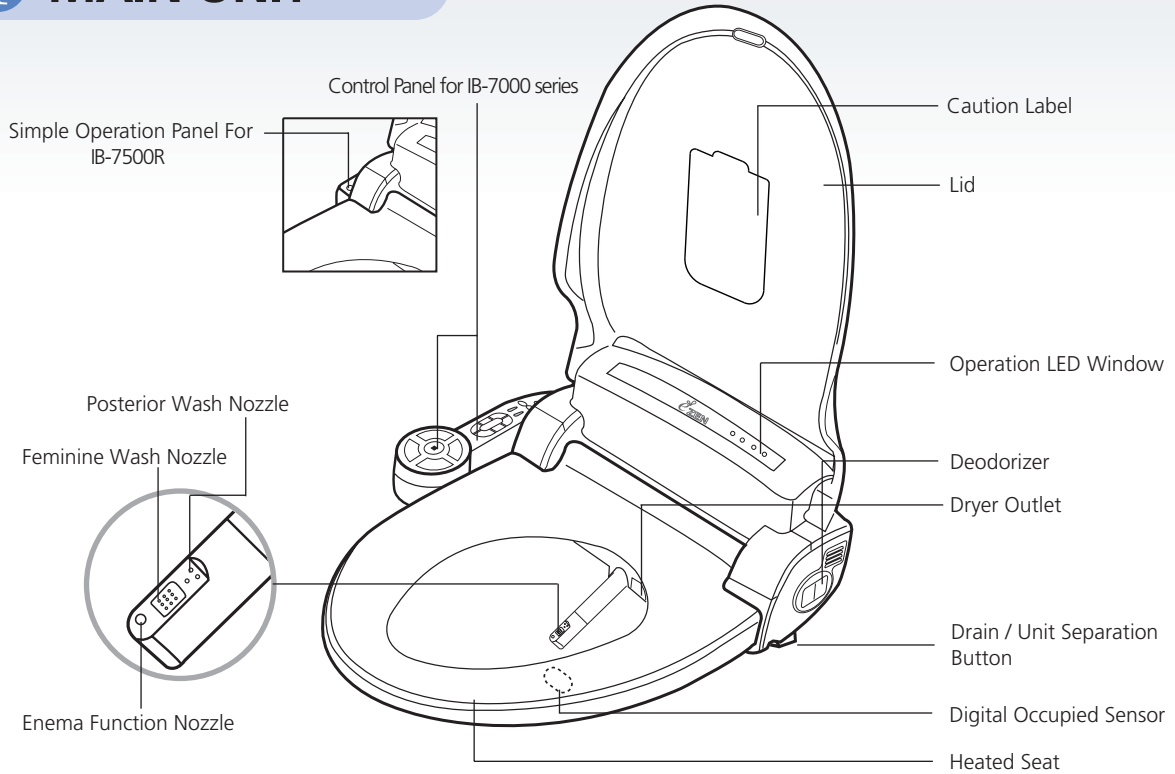


#### 2 ACCESSORIES

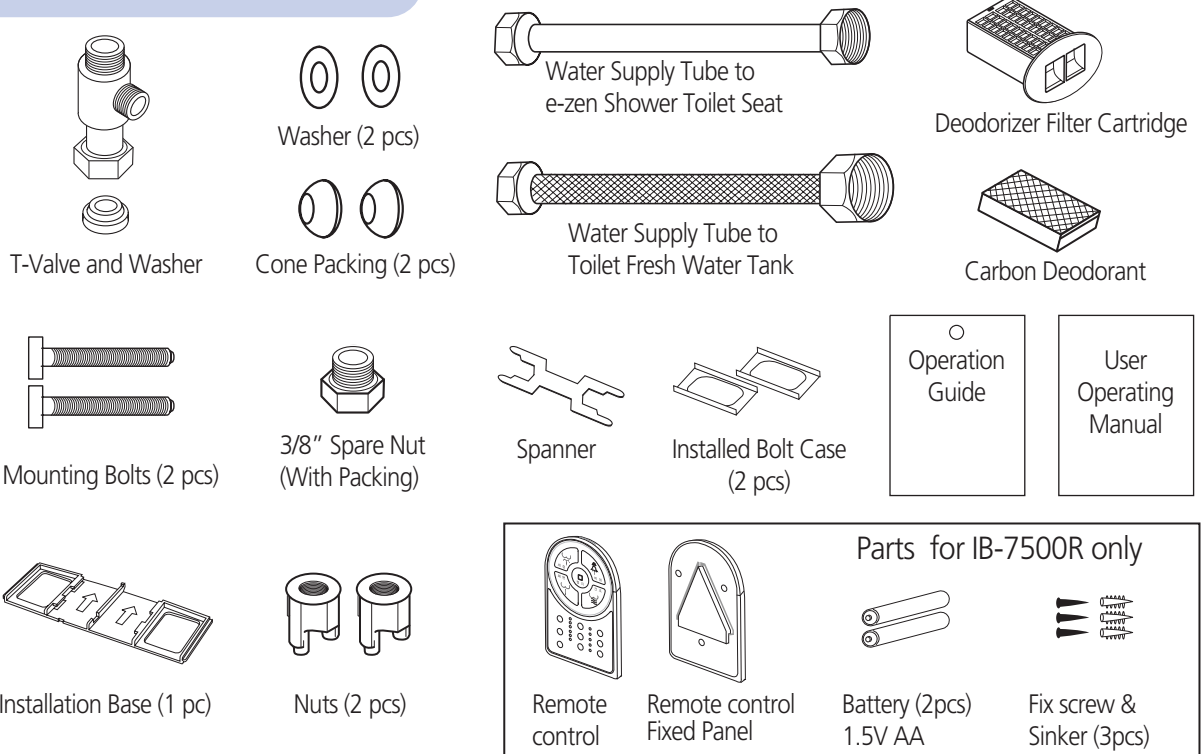


## 4 OPERATION (BASIC)


### IB-7000 Series Control Panel

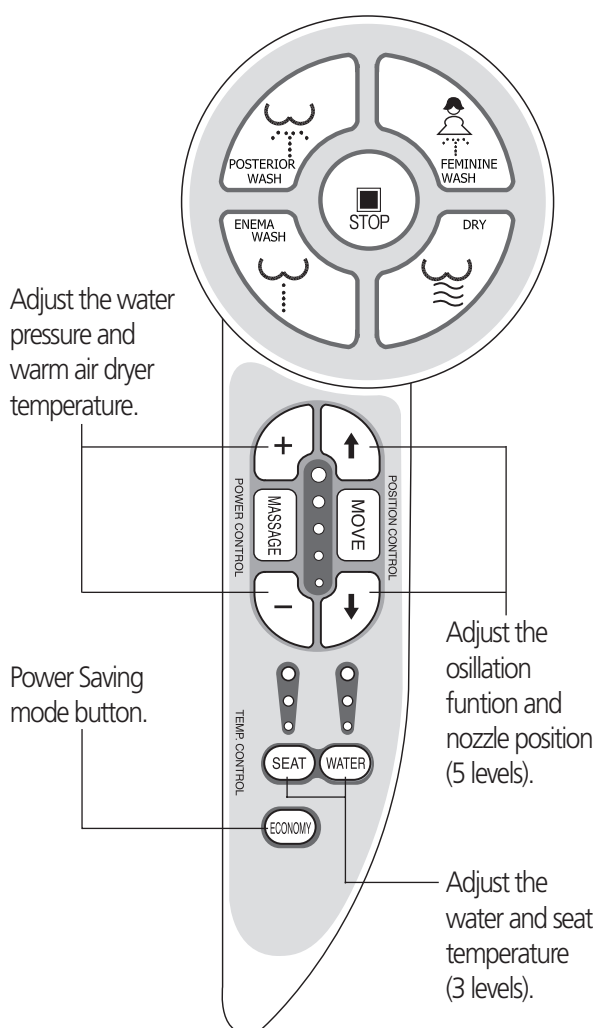

### IB-7500R Remote Control

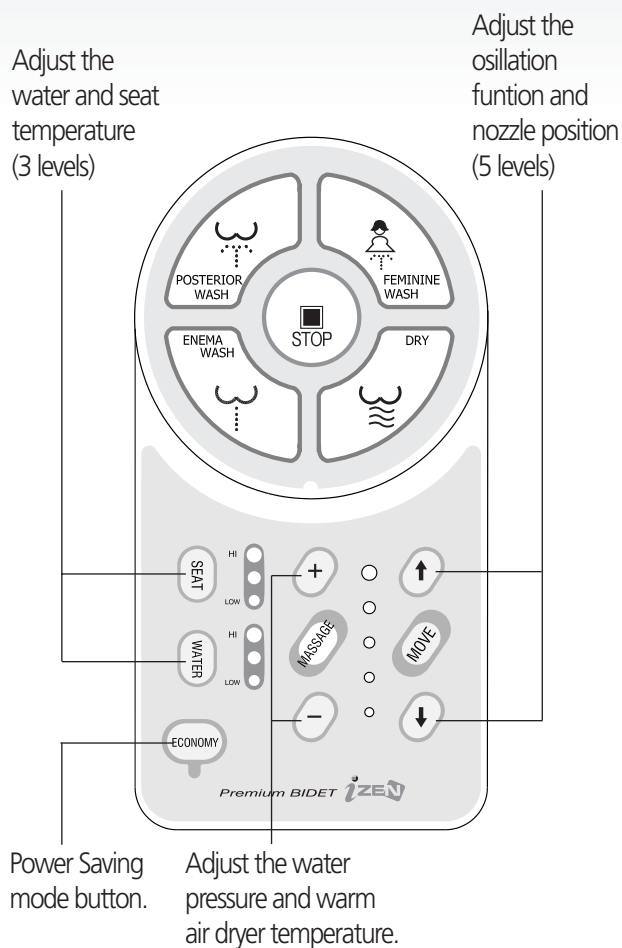

### Simple Operation Panel

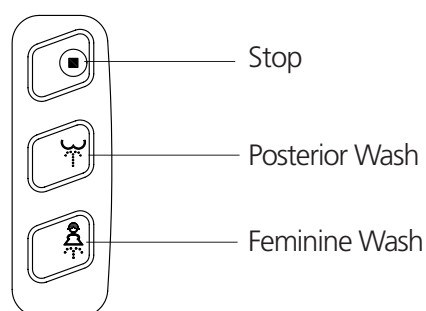



- When you sit on the e-zen Shower Toilet Seat, please sit down on the central position in order to activate the sensor.
- After an extended wash, allow about three minutes for water to reheat.

# 5

## OPERATION (DETAILS)

### IB-7000, IB-7500R Series

#### 1 PREPARATION

- Open the water supply shut off valve and check for any water leaks.
- Plug the e-zen Shower Toilet Seat into the proper power source.
- The water tank will be filled after pushing a "Wash" ( or ) button. When the water tank is filled, "CHIME" will sound.

#### 2 OPERATION

##### SIT DOWN ON THE SEAT

- When you sit down on the seat, the LED lamp on the control panel will light up.
- When the digital sensor on the seat is activated, the operation LED window on the main unit will light "Occupied sensor" and simultaneously, Deodorizer fan will start to work.
- See page 11 for details about changing the seat temperature.




##### STOP

- Press this button to stop in middle of any operation.


##### CLEANSING

###### • CLEANSING 1. (Posterior Wash)

1- Press "Posterior Wash" () . Automatically, the water nozzle comes out and sprays warm, aerated water to posterior.

2- Additional functions during your Posterior Wash experience are available. See Oscillation, pg.12 and Massage, pg. 13 for details.

###### • CLEANSING 2. (Feminine Wash)

1- Press "Feminine Wash" () . Automatically, the water nozzle comes out and sprays warm, aerated water to feminine area.

2- Additional functions during your Feminine Wash experience are available. See Oscillation, pg.12 and Massage, pg. 13 for details.

###### • CLEANSING 3. (Enema Wash)



Observe at all times







##### CAUTION

**DO NOT ALLOW CHILDREN TO USE THE ENEMA FUNCTION!**



 


**SUPERVISION IS STRONGLY RECOMMENDED FOR THE ELDERLY OR OTHER PERSONS THAT MAY HAVE LIMITATIONS IN BODY MOVEMENT, ILLNESS OR DISABILITIES!**

## CLEANSING cont.



 

 

### • CLEANSING 3. (Enema Wash)

- 1- Press "Enema Wash" () continuously for 3 to 5 seconds. Automatically, the water nozzle comes out and sprays a warm stream of water to the posterior center of the rectum.
- 2- If necessary, adjust "Position" of water stream with the (, ) buttons.
- 3- Press "Water pressure High & Low button" (, ) to adjust the water pressure to your desired comfort.
- 4- Press the "STOP" () button when you feel your abdomen is full or wait until the "Enema Wash" function stops, approximately 2 minutes.
- 5- You will shortly feel the urge to push the water out of your colon, push the water and feces out as completely as you can.
- 6- Relax for a few minutes and be sure you feel your colon is empty and then use the "Posterior Wash" and "Air Dry" function to finish.



## WARM AIR DRYER (IB-7100, 7300, 7500, 7500R Only)

- 1- Press "Dry" (), warm, dry air is gently directed to washed area for about 3 minutes.
  - 2- You may adjust the warm air temperature by pressing High (, ) and Low (, ) buttons.
- ※ This e-zen Shower Toilet Seat memorizes the air temperature of prior use.

## WATER PRESSURE ADJUSTMENT

- After sitting down on the e-zen Shower Toilet Seat, the LED lamp () for water pressure on the Power Control will light at third or middle level ()
- Press high (, ) , or low (, ) to adjust the pressure of the water spray to your desired comfort level

## WARM WATER TEMPERATURE AND SEAT TEMPERATURE ADJUSTMENT

- The temperature of water and seat are adjustable to the desired level by pressing the 'WATER()' and 'SEAT()' button.

WATER TEMPERATURE



Room temperature    approx. 93.2°F (34°C)    98.6°F (37°C)    104°F (40°C)

SEAT TEMPERATURE



Room temperature    approx. 93.2°F (34°C)    98.6°F (37°C)    105.8°F (41°C)

# 5

## OPERATION (DETAILS)


### IB-7000, IB-7500R Series

#### NOZZLE POSITION ADJUSTMENT

- Nozzle position is adjustable to the desired position by pressing "Front" (⬆️, ⬆️) or "Rear" (⬆️, ⬆️) button from 1 to 5 positions. After using the e-zen Shower Toilet Seat, the nozzle will return to position 3.

#### DEODORIZER (IB-7500, 7500R Only)

- The deodorizer fan is activated when the e-zen Shower Toilet Seat is occupied. When finished, the fan will stop after 1 minute.
- Air current for the deodorizer has 4 adjustable levels. While pressing the "STOP" (⬆️) button, press and "WATER" (WATER) button to the desired air current level. See diagram:

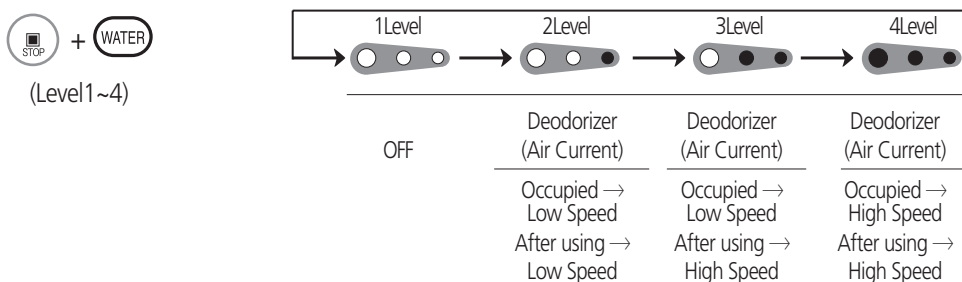

#### OSCILLATION ( Nozzle Movement Function)

- When using Posterior or Feminine Washing functions, pressing the "OSCILLATION" "MOVE" (MOVE, MOVE) button will provide a short-motion, front to back oscillating spray for a much wider cleansing experience. Note: This function will **not** work during the Enema Wash function.
- You may change the position of the Oscillating spray by pressing the "OSCILLATION" "MOVE" (MOVE, MOVE) button again and "Front" (⬆️, ⬆️) or "Rear" (⬆️, ⬆️) buttons simultaneously.
- Push the "OSCILLATION" "MOVE" (MOVE, MOVE) button again and the oscillation motion will stop automatically.

##### Auto-Setting of Oscillation Feature

- You can set this function to automatically oscillate whenever the seat is occupied and the Posterior or Feminine washes are in operation.

**Step 1:** Do not sit on the e-zen Shower Toilet Seat.

**Step 2:** Press the "MOVE" (MOVE, MOVE) button for 3 seconds or until you hear a single Chime.

**Step 3:** Sit on the e-zen Shower Toilet Seat and proceed with Posterior or Feminine Wash.



 
 
 


**Note:** In the automatic setting, you may still adjust the position of the Oscillating spray by pressing the "Front" (⬆️, ⬆️) or "Rear" (⬆️, ⬆️) buttons.

##### Canceling the Automatic Oscillation function

**Step 1:** Do not sit on the e-zen Shower Toilet Seat.

**Step 2:** Press the "MOVE" (MOVE, MOVE) button for 3 seconds or until you hear a double Chime.

## ● MASSAGE (Rhythm Wash)

- When using the Posterior Wash or Feminine Wash functions, pressing the "MASSAGE" () button will provide a pulsation spray.
- You may change the pressure of the spray by pressing the "High" (, ) button or "Low" (, ) buttons.
- Push the "MASSAGE" (, ) button again and the pulsating action will stop automatically.





### Auto-Setting of Massage Feature

  - You can set this function to automatically pulsate whenever the seat is occupied and the Posterior or Feminine washes are in operation.

**Step 1:** Do not sit on the e-zen Shower Toilet Seat.

**Step 2:** Press the "MASSAGE" (, ) button for 3 seconds or until you hear a single Chime.

**Step 3:** Sit on the e-zen Shower Toilet Seat and proceed with Posterior or Feminine Wash.

**Note:** In the automatic setting, you may still adjust the pressure of the pulsating spray by pressing the "high" (, ) or "low" (, ) functions.

### Canceling the Automatic Oscillation function

**Step 1:** Do not sit on the e-zen Shower Toilet Seat.

**Step 2:** Press the "MASSAGE" (, ) button for 3 seconds or until you hear a double Chime.

## ● ECONOMY (Power Save Mode)

- **ECONOMY 1:** The energy saving feature drops the water temperature and seat temperature to about 32 °C (90 °F) when the seat is not in use.
- **ECONOMY 2:** This Intelligent Economy feature internally records the times of day the e-zen Shower Toilet Seat is most used during a 4-day period after this button is activated. Your e-zen Shower Toilet Seat will then set the "Power-On" and Power-Off" time according to this 4-day pattern it learned. This energy saving feature also drops the water temperature to about 32 °C (90 °F) when not in use.


## ● NOZZLE CLEANING (Automatically)

- e-zen Shower Toilet Seat has an automatic, self-cleaning nozzle function that works before and after each operation.

## ● NOZZLE CLEANING (Manual)

- Nozzle can be cleaned manually by pressing "Posterior Wash" (, ) button for 3 seconds without being occupied on the seat and nozzle will come out. Press "Stop" (, ) button to return nozzle to stand-by mode. (,  : in Simple Operation panel -Remote Model)

## ● CHIME SOUND ON/OFF SET

- While sitting on the e-zen Shower Toilet Seat, press "MOVE" () button for 3 seconds and you can hear the chime sound change to on or off. (Remote model doesn't have off function, IB-7500R)

# 6

# INSTALLATION

## IB-7000, IB-7500R Series



### CAUTION BEFORE INSTALLATION



- Do not plug in before installation.
- If you need an electric power system or extension, please consult a qualified electrician.

### STEPS

1

#### Turn Off Water.

- Shut off the water supply to the existing toilet tank by closing the water supply valve. Drain the toilet tank completely. Remove the water supply hose to toilet tank.

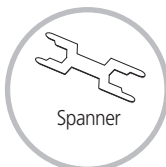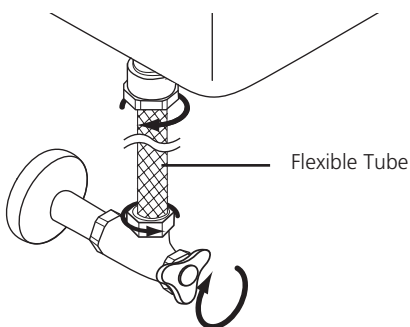

2

#### Removing the existing seat and lid.


- By using a wrench, (Spanner) or other proper tool, release the nut on both sides of existing toilet to remove the toilet seat and lid.



3

#### Connect T-Valve.


- Remove existing supply tube from fresh tank
- Water Supply Valve is standard 1/2" in size. If it is 3/8" use the 1/2" to 3/8" conversion nut kits with packing before connecting the Water Supply Valve. Install T-Valve on top of Water Supply Valve.

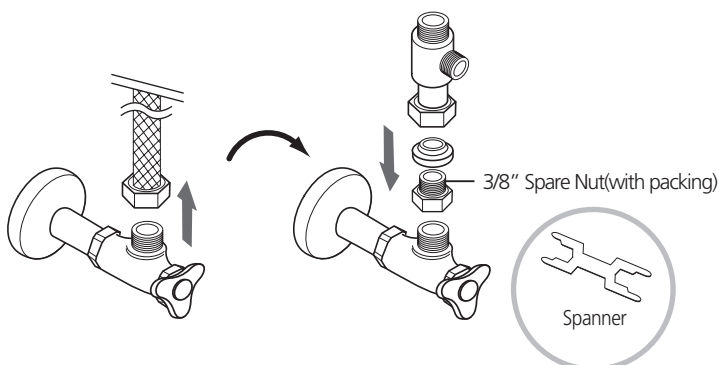

4

#### Water Supply to Tank Assembly.

- One flexible tube connects from the top of the T-Valve to the toilet tank.

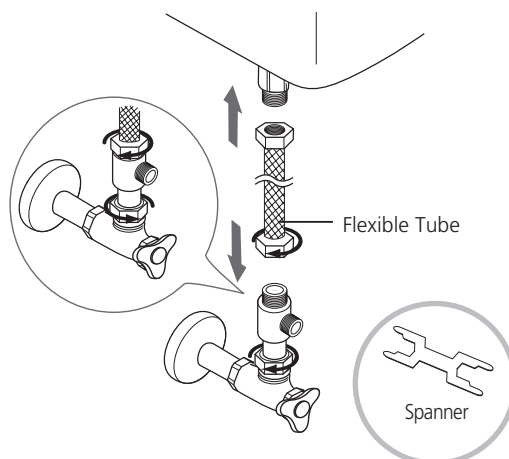


※ Check for any water leaks.

(Teflon tape is strongly recommended around threads to help prevent leakage.)


## 5 Installation Base Assembly.

1. Put the 2 Bolts into the 2 Installed Bolt Cases
2. Place this Bolt assembly into the Installation Base as shown.
3. Guide Arrows on the Installation Base should face up and towards the Toilet Tank.
4. Place the Installation Base and guide the Bolts into the 2 holes on the toilet bowl.

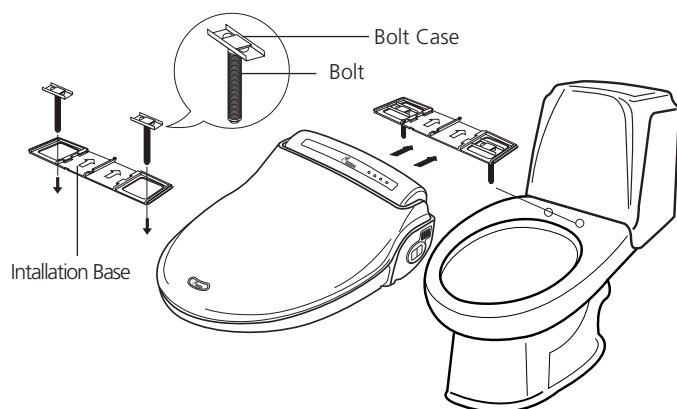


## 6 Bolt and Nut Assembly.

1. Fit the cone packing and plastic washers onto the bolts from below the toilet bowl as shown.
2. Loosely tighten nuts by hand.

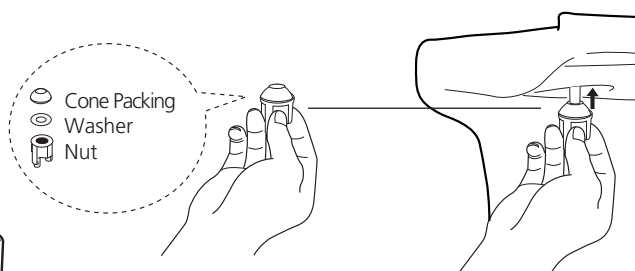


## 7 e-zen Shower Toilet Seat Assembly.

1. Slide the e-zen Shower Toilet Seat onto the Installation Base centering the unit with the guide arrows on the Base.
2. You will hear a click once the e-zen Shower Toilet Seat is securely mounted to the Installation Base.
3. The e-zen Shower Toilet Seat will feel a little loose on the toilet bowl. Adjust the fit from front to back and side to side for balance.
4. Tighten the nuts on both bolts securely.

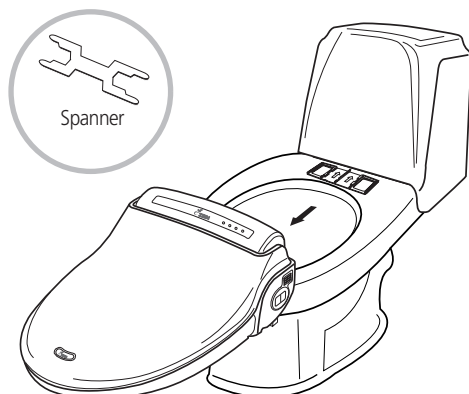

## 8 Water Supply Tube Assembly.

1. Connect the flexible tube from side of T-Valve to the e-zen Shower Toilet Seat.
2. Open the water valve.
3. Check for leaks.
4. If there are no leaks and the surrounding area is clean and dry, connect the power cord to a 120V GFCI protected power outlet.

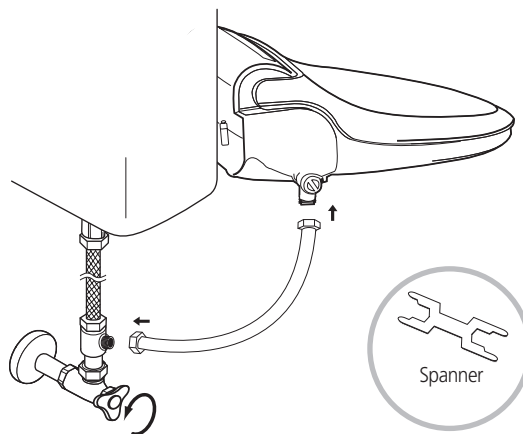

※ **Check for any water leaks.**

(Teflon tape is strongly recommended around threads to help prevent leakage.)

# 6


## INSTALLATION

### IB-7000, IB-7500R Series

9

#### Deodorizer Installation.

Insert the deodorant cartridge into the unit.  
(IB-7500, IB-7500R Only)

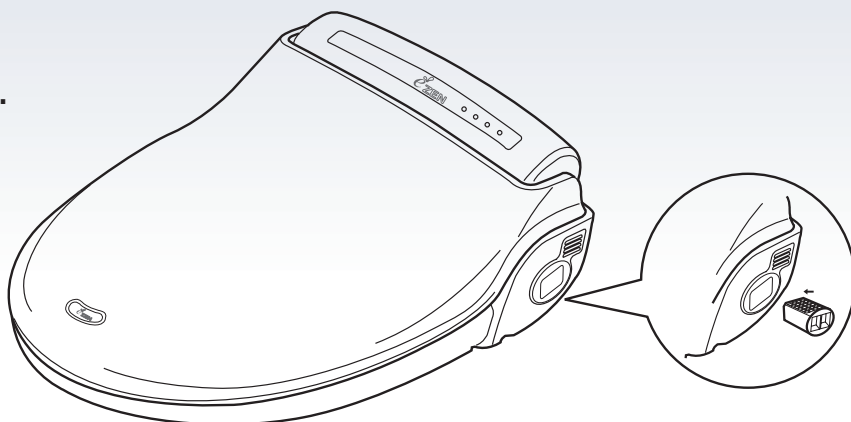

How to change the deodorant catalyst


1

Check the deodorant package.




2

Follow the below photos to change the deodorant.

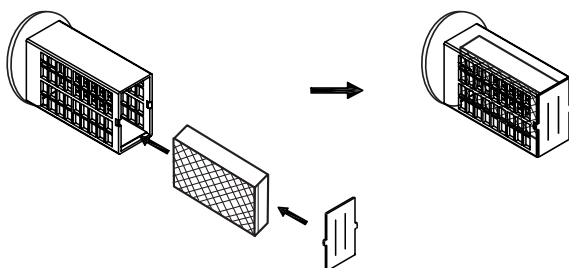

3

Insert the new deodorant case into the unit.

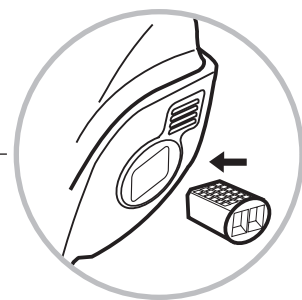

10

#### Installation of Remote Control on wall or convenient surface. (IB-7500R)




1- Mount Fixed Panel to wall location.  
Take off the cover on the adhesive on Remote Control Fixed Panel or use fixed screw in order to adhere Remote Control Fixed Panel on wall.



2- Then slide Remote Control on to Remote Control Fixed Panel.

Hole for screw bolt.

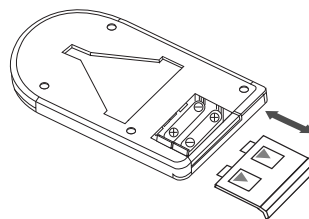

Place 1.5V(AA) batteries properly and shut the cover

## 7

SEPARATION OF UNIT  
FROM THE TOILET BOWLSHOWER TOILET SEAT  
**eZEN Bidet**

## IB-7000, IB-7500R Series

1


Disconnect the power plug

2

Shut off the Water Supply Valve.

3

Push the button on the right side of the unit to completely drain the water from water tank.

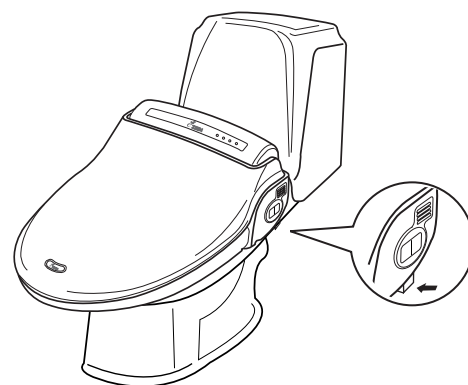


4

Separate the unit from toilet as following photos.

- When you pull the unit while pushing the drain button, the unit will separate from the installation base.





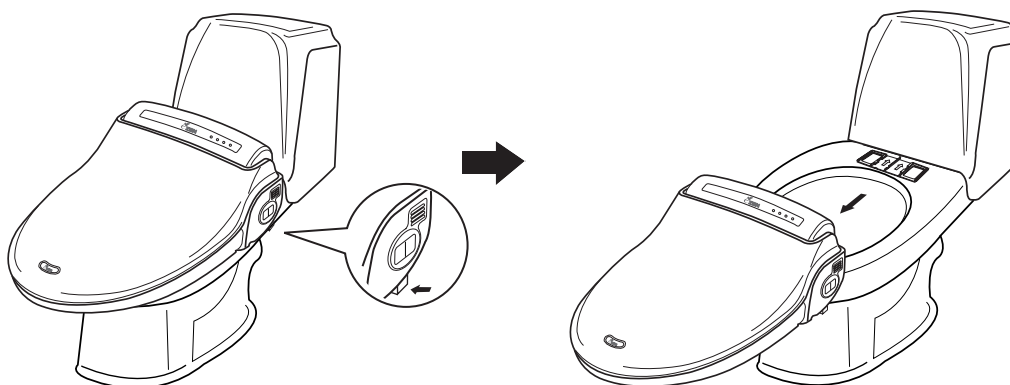



Do not turn unit upside down.




# 8 MAINTENANCE

## IB-7000, IB-7500R Series

### CLEANING THE NOZZLE

- When the "Posterior Wash (  ,  )" button is pressed for 3 seconds without occupying the seat, the nozzle can be cleaned with a soft toothbrush.  
(  ): in Simple Operation panel -Remote Model)
- After cleaning the nozzle, push the "Stop (  ,  )" button once again, and the nozzle retracts itself.  
(  ): in Simple Operation panel -Remote Model)

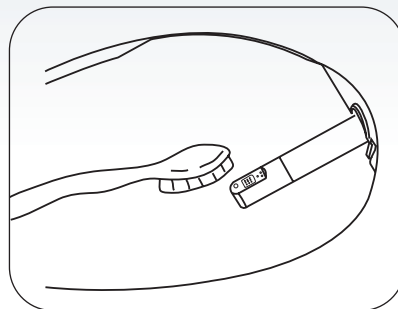



### CLEANING THE BODY OF UNIT

- When you clean the e-zen Shower Toilet Seat, do not use "thinner", "benzene" or toilet bowl cleaner. It may cause damage to the surface of unit.
- Use a wet cloth when you clean the e-zen Shower Toilet Seat.
- Do not spray water directly on to the e-zen Shower Toilet Seat.
- When you clean the e-zen Shower Toilet Seat, disconnect the power plug.


### CLEANING THE STRAINER

**The e-zen Shower Toilet Seat will not operate properly if the strainer is clogged.  
Please clean the strainer regularly.**

- 1) Close the water shut off valve.
- 2) Flush the toilet to empty the water reservoir.
- 3) Unscrew the water filter nut.
- 4) Clean the strainer with a small brush or water.
- 5) Re-screw the water filter nut.
- 6) Open the water shut off valve.

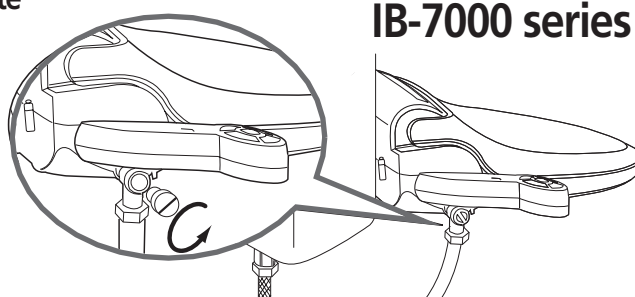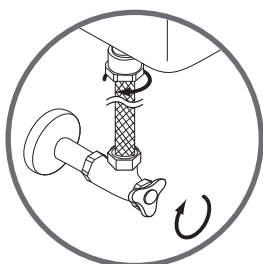

**IB-7000 series**

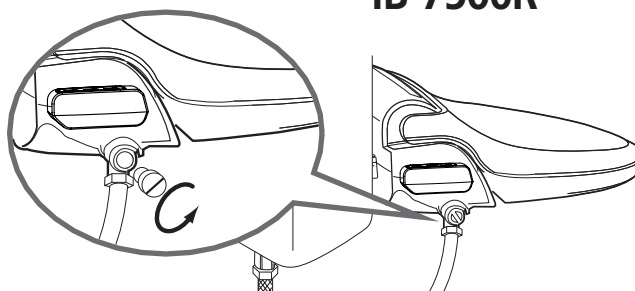

**IB-7500R**

# 9

## WATER DRAINING


IB-7000, IB-7500R Series

### ● DRAINING THE WARM WATER TANK IN THE UNIT

If you do not intend to use the e-zen shower Toilet Seat for 14 days or longer, drain the water from the e-zen shower Toilet Seat warm water tank.


1) Disconnect the power plug.

2) Close the water shut off valve.

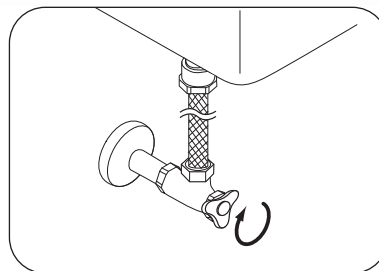

3) Press the drain lever until the water is completely drained from the unit's water tank.

4) To re-supply water after draining, open the water shut off valve.

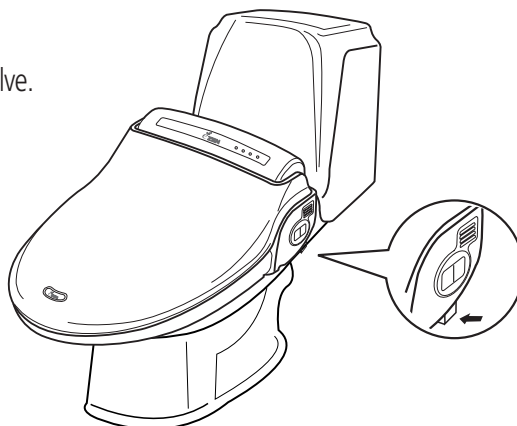

Do not drink the drained water.  
Do not insert finger into the drain hole.  
Before draining, unplug the power cord and wait 30 minutes until the unit has cooled down.

## MAINTENANCE FOR WINTER SEASON

1

Check the power cord if it is plugged in or not.

2

Keep the water temperature on "Middle or High Level" to prevent water from freezing.

3

If you do not intend to use the unit for 14 days or longer, disconnect the power plug and drain the water.

# 10 TROUBLE SHOOTING

## IB-7000, IB-7500R Series

Trouble	Cause	Remedy
<b>The washing water does not spray</b>	<ol style="list-style-type: none"> <li>1.The water tank is not filled.</li> <li>2.The shutoff valve is closed.</li> <li>3. Freezing inside the main unit or the water supply pipe.</li> </ol>	<ol style="list-style-type: none"> <li>1. Wait about one minute.</li> <li>2.Press the desired washing button once again.</li> <li>3.Turn on the shut off valve to open.</li> <li>4.Heat the room (for about two hours). Operating the unit while parts are frozen will cause a malfunction.</li> </ol>
<b>The unit is not operating</b>	<ol style="list-style-type: none"> <li>1.Disconnected the power cord.</li> <li>2.The seat is not occupied.</li> <li>3. The battery of remote controller is exhausted. (Only IB-7500R model)</li> </ol>	<ol style="list-style-type: none"> <li>1.Connect the power cord.</li> <li>2. Check the power supply system in your house.</li> <li>3.Occupy the seat (The unit has an occupied sensor).</li> <li>4.Replace the battery.</li> </ol>
<b>Water is leaking</b>	<ol style="list-style-type: none"> <li>1.Check the water supply system</li> </ol>	<ol style="list-style-type: none"> <li>1. If water is leaking from the main unit, call the service center or the place you purchased.</li> </ol>
<b>The washing water pressure is weak</b>	<ol style="list-style-type: none"> <li>1.The water pressure level is set to "LOW".</li> <li>2.The strainer is clogged.</li> </ol>	<ol style="list-style-type: none"> <li>1.Set the water pressure to "HIGH".</li> <li>2.Clean the strainer.</li> </ol>
<b>The washing water is not warm</b>	<ol style="list-style-type: none"> <li>1.The water temperature is set to "LOW".</li> <li>2.Continuous operation has depleted the supply of warm water.</li> </ol>	<ol style="list-style-type: none"> <li>1.Set the water temperature to "HIGH"</li> <li>2. Wait about three minutes.</li> </ol>
<b>The seat and dryer is not warm</b>	<ol style="list-style-type: none"> <li>1.The seat &amp; dryer temperature is set to "LOW"</li> </ol>	<ol style="list-style-type: none"> <li>1. Set the seat &amp; dryer temperature to "HIGH".</li> </ol>

# 11

## SPECIFICATIONS

### IB-7000, IB-7500R Series

Specification		IB-7000	IB-7100	IB-7200	IB-7300	IB-7500	IB-7500R
Power Rating		AC 230V 50/60Hz 660W(EUROPE) / AC 120V 60Hz 660W(AMERICA)					
Water inlet type	Type	Direct Inlet flow type					
	Water inlet pressure	0.4 ~ 7.5 kgf/cm <sup>2</sup> (5.69 psi ~ 106.7psi)					
Power cord		(1.2m (4 feet): AMERICA) / (1.8m: EUROPE)					
Wash Device	Posterior Wash	Max. 1.2 ℓ /min ( Max. 0.32 GPM)					
	Feminine Wash	Max. 1.2 ℓ /min ( Max. 0.32 GPM)					
	Water Pressure Adjustable	5 Levels					
	Warm Water Temperature	Room Temp - 40°C (Room Temp. 104 °F )					
	Heater	600 W					
	Safety Devices	Thermal fuse, Thermal switch, Float switch					
Heated Seat	Temperature	Room Temp ~ 41°C (Room Temp. ~ 105.8°F )					
	Heater	55W					
	Safety Device	Thermal fuse					
Warm Air Dryer Device	Adjustable Dry Temperature (Room Temp~45 °C)						
	Heater (250W)	—	○	—	○	○	○
	Safety Device (Thermal fuse, bimetal)						
Enema Function		—	—	○	○	○	○
Deodorizer		—	—	—	—	○	○
Remote control		—	—	—	—	—	○
Inlet water temperature		3°C ~ 35°C (37.4 °F ~ 95 °F )					
Ambient Temperature		3°C ~ 40°C (37.4 °F ~ 104°F )					
Dimension		Elongated			Round		Elongated Round
		W : 495mm (19.4 inch) L : 525mm (20.6 inch) H : 185mm (7.28 inch)			W : 495mm (19.4 inch) L : 493mm (19.4 inch) H : 185mm (7.28 inch)		W : 475mm L : 525mm H : 185mm
Weight (kg)		5.13kg	5.3kg	5.13kg	5.3kg	5.4kg	5.2kg

# 12 WARRANTY

## IZEN CO., LTD. One Year Limited Warranty

1. The IZEN CO., LTD. warrants the e-zen Shower Toilet Seat to be free from manufacturing defects under normal and intended use. This warranty is extended only to the original retail buyer and residential location for a period of (1) years from the date of purchase.
2. The IZEN CO., LTD. obligations are limited only to the repair or replacement of the e-zen Shower Toilet Seat that we find to be defective provided that the e-zen Shower Toilet Seat was properly installed and used according to the instruction manual included.
3. The IZEN CO., LTD. will not charge for Labor or parts in connection with the repair or replacement of the e-zen Shower Toilet Seat.
4. The IZEN CO., LTD. will not be responsible for any consumer costs related to the removal, return to The IZEN CO., LTD. and/or reinstallation of the e-zen Shower Toilet Seat.
5. The IZEN CO., LTD. will not be responsible for any consumer loss related to incidental, consequential damages or expenses incurred by the purchaser.
6. Not covered by this warranty are:
  - Loss or damage from fire, flood, freeze, electrical storm or any other natural calamity or act of God.
  - Defects or malfunctions resulting from failure to properly install, operate and/or maintain the e-zen Shower Toilet Seat to residential water toilets in accordance with the enclosed installation manual.
  - Loss or damage from misuse, abuse or negligence.
  - Damage resulting from unauthorized alterations, attachments and/or repairs.
  - Loss or damage from installing the unit in a harsh or hazardous environment and/or an environment including animals, mice or insects.
  - Damage caused from excess moisture or from sediments or foreign matter contained in the water system.
  - Damage from not being installed in accordance with all local codes, ordinances and good trade practices.
  - Color fading due to an installation in the wrong environment.
  - Loss or damage from consumable chemicals such as chlorinates (found in public water supplies) or from cleaning agents warned about in the installation manual.
  - Damage to the toilet bowl that the e-zen Shower Toilet Seat is installed to.
7. To obtain warranty repair service, call The IZEN CO., LTD. at (82)2-3665-7615 to get a RMA (Return Merchandise Authorization). Please have your serial number ready to give to the customer service representative. The serial number can be found on the back of your e-zen Shower Toilet Seat. You must enclose a copy of your receipt and ship pre-paid to The IZEN CO., LTD. #964 Goyang-Ri, Walgot-Myun, Kimpo City, Kyounggi-Do, Korea.
8. IZEN CO., LTD. will only warrant products with returned registration cards or from on-line registration with proof of purchase within 30 days of the original purchase date.
9. This warranty is also void if the "CAUTION" label is removed from the inside of the e-zen Shower Toilet Seat cover.
10. This limited warranty gives you specific legal rights and you may also have other rights that may vary from state to state.

**This is the IZEN's exclusive limited warranty.**



# 13 INFORMATION TO THE USER

## IB-7000, IB-7500R Series

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**Note :** The manufacturer is not responsible for any Radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### WARRANTY REGISTRATION

To ensure your warranty protection you must complete and return this card along with a copy of your receipt to The IZEN CO., LTD. within 30 days after Date of Purchase.

Model \_\_\_\_\_ Serial Number # \_\_\_\_\_

Purchaser \_\_\_\_\_ Date of Purchase \_\_\_\_\_

company \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ Country \_\_\_\_\_

Phone \_\_\_\_\_ E-mail \_\_\_\_\_

Dealer(Company) \_\_\_\_\_

Dealer Code \_\_\_\_\_

Address \_\_\_\_\_

### MAIL TO:

**IZEN CO., LTD.**

#964 Goyang-Ri, Walgot-Myun,  
 Kimpo City, Kyounggi-Do, Korea.  
 TEL . (82) 2-3665-7615  
 FAX. (82) 2-3665-7618  
 www.i-zen.net



<http://www.i-zen.net>



Manufacturer

## IZEN CO., LTD.

**Head office** : 3F, Shin Young B/D, Deung Cheon 3 Dong, Kang Seo -Ku, Seoul, Korea.  
TEL. (82) 2-3665-7615 FAX. (82) 2-3665-7618

**Factory(Korea)** : #964 Goyang-Ri, Walgot-Myun, Kimpo City, Kyounggi-Do, Korea.  
TEL. (82) 31-997-3145 FAX. (82) 31-997-3147

**Factory(China)** : 3F, 1Haolou, #359 Hong zhong Rd, Min hang Qu, Shanghai, China.  
TEL. (86) 21-5422-3100~2 FAX.(86) 21-5422-3103.