

A: Trimpro XL Drive light indications

Green slow flashing light	Operational
Red slow flashing light	Short-circuit. This indicates a problem with the motor wire or the drive wire. Verify there are no cuts or breaks in the power lines
Red and Yellow fast flashing light	Undervoltage. Verify that enough power can make its way into the machine. This usually indicates the circuit in which the machine is plugged is underpowered
Red and Yellow slow flashing light	Overvoltage. Verify that not too much power is making its way into the machine. This usually indicates the circuit in which the machine is plugged is overpowered (i.e. machine plugged in a 220V circuit in North America)
Yellow slow flashing light	Standby. This indicates that the electric routing in the machine is not properly closed. This is usually caused by the limit switch not being compressed enough when the lid is closed. When lid is open, look on left hand side of the machine to see the limit switch. When you press on the switch you should hear a click. The click indicates that the circuit closes. When closing the lid of the machine, make sure you hear the click of the limit switch.