

CX RIDER



INSTRUCTION MANUAL

ADULT ASSEMBLY REQUIRED
THIS PRODUCT CONTAINS SMALL PARTS
STYLES AND COLORS MAY VARY
11106



Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.

WARNING

WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety harness and insure that the child is properly positioned according to these instructions.

WARNING: Never leave child unattended.

WARNING: CHOKING HAZARD

Adult assembly required because of small parts.

Keep (assembly parts) out of reach of children under 3 years.

Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.

The maximum weight that can be carried in the basket is 3 lbs and in the parent tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.

Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.

Use of the stroller with a child weighing more than 40 pounds or 40 inches will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.

DO NOT use the stroller on stairways or escalators.

DO NOT use the stroller with roller skates or in-line skates.

Never allow your stroller to be used as a toy.

To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.

Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.

Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

CARE AND MAINTENANCE


To clean the stroller use a mild household soap with warm water on a sponge or clean cloth.

Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.


Discontinue use of stroller if it should become damaged or malfunctions. Please contact our customer service number 1-800-377-3777 to arrange for repair or obtain replacement parts.

If you experience any difficulty with assembly, missing parts or use, please **DO NOT** return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance 1-800-377-3777.

PARTS

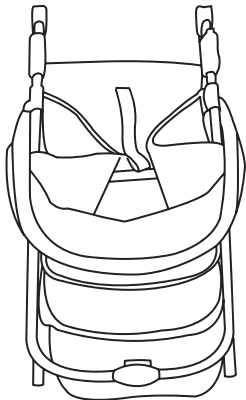


Stroller

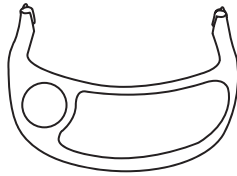

Child Tray



Parent Tray

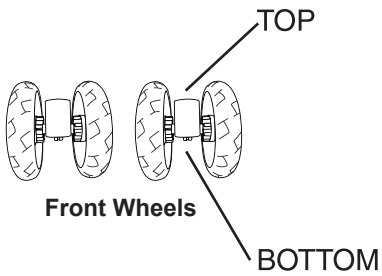

Front Wheels



Rear Wheels



Locking Caps



Rear Wheel Axle



Hub Caps



Lock Washer

ASSEMBLY

ATTENTION: To ensure safe operation of your stroller, please follow these instructions carefully. Retain these instructions for future reference. Remove stroller from box. The front wheels, rear wheels, child tray and parent tray need to be installed prior to use.

Remove stroller from box. The front wheels, rear wheels, child tray and parent tray need to be installed prior to use.

FRONT WHEEL

Release the folding latch lock, which is located on the right side.

Lift up the stroller handle with both hands (Fig. 1a) until the stroller frame is vertical and fully locked in the upright position before use. See Figure 1b.

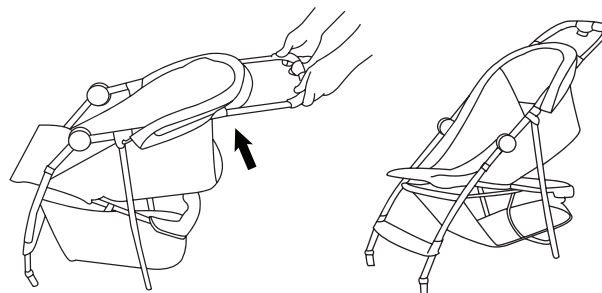


Fig. 1a

Fig. 1b

Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel posts are pointing upward.

Push each front wheel onto the front wheel posts until snapped into place. (Fig 2) Pull on the wheel to ensure that it is securely attached to the stroller.

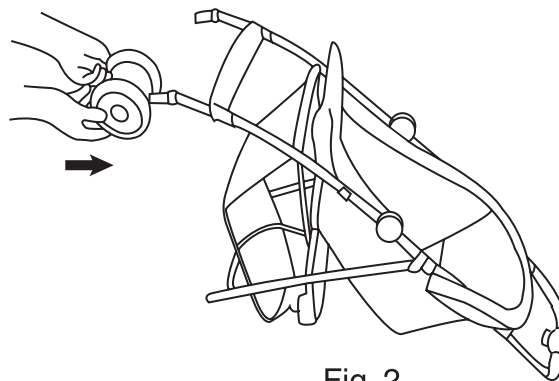


Fig. 2

REAR WHEEL

Assemble the rear axle as follows. Insert the axle through each wheel, with axle going through the brake on the wheel first. Snap the small lock washer onto the groove at the end of the axle to lock the wheel on. Snap the locking cap over the lock washer. Lastly, snap the hub cap into place. Pull on each wheel to ensure that each is securely locked onto the rear axle. Please see Figure 3.

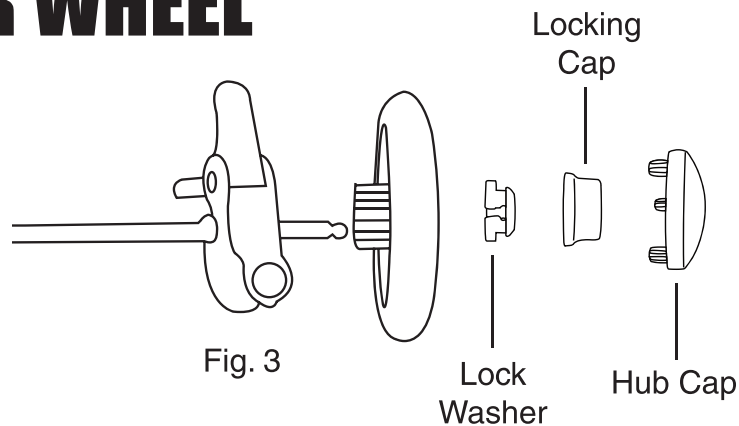


Fig. 3

Lock Washer

Locking Cap



Hub Cap

ASSEMBLY


ATTENTION

PLEASE FOLLOW THESE INSTRUCTIONS FOR THE PROPER INSTALLATION OF YOUR REAR AXLE ASSEMBLY


Lean the stroller forward to rest on the front wheels. To attach the rear axle, line up the rear frame tubes with the rear axle housing with the brake pedals facing toward the rear of the stroller. Push both housings onto the rear frame tubes at the same time until they snap into place. Check that the push button shows through the small hole near the bottom of the inside of the housing. (Fig 4) Make sure that the axle is firmly attached to the stroller. (For more details see page 18)

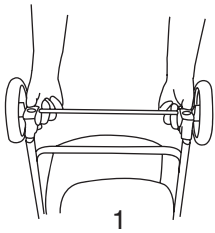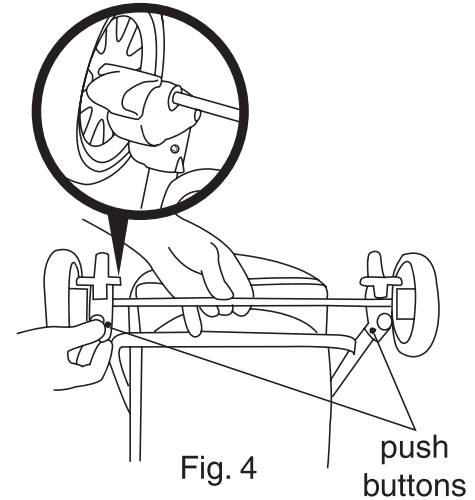


1
Line up the frame tubes with the axle assembly

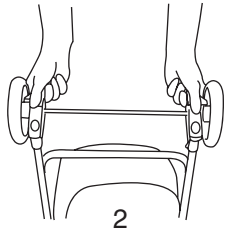

2
Slide onto frame tubes at the same time

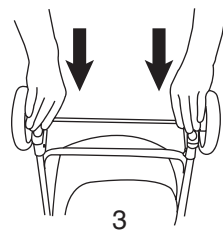


3
Push down until axle housing snaps into place

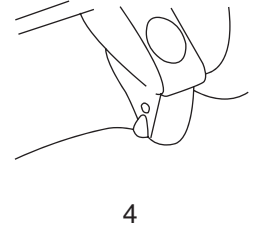

4
Axle housing is secure when the metal tab locks axle housing into place

TO ATTACH THE REAR WHEELS

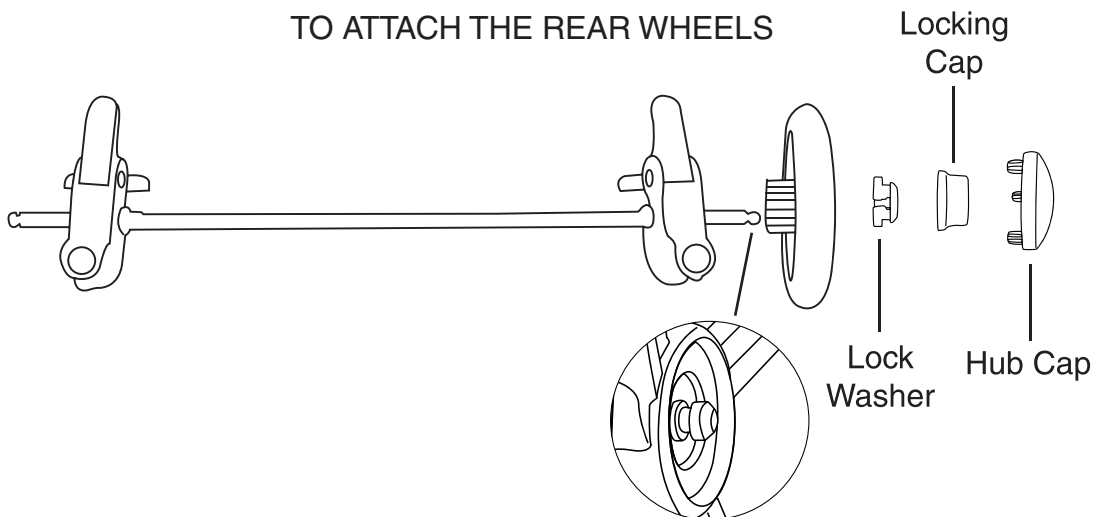


ASSEMBLY


WARNING: Do Not lift the stroller by the front tray.

CHILD TRAY


To attach the front child tray, snap each side latch onto the front frame tube just below the fold joint and above the tray stop. Please see Figure 5a.

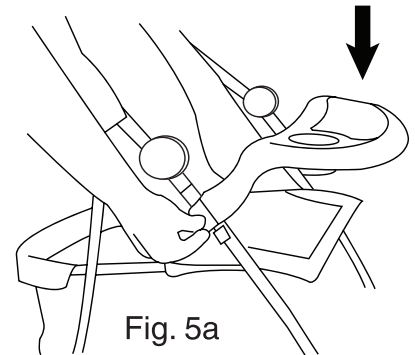


To remove front child tray pull outward on the tray latches to release. Please see Figure 5b.

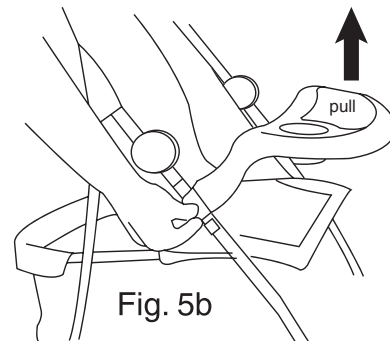

To unload child, unlatch one side of child tray, and swing outward. Please see Figure 5c.

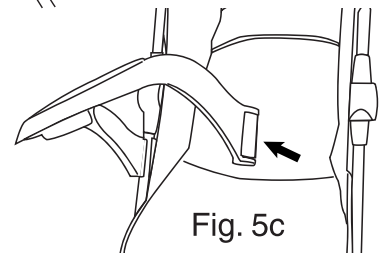

To attach the parent tray, place one side of the tray on the stroller handle such that the button engages into the hole on the tray. Snap opposite side onto handle checking that the button engages into the hole on the tray. Please see Figure 6.

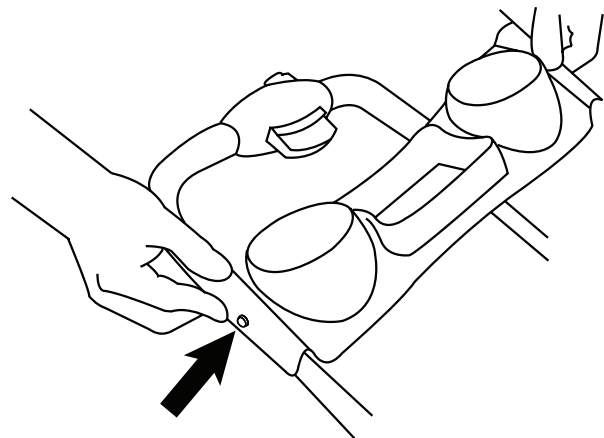

OPERATION

WARNING: Avoid serious injury from falling or sliding out. Always use the seat belt.

TO SECURE THE CHILD

Place your child in the stroller. Position the crotch belt between your child's legs. Pull shoulder straps over child's arm and shoulder and fasten both strap ends to the restraint system. Fasten both waist belts to the buckle on each side of the crotch belt. Make sure you hear a "click" on both sides. Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached. (Fig.7)



Fig. 7

To release, apply pressure to both sides of locked clips until clip releases. See (Fig. 8). This might need a considerable amount of effort to release as this harness is to prevent an accidental release by your child.

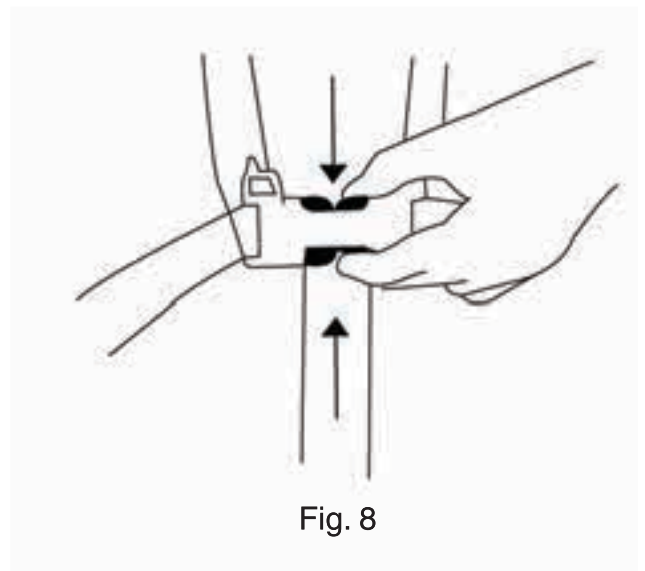


Fig. 8

OPERATION

SEAT BACK RECLINE POSITIONING

Press buttons on each side cord housing and pull away to recline seat (Fig 9). To return to an upright position, hold cord loop while pressing buttons on each side of cord housing and move cord housing towards the backseat.



Fig. 9

BRAKES

WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. See Figure 10a. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever. See Figure 10b.

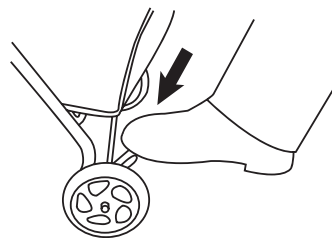


Fig. 10a

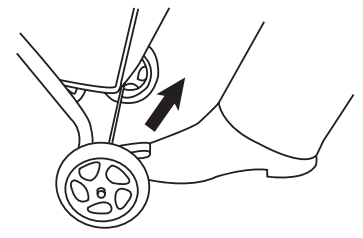


Fig. 10b

OPERATION

CANOPY

To open the canopy, push forward on the front frame of the canopy. Pull backwards on the canopy frame to fold completely. Always fold the canopy prior to folding the stroller frame. Please see Figure 11.

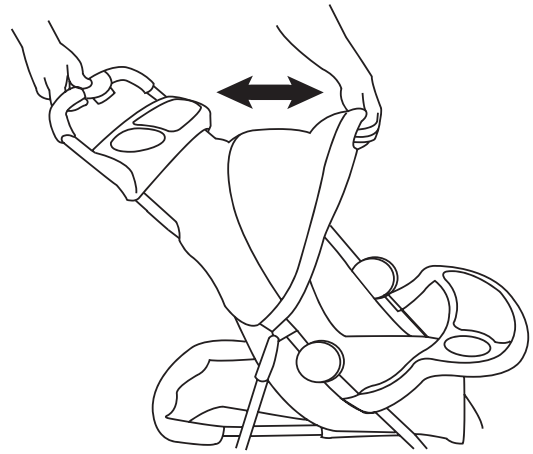


Fig. 11

TO FOLD STROLLER

Pull stroller backward several inches to rotate the front wheels to the front. Close the canopy as described in the Canopy section above. To fold the stroller slide the fold lock with your thumb while squeezing the large fold button in the center of the handle and push downward on the handle. Once the stroller begins to fold, release the handle and pushing downward until stroller is fully folded. Secure the stroller in the folded position by fastening the fold locking latch (located on the right side of the stroller) over the extended rivet on the lower frame tube. Please see Figure 12a, 12b, and 12c.

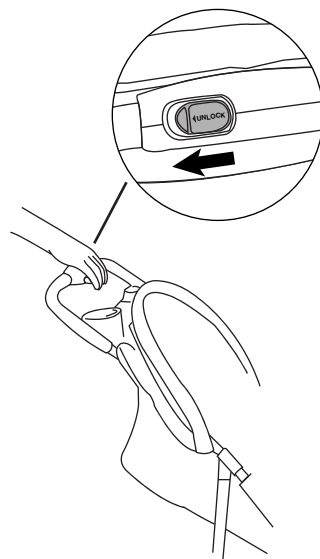


Fig. 12a

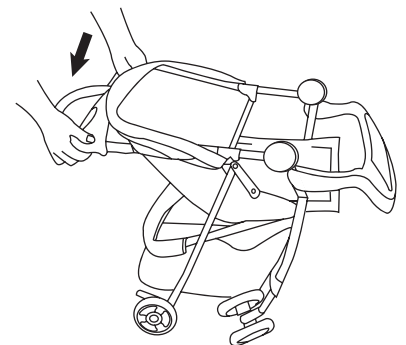


Fig. 12b

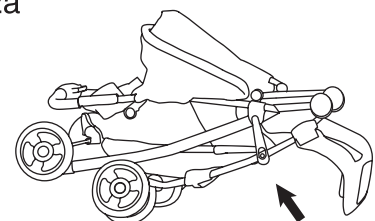


Fig. 12c



Delta Childrens Products Corp.
114 West 26th Street
New York, NY 10001
1-800-377-3777
www.deltachildren.com