

TOUR LX STROLLER

ASSEMBLY INSTRUCTIONS
ADULT ASSEMBLY REQUIRED



Styles and colors may vary



IMPORTANT: Read all instructions before assembly and use of the Stroller
Keep the instructions for future reference

Customer Care Tel. 1-(800)-218-2741

(E)

www.DeltaChildrensProducts.com

DCP Cat # 07-06-11-V5

Consumer Information



WARNING

Prevent serious injury from falls or sliding out:

- ALWAYS use the restraint system.
- Only children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- NEVER leave child unattended.
- DO NOT use the storage bag to carry children.

To prevent product from tipping over:

- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the storage bag.
- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cup holder.
- DO NOT place additional items on this product, except as recommended in the instructions.

To prevent injury:

- Make sure all body parts are clear of the stroller when folding and unfolding.
- DO NOT place hot liquids in the cup holder. Hot liquids can burn your child.

- Please read these instructions before assembly and use of this product.
- Adult assembly is required.
- Use only for a child who weighs less than 45 lbs (20.41 kg).
- Maximum weight limit for the storage bag is 3 lbs (1.36 kg).
- Maximum weight limit for the cup holder is 3 lbs (1.36 kg).
- Product features and decorations may vary from the photo.

Care

- The plastic parts may be wiped clean using a mild cleaning solution and damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use a silicone or graphite based lubricant.



Customer Service

Tel. 1-(800)-218-2741

www.DeltaChildrensProducts.com

customerservice@DeltaChildrensProducts.com


MADE IN CHINA

Assembly


IMPORTANT! Before assembly or each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts.

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.

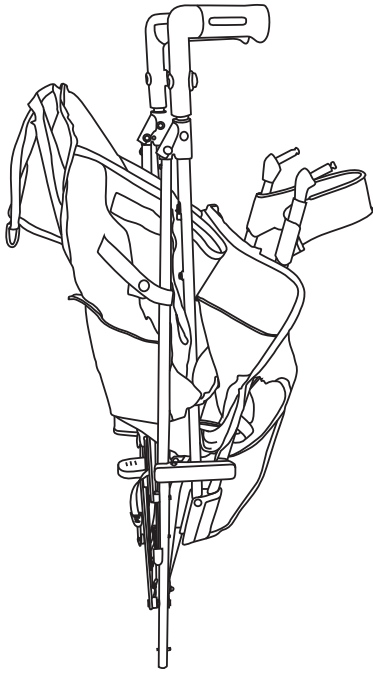


Folded Stroller Frame

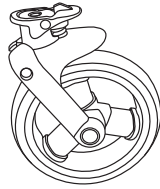


Front Swivel
Wheels X 2

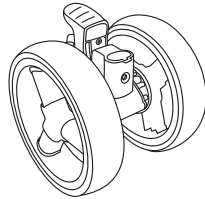

Rear Wheels X 2

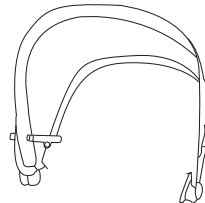


Canopy

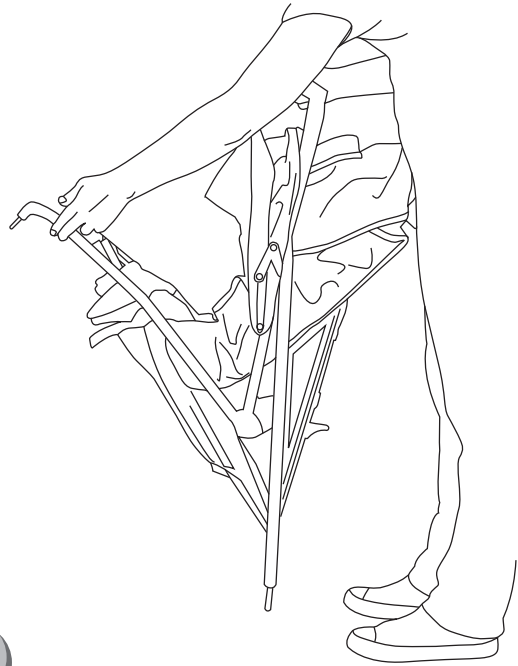

2

Opening Stroller


- Position the stroller upright on its rear legs.
- Grasp a handle with one hand. With your other hand, push down on the front of the stroller to open.

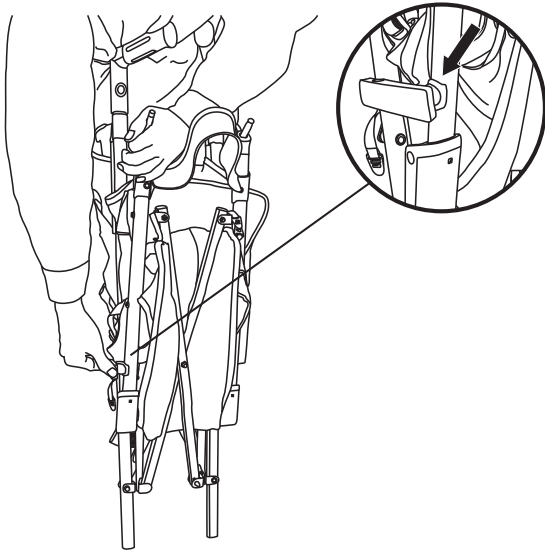

1

Opening Stroller


- Locate the latch clip on the side frame of the stroller.
- Pull to release the latch clip.

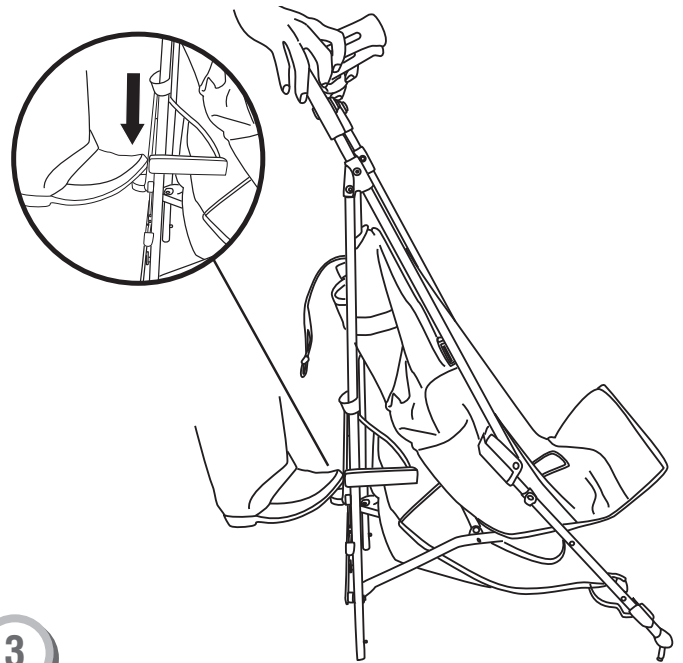

3

- Step down on plastic pedal on the cross bars to lock the stroller in the use position.


Assembly

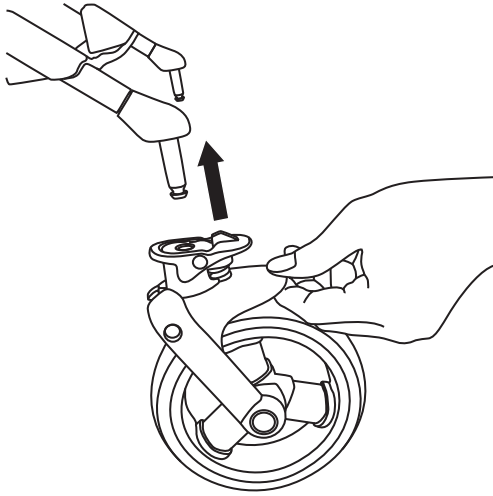

4

Attaching Front Swivel Wheels


- Locate the legs on the front of the stroller. (as pictured above)
- Attach the front wheel unit to the front of the stroller leg, push up on the wheel unit until you hear it “click” into the locked position.
- Pull on the front wheel assembly to make sure it is securely attached to the front leg.
- Repeat this procedure to attach the other front wheel assembly.

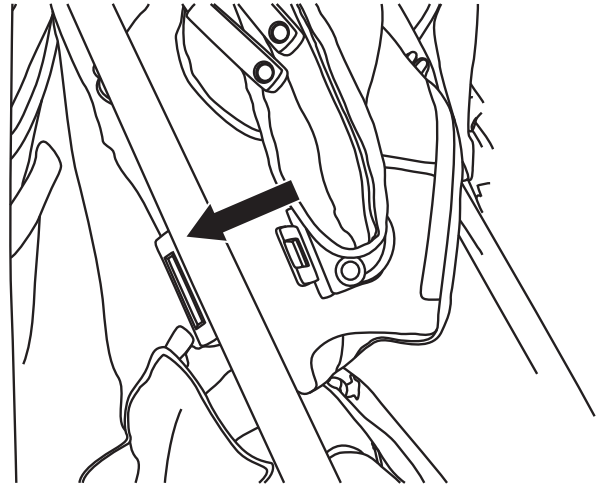

6

Attaching Canopy

- Locate the canopy and align the canopy frame latches with the plastic spring house holes on handles.
- Press down the canopy into the canopy frame latches until it “click” into the locked position.
- Check to make sure the canopy is properly attached.

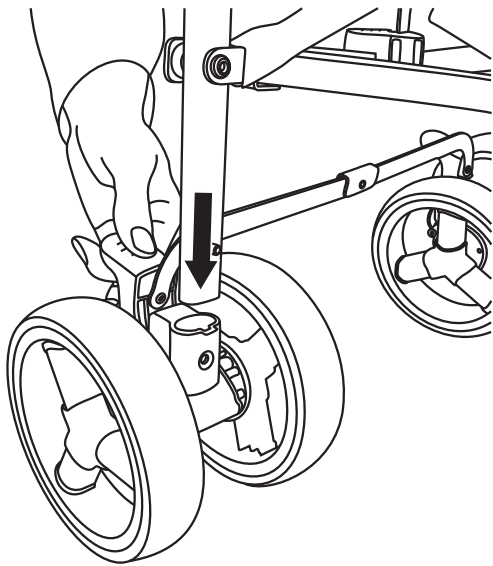

5

Attaching Rear Wheels

- Locate the rear legs on the back of the stroller. (as pictured above)
- Attach the rear wheel unit to the rear leg of the stroller until the wheel “clicks” into position.
- Pull on the rear wheel assembly to make sure it is securely attached to the rear leg.
- Repeat this procedure to attach the other rear wheel assembly.

Setup and Use

WARNING

Prevent serious injury from falls or sliding out:



- ALWAYS use the restraint system.
- Only children who have developed enough upper body control to sit without leaning forward can use the front seat in the upright position.
- NEVER leave child unattended.
- DO NOT use the storage bag to carry children.

To prevent product from tipping over:

- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the storage bag.
- DO NOT exceed the maximum storage weight limit of 3 lbs (1.36 kg) in the cup holder.
- DO NOT place additional items on this product, except as recommended in the instructions.

To prevent injury:

- Make sure all body parts are clear of the stroller when folding and unfolding.
- DO NOT place hot liquids in the cup holder. Hot liquids can burn your child.

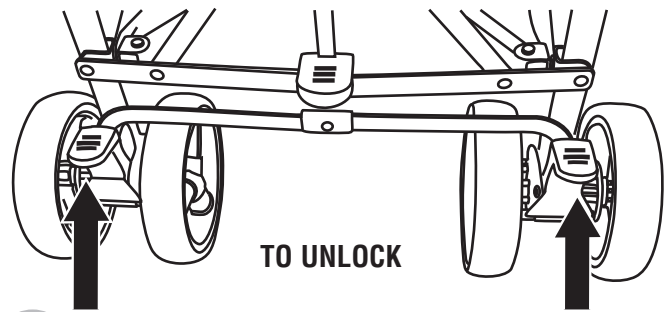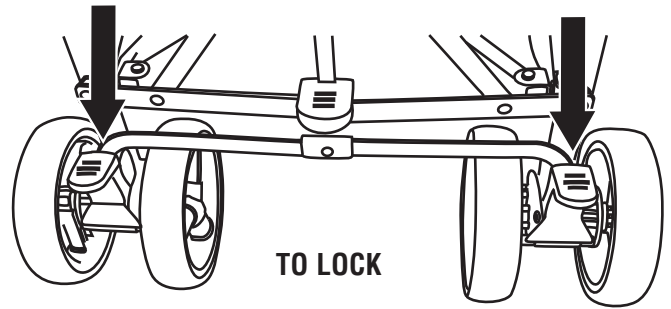

1

To Lock Rear Wheel


- Step down both brake pedals until they “click” into the locked position.

NOTE: Make sure the breaks pedals are pressed down completely.

- Always set both pedals whenever you park the stroller.

To Unlock Rear Wheel

- Lift up both brake pedals until they “click” into the unlocked position.

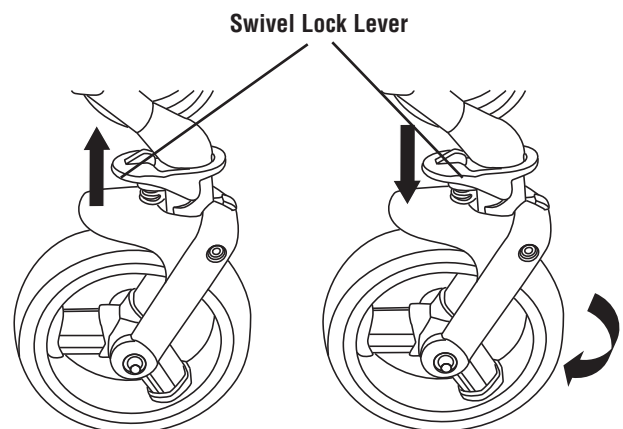

2

TO LOCK

TO UNLOCK

To Lock Front Swivel Wheel


- Lift both swivel pedals up until they “click” into the locked position.

NOTE: Make sure the breaks pedals are pressed down completely.

To Unlock Front Swivel Wheel


- Press both swivel pedals down until they “click” into the unlocked position and the front wheels are free to swivel.

Setup and Use

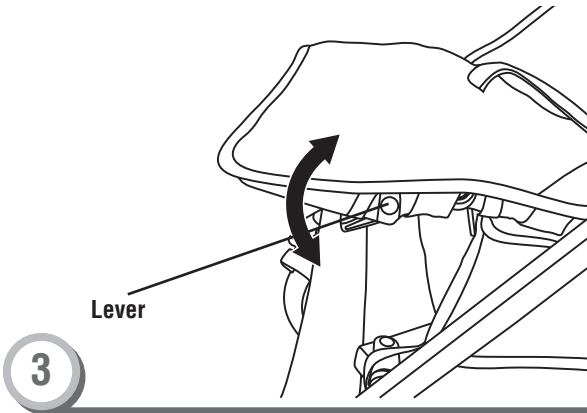


To Adjust the Calf Rest

- The calf rest can be adjusted up or down for the child's comfort.
- To adjust the calf rest press the lock button on both sides of the seat and adjust the calf rest to the desired position.

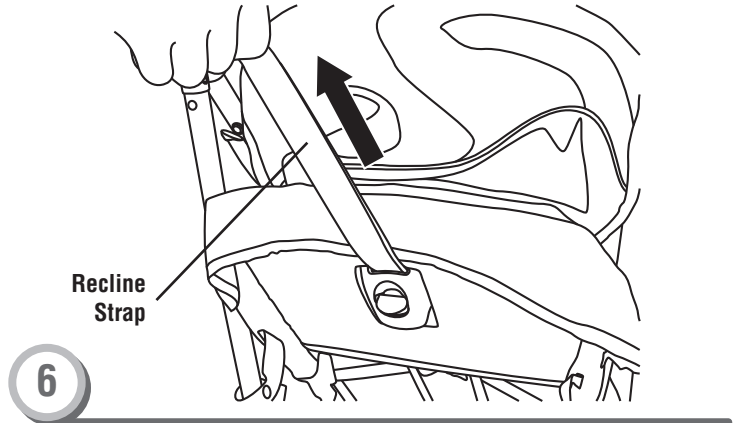


To Adjust the Seat Back

- Pull up the recline strap, and adjust the backrest to the desired height position.

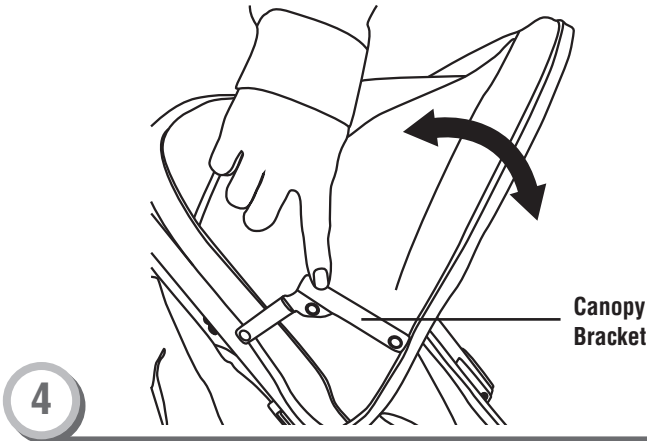


To Adjust the Canopy

- Press down brackets to unfold the canopy.
- Pull up the brackets to fold the canopy.

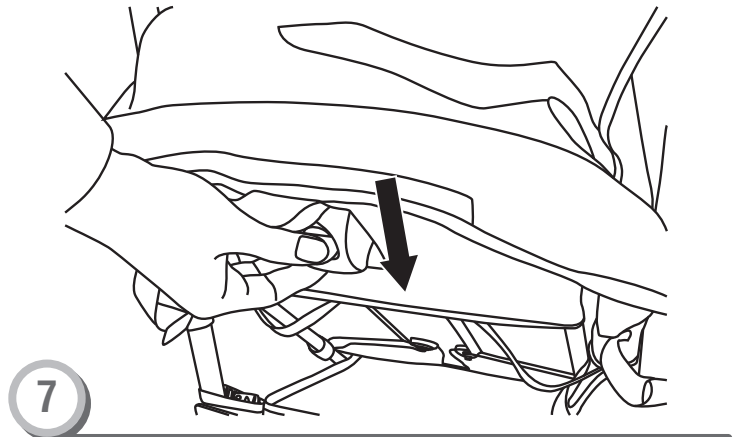

- Press down the recline button, pull the backrest gently to the desired height.


NOTE: It is recommended that the backrest is in the upright position before folding the stroller.

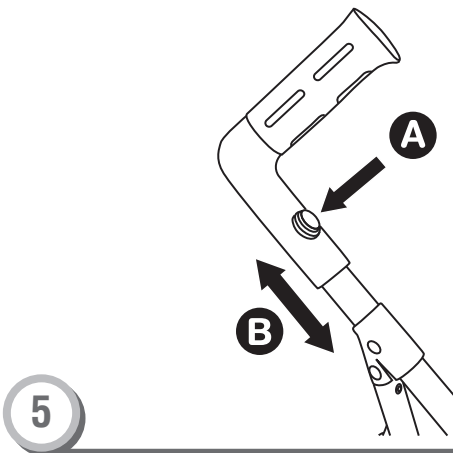

To Adjust the Handle

- **A** Press down the buttons and **B** adjust the handle to desired position.


Securing Child

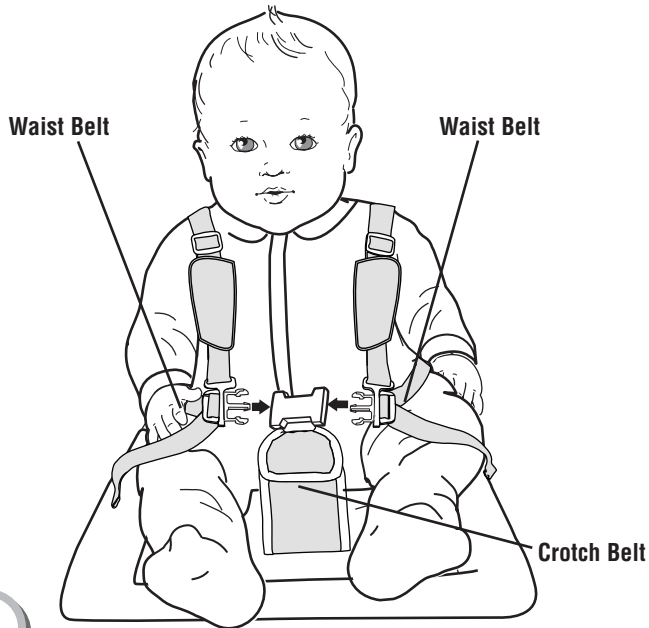

1


Securing Child

- Place your child in the stroller. Position the crotch belt between your child's legs.
- Pull shoulder straps over child's arm and shoulder and fasten **both** strap ends to the restraint system.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a "click" on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

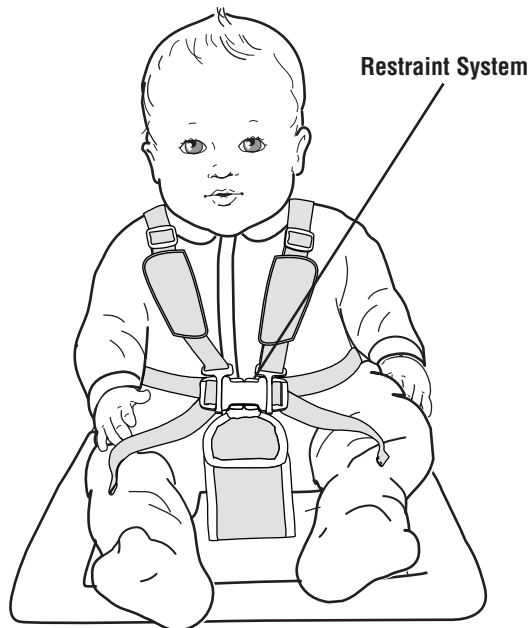


2

- Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.
Please refer to the next section for instructions to tighten the waist belts.

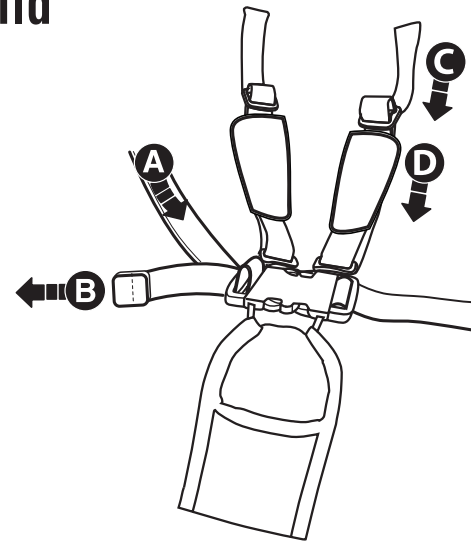

TIGHTEN

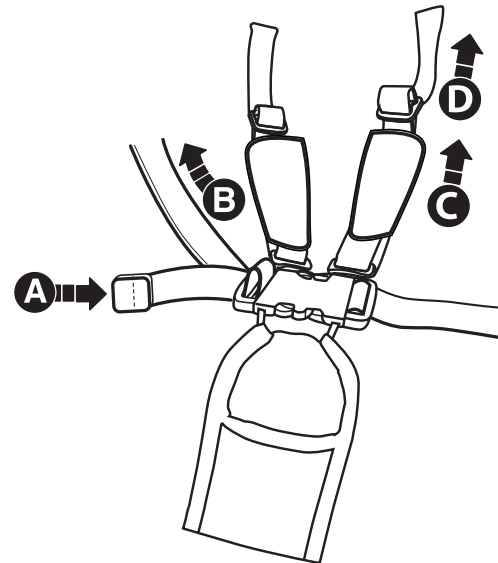

LOOSEN

3

To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **C**. Pull the bottom end down to tighten the strap **D**.
- Repeat this procedure to tighten the other shoulder strap.


To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop **C**. Pull the top end up to loosen the strap **D**.
- Repeat this procedure to loosen the other shoulder strap.

Please note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Storage


Primary Locking Mechanism

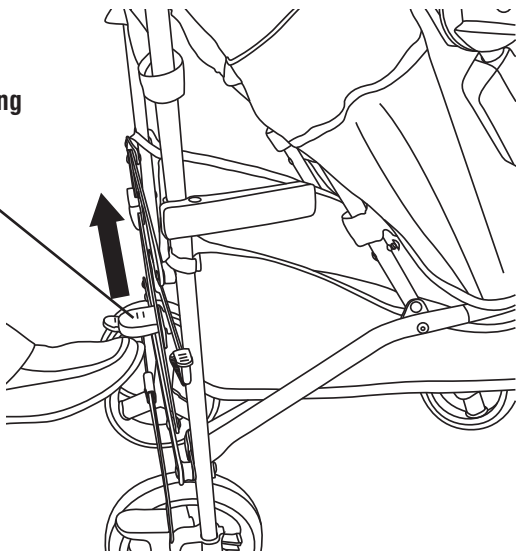


- With your foot, pull up the primary locking mechanism to unlock the stroller.

NOTE: It is recommended that the backrest is in the upright position and canopy is in the folded position before folding the stroller.


Secondary Locking Mechanism

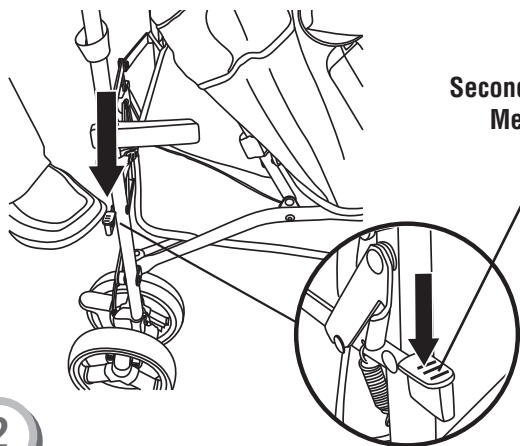


- After primary lock is released gently step down on the secondary locking mechanism until the stroller is ready to fold.

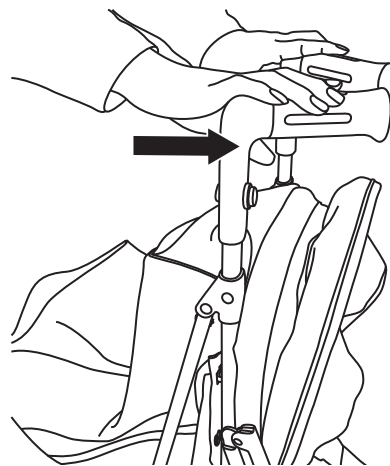

- Push the handles over and the stroller will naturally close into a compact size.

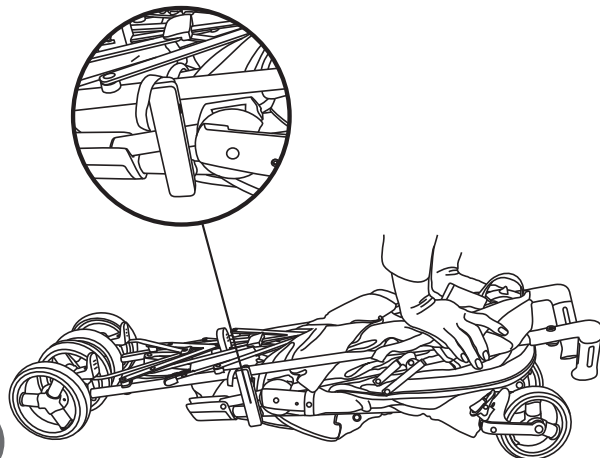

- Ensure the folding latch is locked.

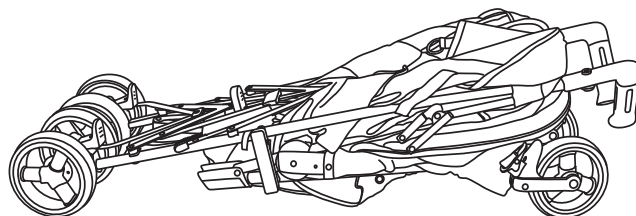

- Your stroller is fully folded into compact size for easy storage and travel.

Manufactured for and distributed by:



114 West 26th Street, New York, NY 10001



Customer Service

Tel. 1-(800)-218-2741

www.DeltaChildrensProducts.com

customerservice@DeltaChildrensProducts.com

MADE IN CHINA