

Lil' Fun Walker

**ASSEMBLY INSTRUCTIONS
ADULT ASSEMBLY REQUIRED**

Delta™
Children's Products

Styles and colors may vary



Required: Phillips Screwdriver

**IMPORTANT: Read all instructions before assembly and use of the Walker
Keep the instructions for future reference**

Customer Care Tel. 1-(800)-377-3777

(B)

www.DeltaChildrensProducts.com

DCP Cat # 01-10-11-V3

Consumer Information



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF WALKER. KEEP INSTRUCTIONS FOR FUTURE USE. INCORRECT ASSEMBLY MAY MAKE THE WALKER UNSAFE. FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

IMPORTANT! – Before assembly or each use of this walker, inspect this walker for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact Delta Children's Products Customer Service Department at 1.800.377.3777 for replacement parts and instructions if needed. Never substitute parts.

- **DO NOT** use walker if it is damaged or broken.
- Before each use clean (friction components) to maintain stopping performance.
- Use only on flat surfaces free of objects that could cause the walker to tip over.
- Never leave the child unattended. Always keep child in view while in walker.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fire places, etc.
- **DO NOT** lift or carry by walker tray, toy tray, or toys.
- This walker is intended for use by children who can sit up unassisted and are learning to walk.
- This walker is intended for children weighing up to 25 lbs (11.8 kg) and those that are not over 30 inches in height.
- Discontinue using this walker when your child can stand unaided or walk unassisted.
- Prevent collisions with glass in rooms, windows and furniture. Always lock the seat in walker function.
- To reduce the chance of child slipping out of seat, always check when used in the walker mode that both feet of child just touch the floor.
- To avoid serious injury **NEVER** carry walker with child in seat.
- **DO NOT** adjust the tray height with your child in the walker.
- To avoid drowning, never use near pools, bathtubs, etc.
- Adult Assembly is required. Make sure all locking devices are fully engaged before each use.

DISCONTINUE USING WALKER SHOULD IT BECOME DAMAGED OR BROKEN. NEVER ALLOW OLDER CHILDREN TO PLAY WITH WALKER OR PUSH WALKER AT ANYTIME WHEN ANOTHER CHILD IS IN THE WALKER SEAT.

- **DO NOT** add any additional toys to the toy tray, use only toys intended to be used with walker.
- **DO NOT** alter the walker by cutting toys away.
- **NOTE** – Individual toys are not replaceable.

WARNING! – STRINGS CAN CAUSE STRANGULATION!

- **DO NOT** add strings or other objects to walker as the child may become entangled in them.
- **DO NOT** place items with a string around a child's neck, such as hood string or pacifier cords.
- **DO NOT** suspend strings over walker or attach strings to toys.

WARNING! – STAIR HAZARD: To avoid serious injury or death


- Never use near stairs. Block stairs/steps securely before using walker.

USE CARE and MAINTENANCE: Wash using mild soap and warm water only.


- Wipe plastic components dry and air dry seat cover.

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.

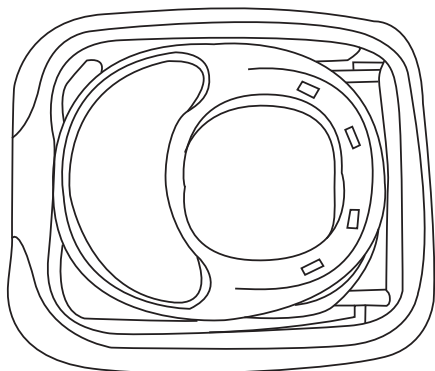


Walker Base

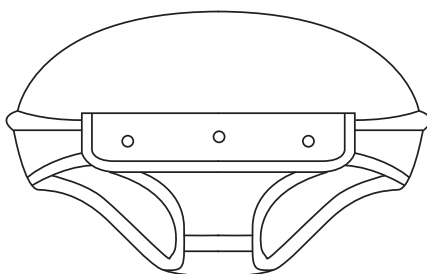


Seat

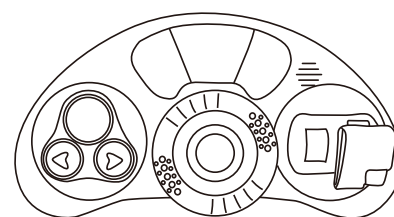


Toy Tray

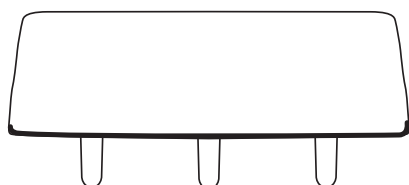

Anti Slip Blocks x6

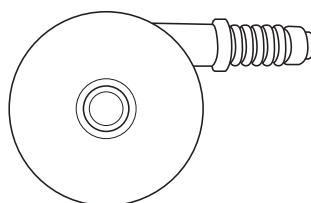

Front Wheels x2

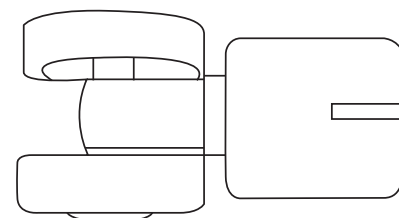

Rear Wheels x2

Battery Safety Information

BATTERY SAFETY INFORMATION



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.

- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

Inserting Battery

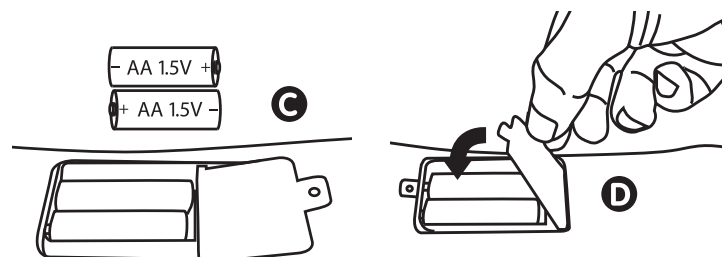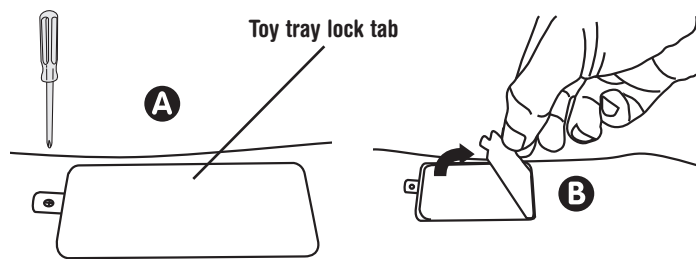



1

- Locate the toy tray.
- Locate toy tray lock tab on the bottom of the toy tray.
- Use a Phillips head screw driver to **A** unfasten the battery cover.
- **B** Lift cover to open battery compartment.

2

- **C** Insert AA batter (x2) as shown in the picture.
- **D** Close battery cover. Use a Phillips head screw driver to fasten the battery cover closed.

Walker Assembly

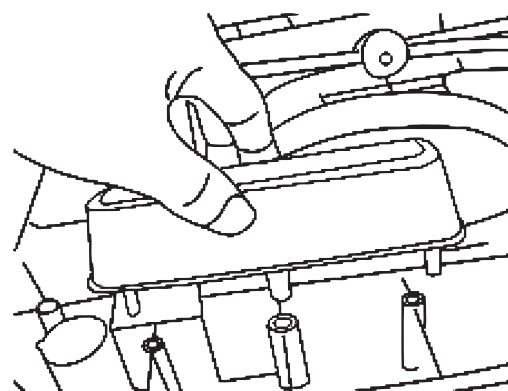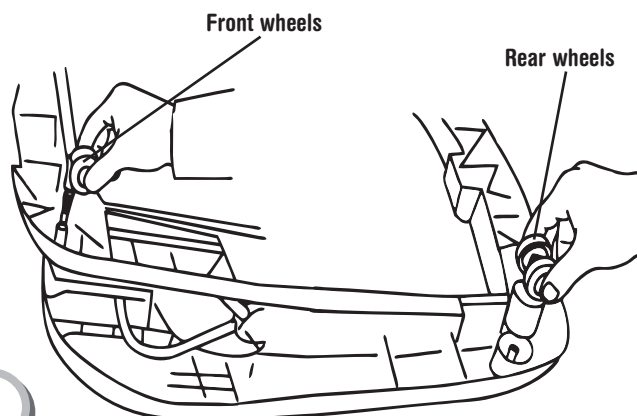


1

- Locate front wheels and walker base.
- Place the walker on a solid flat surface with the bottom facing upwards.
- Insert the pins of the front wheels into their housings until they click into position.
- Pull on wheels to assure they are properly inserted.
- Locate rear wheels and walker base.
- Insert the rear wheels into their housings until they click into place.
- Pull on wheels to assure they are properly inserted.

2


- Locate the walker base and anti slip blocks.
- Insert the anti slip blocks into the receiving holes on the base.
- Push anti slip blocks all the way down until tightly secured to the walker base.
- Pull up on the anti slip blocks to assure they are properly inserted.

Walker Assembly

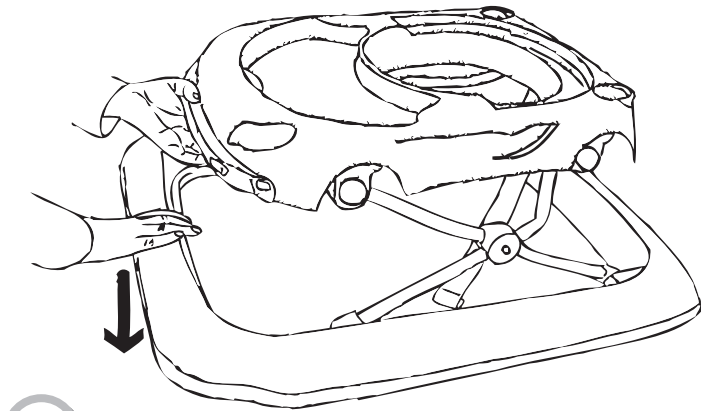



3

- Locate the walker base.
- To raise the walker. Hold the base with one hand while lifting the tray with the other.

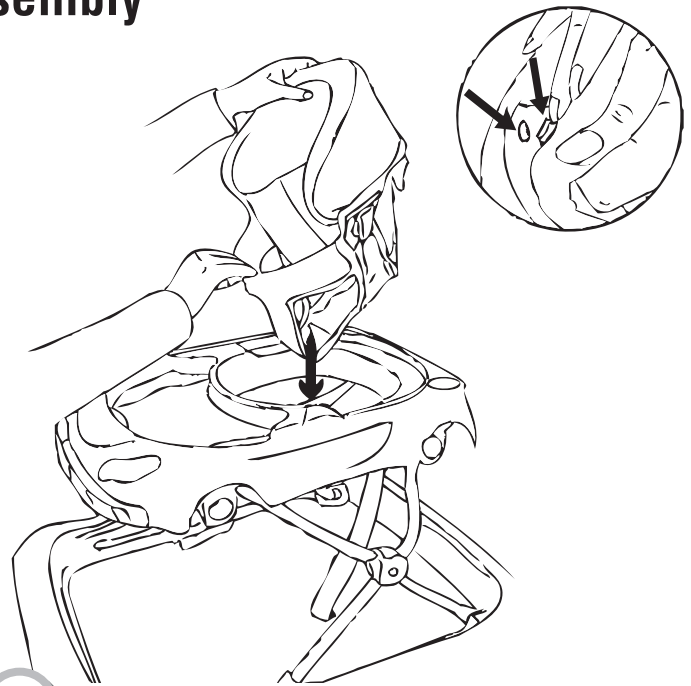


4

- Locate the seat and walker base.
- Insert the pins on the front of the seat into the holes on the front of the seat opening on the walker base and then push down on the plastic pins until they click into position.

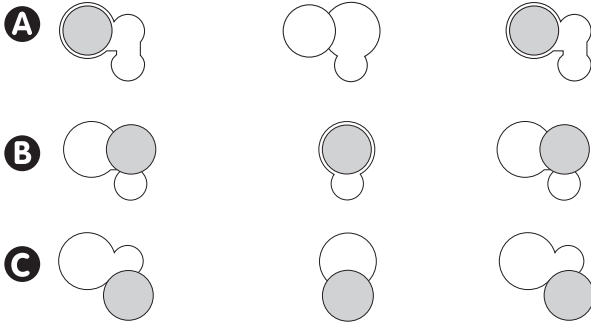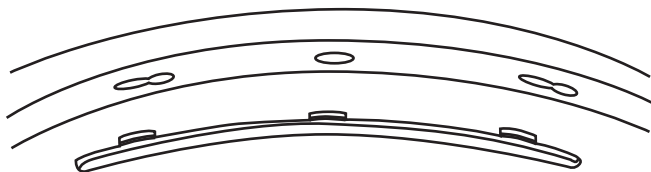

5


- **A** Insert firstly two outer pins built-in at the fastening parts to the round hole at the upper tray as illustrated.
- **B** Move the plastic fastening panel to the right direction so all 3 pins join the position properly.
- **C** Move the plastic fastening panel downward to the lowest position of holes to complete the assembly.

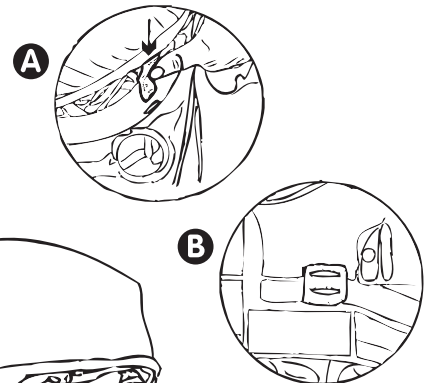

6

- To attach the rear of the seat, **A** thread the straps with the buckles through the corresponding slots on the tray recess.
- **B** From the underside, pull the straps completely through and pivot the buckle to lie flat against the underside of the tray.


Walker Assembly

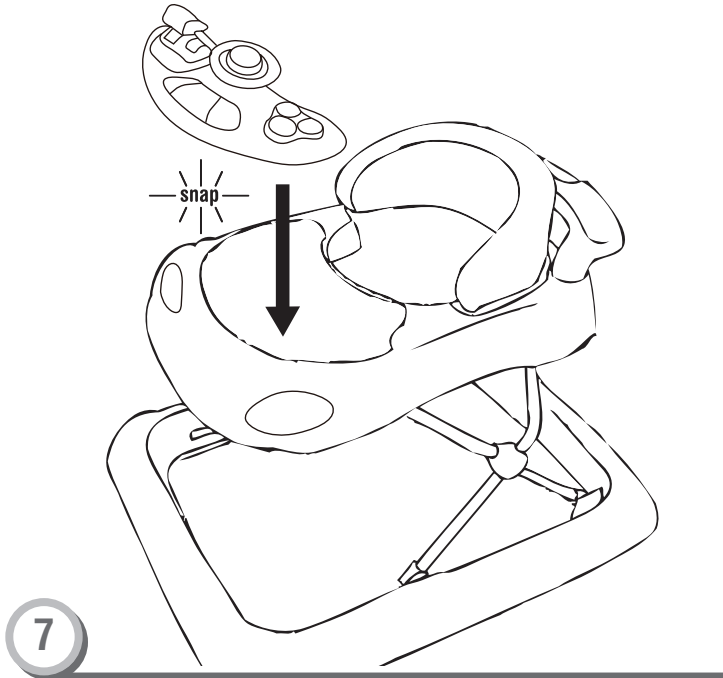

- Locate activity tray and walker base.
- Place the activity tray into the recess on the top tray and push down until the notches engage.
- To release, press the locking buttons in from underneath the tray.


NOTE: On/Off switch is located on the underside of the toy tray.

Adjust the Walker

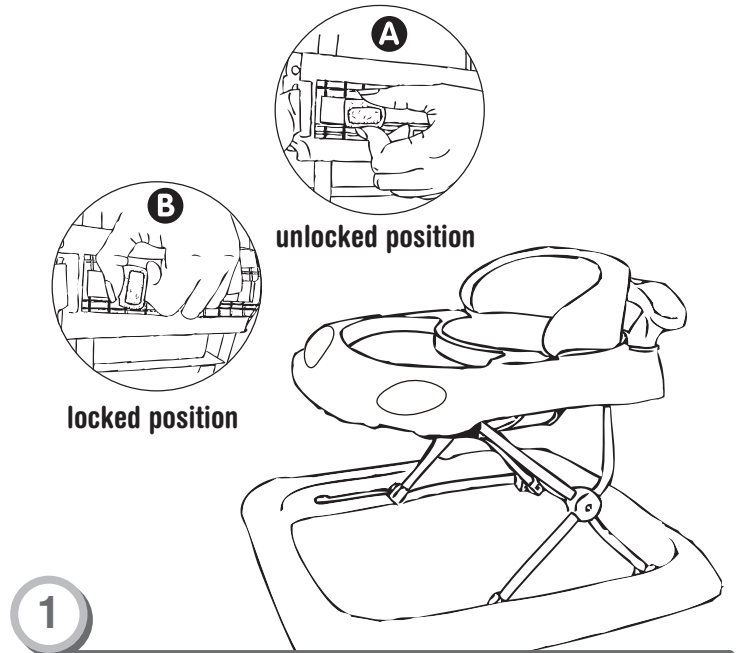

- Turn the safety button lengthwise **A** and press the button until the mechanism is released. With the button still pressed in, select new height. Three different height positions are available.
 - When the new position has been selected, **B** release the button and check it has turned 90 degrees back to original position.
- WARNING:** DO NOT adjust the seat height with the baby in the walker. Remove the baby from the walker when adjusting the seat height.

To Fold the Walker

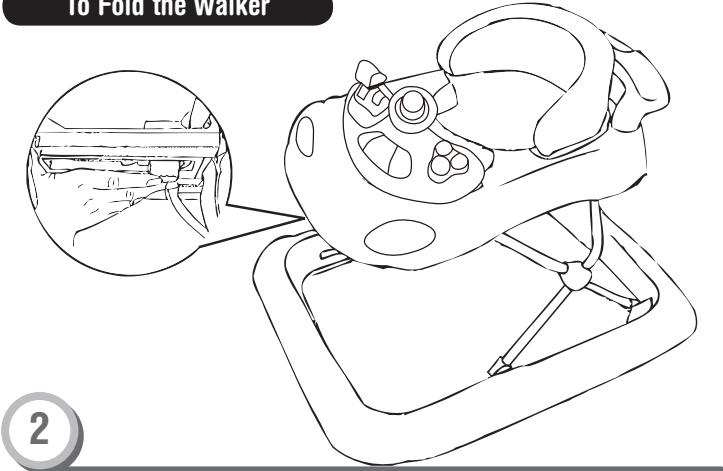

- Turn button to unlock as shown in step 1, push the button to release and hold the button down. Easily lower the walker into complete folded position.

Manufactured for and distributed by:



114 West 26th Street, New York, NY 10001



Customer Service
Tel. 1-(800)-377-3777
www.DeltaChildrensProducts.com
customerservice@DeltaChildrensProducts.com

MADE IN CHINA