

# Lil' Drive Walker

**ASSEMBLY INSTRUCTIONS**  
**ADULT ASSEMBLY REQUIRED**

**Delta**<sup>™</sup>  
Children's Products

Styles and colors may vary



**Required: Phillips Screwdriver**

**IMPORTANT: Read all instructions before assembly and use of the walker**  
**Keep the instructions for future reference**

**Customer Care Tel. 1-(800)-377-3777**

**(B)**

**[www.DeltaChildrensProducts.com](http://www.DeltaChildrensProducts.com)**

DGP Cat # 02-23-11-V2

## Consumer Information



### WARNING

**WARNING:** Read all instructions before assembly and use of the walker (keep the instructions for future reference), incorrect assembly may make the walker unsafe. Failure to follow these warnings and the instructions could result in serious injury or death.

- DO NOT use walker if it is damaged or broken.
- DO NOT use walker until baby can sit up by itself.
- Before each use clean (friction components) to maintain stopping performance.
- Never leave the child unattended.
- Always keep child in view while in walker.
- Use only on flat surfaces free of objects that could cause the walker to tip over.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fire places, etc.
- DO NOT lift or carry by walker tray, toy tray, or toys.
- This walker is intended for use by children who can sit up unassisted and are learning to walk.
- This walker is intended for children weighing up to 25 lbs (11.8 kg) and those that are not over 30 inches in height.
- Discontinue using this walker when your child can stand unaided or walk unassisted.
- Prevent collisions with glass in rooms, windows and furniture.
- Always lock the seat in walker function.
- To reduce the chance of child slipping out of seat, always check when used in the walker mode that both feet of child just touch the floor.
- To avoid serious injury never carry walker with child in seat.
- Adult Assembly is required.
- Make sure all locking devices are fully engaged before each use.



### WARNING

- To avoid drowning, never use near pools, bathtubs, etc.
- DO NOT spin baby in seat.  
Only permit baby to rotate the seat.
- Never allow older child to play with walker or push walker at any time when another child is in the walker seat.
- DO NOT adjust the tray height with your child in the walker.
- DO NOT add any additional toys to the walker activity tray, use only toys intended to be used with walker.
- DO NOT alter the walker by cutting toys away.
- DO NOT add strings or other objects to walker as the child may become entangled in them.
- Strings can cause strangulation!
- DO NOT place items with a string around a child's neck, such as hood string or pacifier cords.
- DO NOT suspend strings over walker or attach strings to toys.
- Never use near stairs.

### WARNING – STAIR HAZARD:

- Avoid serious injury or death
- Block stairs/steps securely before using walker.

**IMPORTANT** – Before assembly or each use of this walker, inspect this walker for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Delta Children's Products Customer Service Department at 1.800.377.3777 for replacement parts and instructions if needed. Never substitute parts.


**NOTE** – Individual toys are not replaceable.  
**USE CARE and MAINTENANCE** –

Wash using mild soap and warm water only.


Wipe plastic components dry and air dry seat cover.

# Parts


**IMPORTANT!** Please remove all parts from the package and identify them before assembly.

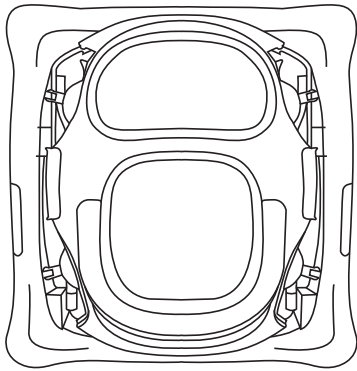


**Walker Base**

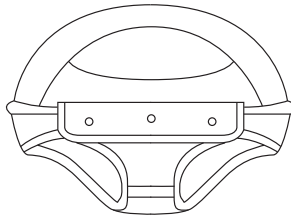


**Fabric Seat**

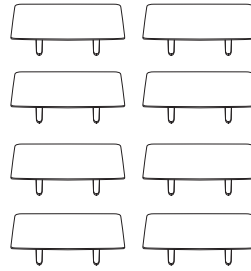


**Stair Stoppers x8**

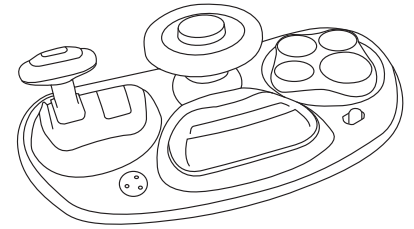


**Toy Tray**

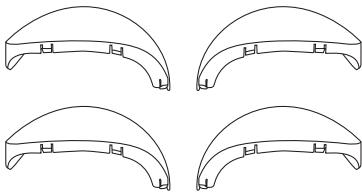


**Fenders x4**

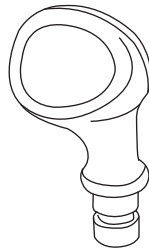

**Mirror Toy**


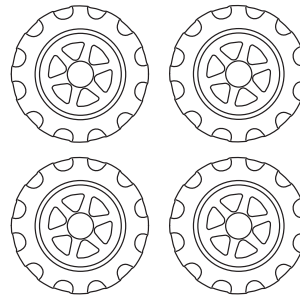


**Wheels x4**

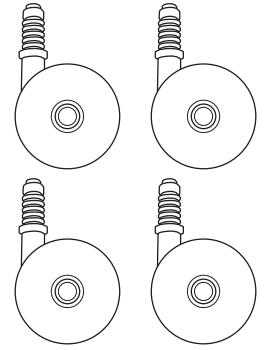

**Casters x4**


## Walker Assembly

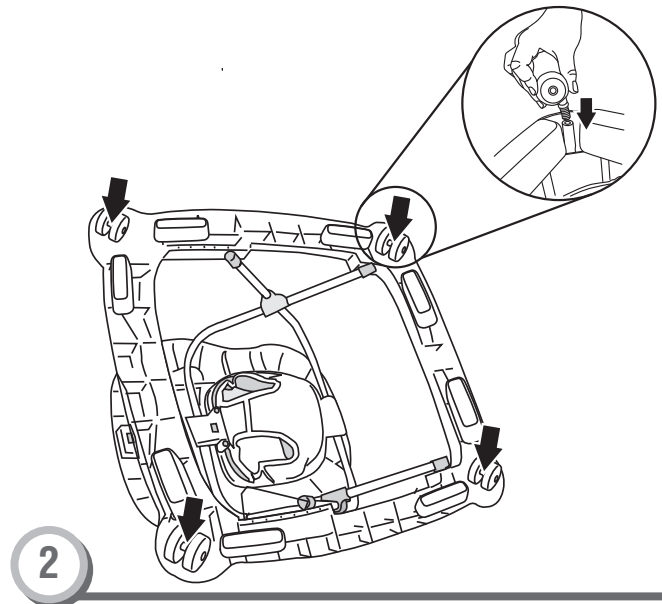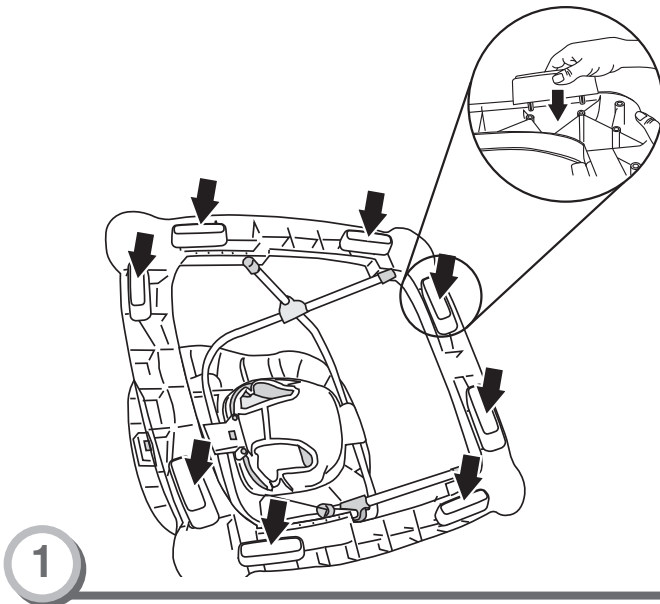


- Locate the walker base and stair stoppers.
  - Place the walker on a solid flat surface with the bottom facing upwards.
  - Push stair stoppers all the way down until tightly secured to the walker base.
  - Pull up on the stair stoppers to assure they are properly inserted. Repeat with seven other stair stoppers.

- Locate wheels and walker base.
  - Insert the pins of the wheels into their housings until they click into position.
  - Pull on wheels to assure they are properly inserted. Repeat with three other wheels.

# Walker Assembly

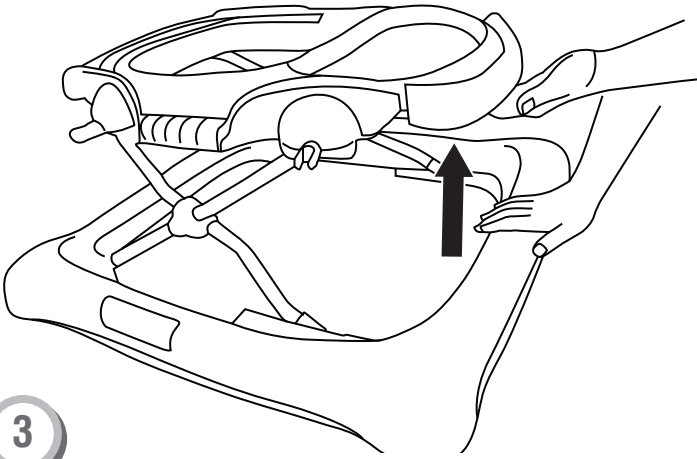


- Locate the walker base.
- To raise the walker. Hold the base with one hand while lifting the tray with the other.

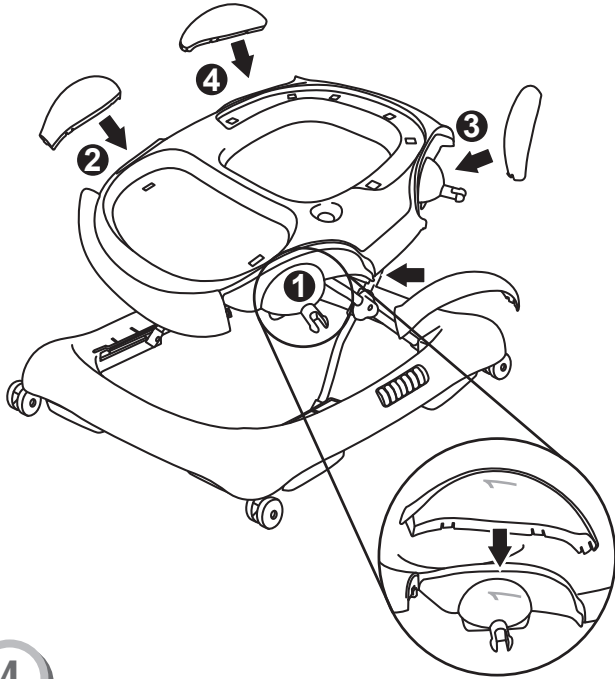


## Attaching the Fenders

- Locate the fenders and the walker base.
- Insert the fenders onto the walker base.
- Push the fenders down until you hear the “click” into the locked position.
- Pull up on the fenders to assure it is properly locked in position.
- Repeat this procedure for three remaining fenders.

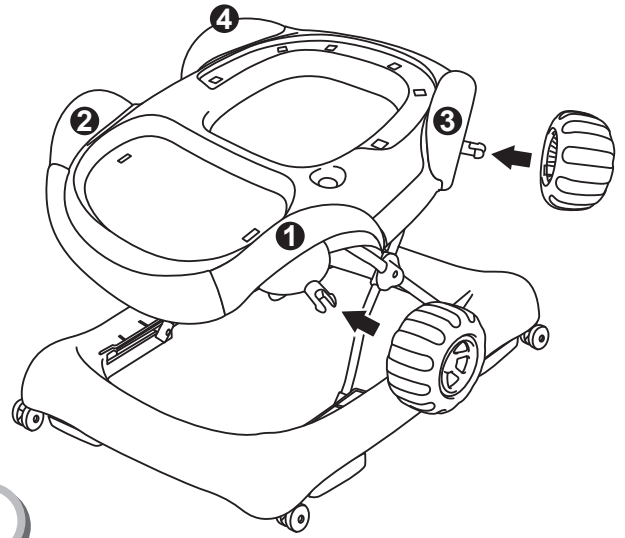

## Attaching the Wheels


- Locate the wheels and walker base.
- Push the wheel onto the wheel peg until you hear it “click into the locked position.
- Pull out on the wheel to assure it is properly locked in the use position.
- Repeat this procedure for three other wheels.

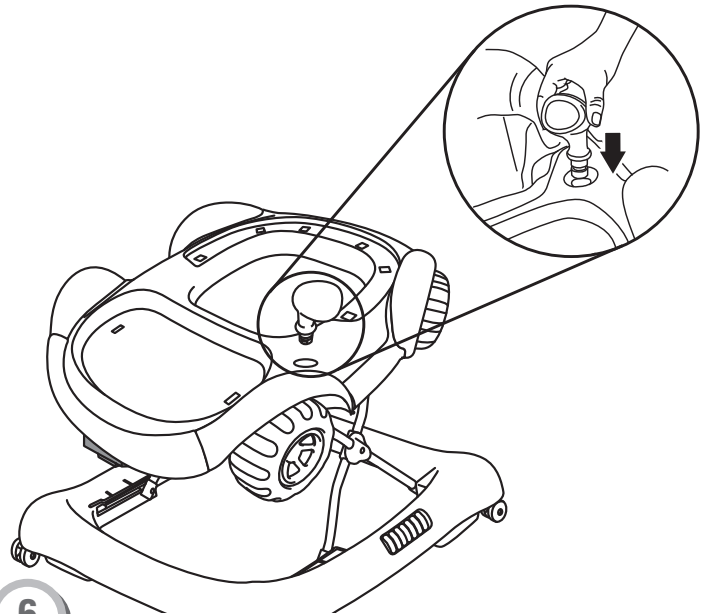


## Attaching the Mirror Toy

- Locate the mirror toy and walker base.
- Insert the mirror toy into the mirror toy opening.
- Push down on the mirror toy until it “click” into the use position.
- Pull up on the mirror toy to assure it is properly locked in the use position.



# Walker Assembly

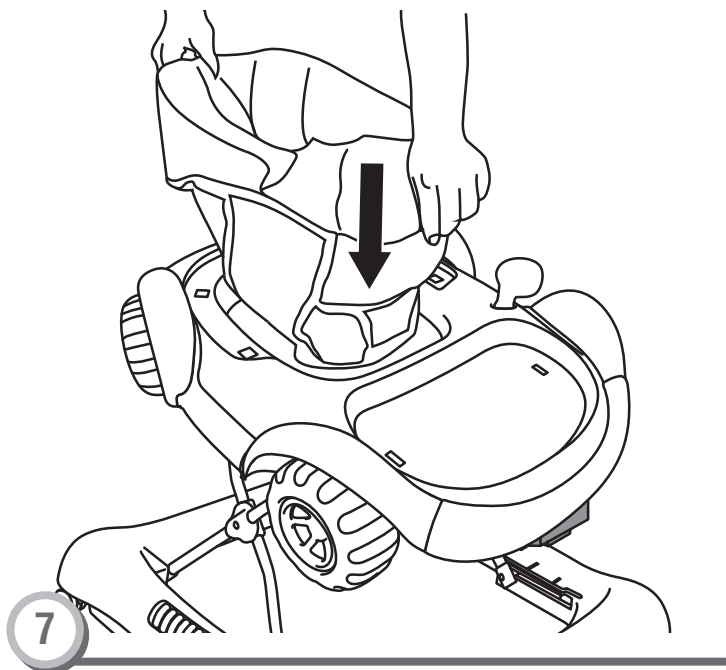

- Locate the seat and walker base.
- Insert the pins on the front of the seat into the holes on the front of the seat opening on the walker base and then push down on the plastic pins until they click into position.
- See step 8 for details illustration.

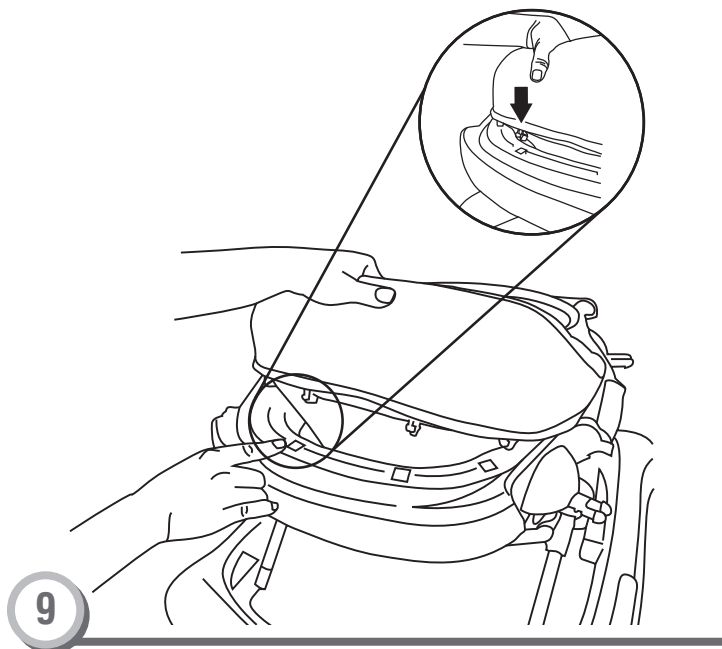

- To attach the rear of the seat, insert the seat clips into the clip holes until it “clicks” and properly inserted.
- Pull up the seat to make sure the seat clip is properly inserted.
- Repeat with five others seat clips.

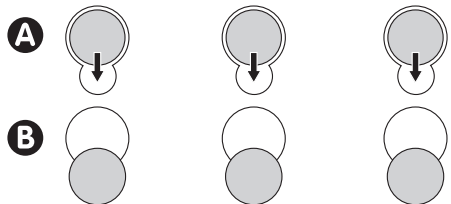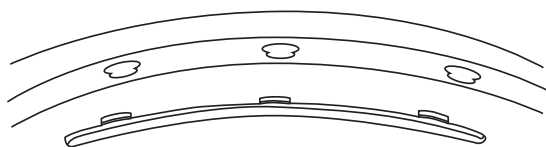


- **A** Insert the three pins on the front of the seat into the hole openings on the front of seat opening.
- **B** Push the front seat pins down until you hear them “click” into the use position.



# Walker Assembly

## To Attach Toy Tray

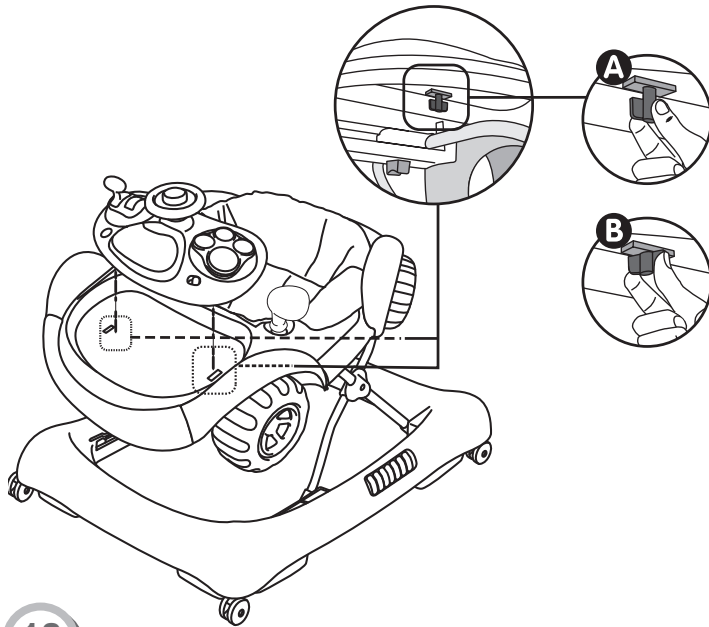


10

- Locate toy tray, toy tray lock slots, and walker base lock tabs.
- Align the walker base lock tabs with toy tray lock slots and place the toy tray on the seat base.
- **A** Push the walker base lock tabs and **B** turn the walker base lock tabs to secure.
- Pull up on toy tray to make sure it is properly assembled.

**NOTE:** Please see battery safety information and installation section on page 7.

## To Adjust the Walker

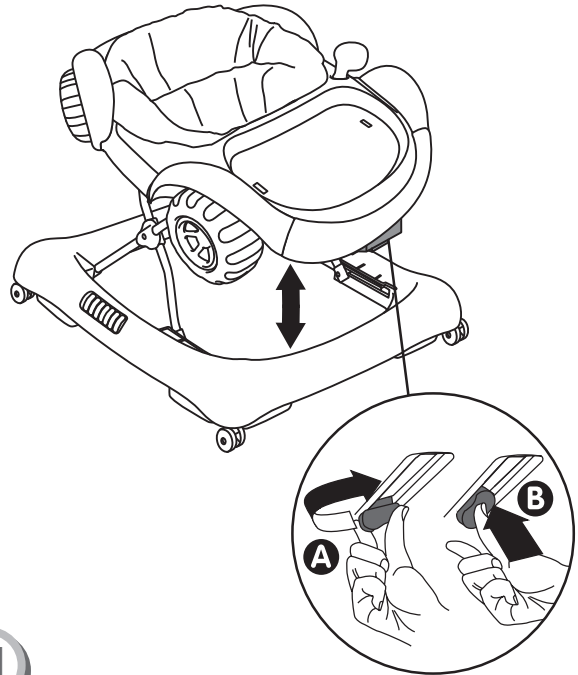

11

- Turn the safety button lengthwise **A** and press the button until the mechanism is released. With the button still pressed in, select new height. Three different height positions are available.
- When the new position has been selected, **B** release the button and check it has turned 90 degrees back to original position.

**WARNING: DO NOT** adjust the seat height with the baby in the walker. Remove the baby from the walker when adjusting the seat height.

## To Fold the Walker

- Turn the safety button lengthwise **A** and press the button until the mechanism is released. With the button still pressed in, easily lower the walker into folded position then **B** release the button into its original position.

# Battery Safety Information

## BATTERY SAFETY INFORMATION


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

### To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.

- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.


- Locate the toy tray
- Locate toy tray lock tabs on the bottom of the toy tray.

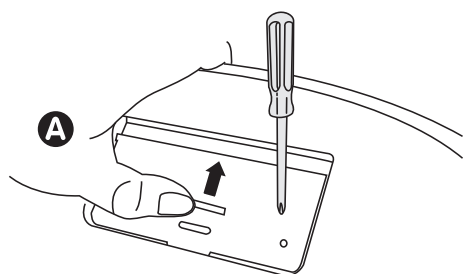


- Use a Phillips head screw driver to **A** unfasten the battery cover and push the tab to releases open.

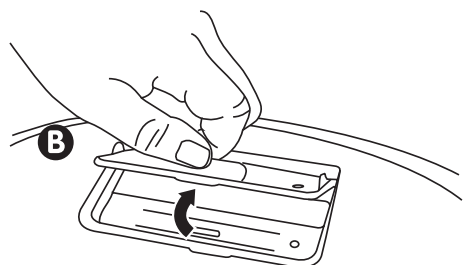


- **B** Lift cover to open battery compartment.

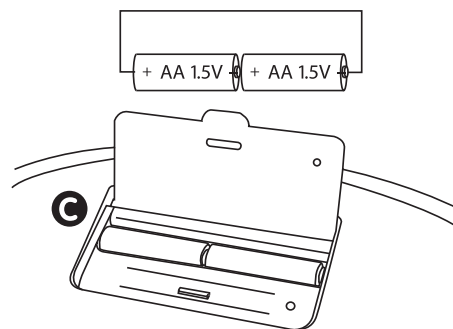

- **C** Insert AA batter (x2) as shown in the picture.

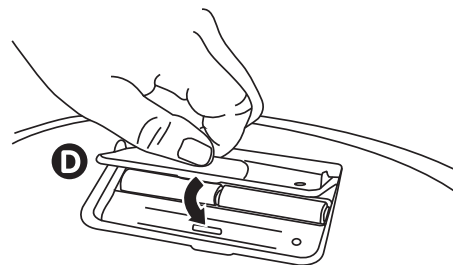

- **D** Close battery cover.

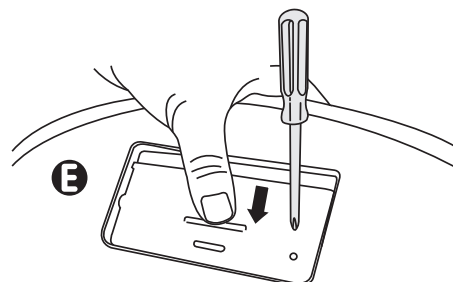

- Push back the cover into the slot and **E** Use a Phillips head screw driver to fasten the battery cover closed.

Manufactured for and distributed by:

**Delta**<sup>™</sup>  
Children's Products

114 West 26th Street, New York, NY 10001



Customer Service

Tel. 1-(800)-377-3777

[www.DeltaChildrensProducts.com](http://www.DeltaChildrensProducts.com)

[customerservice@DeltaChildrensProducts.com](mailto:customerservice@DeltaChildrensProducts.com)

MADE IN TAIWAN