


Delta[™]
Children's Products

Upright Stroller Owner's Manual

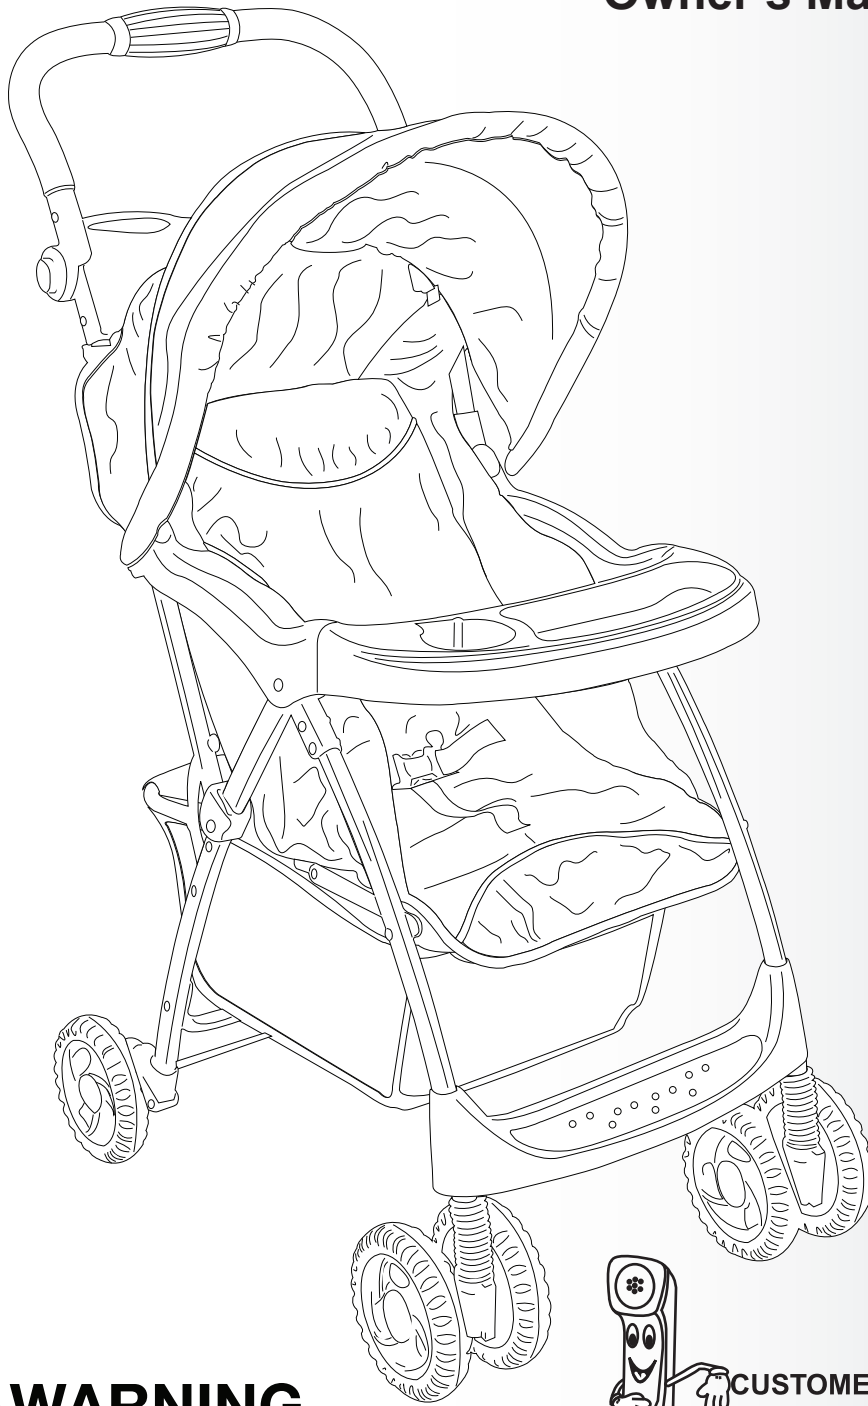

⚠ WARNING
Adult assembly required.



CUSTOMER SERVICE
114 West 26th Street
New York, NY 10001
Tel. 212-645-9033

www.deltachildrenproducts.com

▲ WARNING:

Avoid serious injury from falling or sliding out. Always use seat belt. Your child's safety depends on you. Proper stroller use cannot be assured unless you follow these instructions. **DO NOT USE STROLLER UNTIL YOU READ AND UNDERSTAND THESE INSTRUCTIONS.**

▲ WARNING:

IMPORTANT SAFETY INFORMATION

- **NEVER LEAVE YOUR CHILD UNATTENDED WHILE IN STROLLER.**

Accidents can happen quickly while your back is turned. You must always keep your child in view while your child is in the stroller, even when sleeping. Your child may become tangled in straps or pads and suffocate.

- Always use restraint system to keep child from standing up or falling out of the stroller.
- Always balance the weight of the stroller evenly. To prevent the stroller from becoming unstable or tipping:
 - Do not allow children to play with or hang onto the stroller.
 - Always lock the stroller open before allowing your child in or near the stroller. This prevents injuries caused by the stroller collapsing.
 - Only use this stroller with children who weigh less than 35lbs. (15.88kgs). Use by larger children may damage the stroller, or cause a hazardous unstable condition to exist.
 - Always set the wheel brakes when stroller is not moving, especially on an incline. This prevents the stroller from rolling away.
 - Never use this stroller on stairways or escalators.
 - This is not an exercise stroller!

Do not use this product while running, jogging, in-line skating or participating in other athletic activities.


- Only use this stroller if child can hold head up unassisted.
- Maximum weight capacity of storage basket is 3 lbs. Placing excessive weight in the stroller bag or adding other package carrying accessories may cause a hazardous unstable condition.

Care and maintenance

- To clean, use only a damp cloth or sponge. Wipe plastic parts with a damp cloth using mild soap.
- To keep your stroller running smoothly and avoid squeaking wheels use a silicone or graphite based lubricant.
- When storing stroller, never stack other items on top of it. This may damage the stroller.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Repair or replace parts as needed.
- Discontinue use of the stroller should it malfunction or become damaged. Please contact our customer service department for repair or to obtain replacement parts.

ASSEMBLY


PARTS

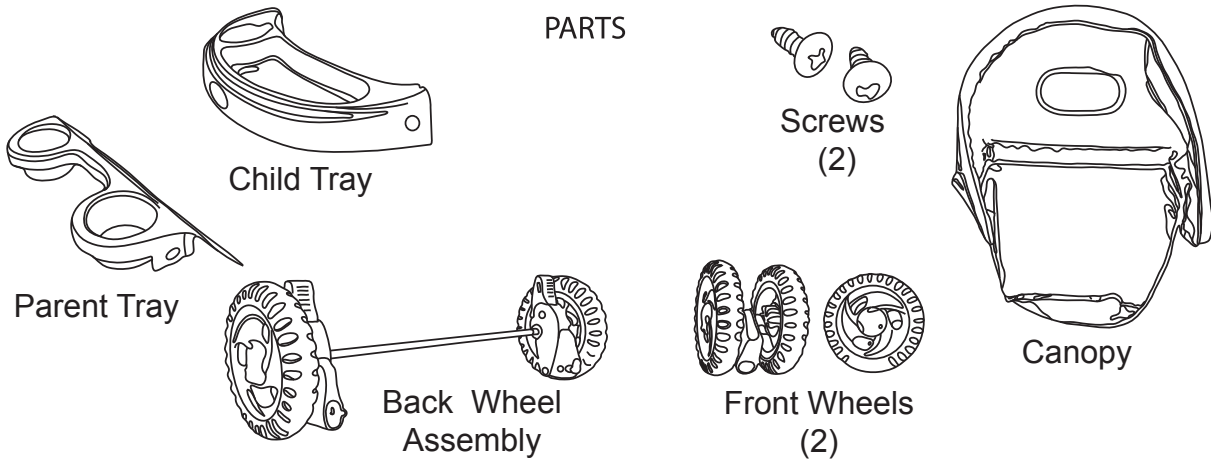

Check that you have all the parts shown before assembling your product. If any parts are missing, please call customer service.

STEP 1


TO OPEN STROLLER

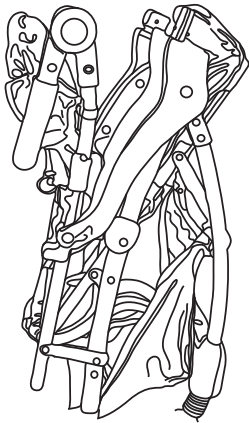

Remove stroller from the box and clear away from plastic bag and protective foams.




Press the red button on each side of the handle to adjust the level of the handle.

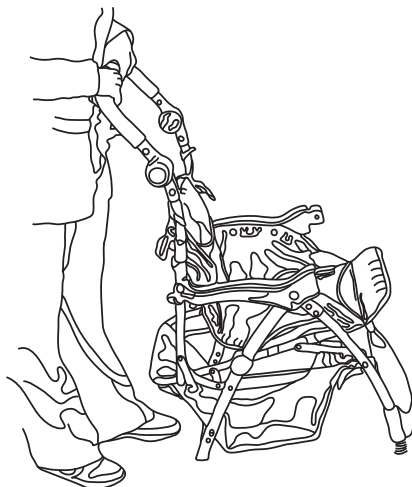


To open stroller, pull handle upward toward you until you hear a click.

STEP 2

INDIVIDUAL FRONT WHEELS & BACK WHEEL ASSEMBLY

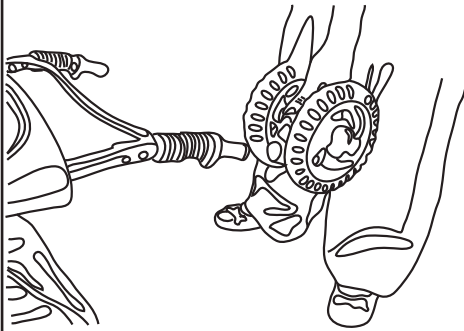


To insert front wheels, align the wheel to the front leg of the stroller and insert wheel until you hear a click. Then pull downward on wheel to check and make sure wheels are securely fastened. Repeat on the other side.

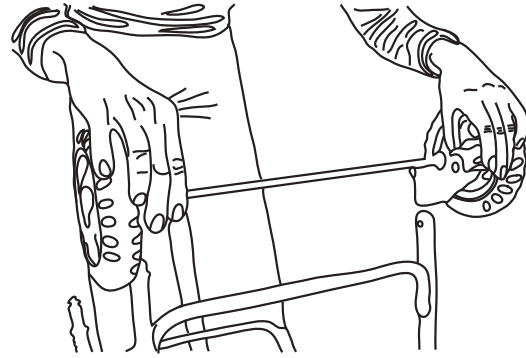


Turn the stroller upside down, align the back wheel assembly to the back legs of the stroller. Insert the wheel housing onto the stroller legs until you hear a click. Make sure the brake locks are facing towards adjustable handles.

STEP 3


INSERTING CANOPY & PARENT TRAY

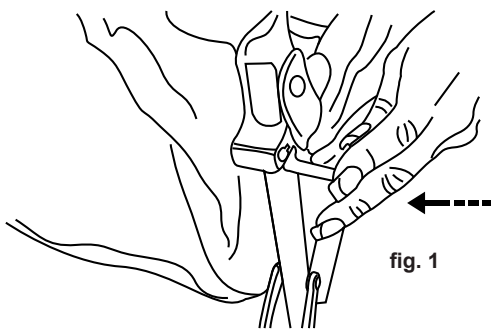


Insert canopy support wire into the opening slots on each side of the stroller (see fig.1). Once inserted rotate back into position.

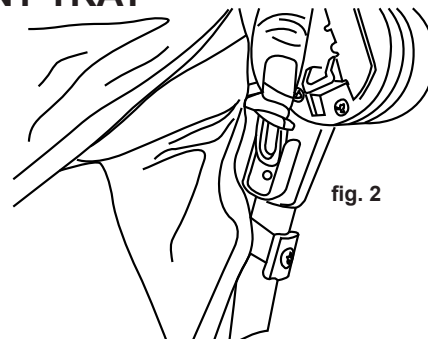

Insert middle canopy wire supports under the adjustable handle housing (see fig.2).

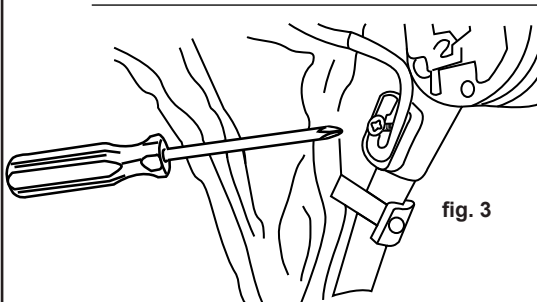


Screw canopy wire support onto frame to secure the canopy (see fig.3). Repeat on the other side. Locate on the canopy 4 hook and loops to secure canopy onto the stroller.

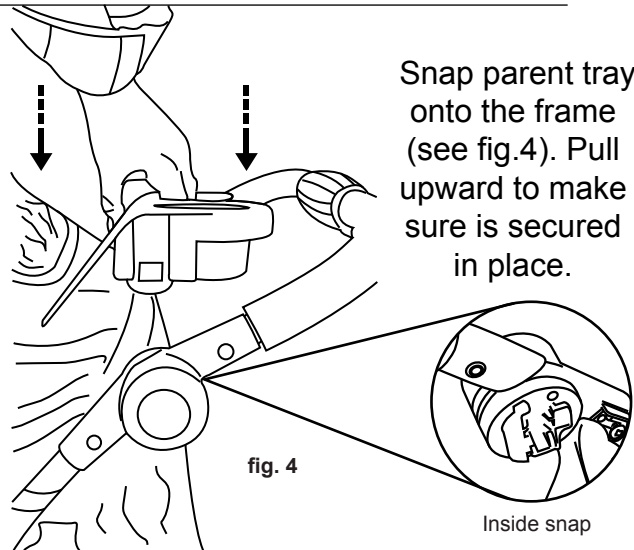


Snap parent tray onto the frame (see fig.4). Pull upward to make sure is secured in place.

STEP 4 INSERTING CHILD TRAY

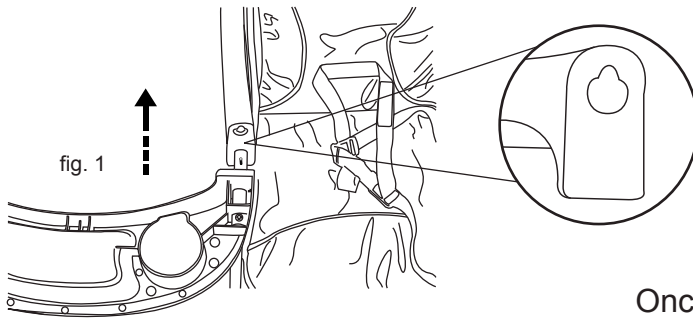


Flip the child tray upside down and align the snap and lock button to the side of the tray tube as shown on fig. 1. Insert the tray onto the tray support tube until you hear a click.

fig. 2

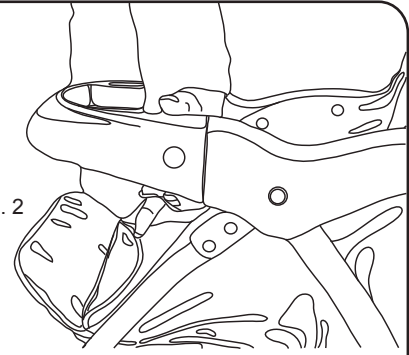


Once the child tray is securely inserted and fastened onto the tray tube, rotate the child tray into a locked position (shown in fig.2). To open, press the button lock and rotate tray upward.

STEP 5 BACK SEAT RECLINING


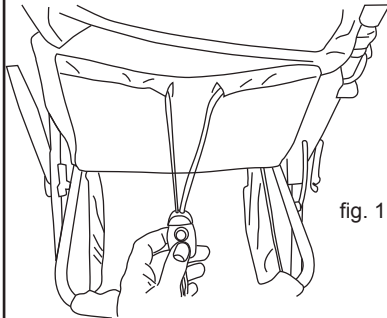


Press button on cord housing and pull away to recline seat, as shown in fig. 1. To return to an upright position, hold cord loop while moving cord housing towards the backseat.

STEP 6 ATTACHING CAR SEAT

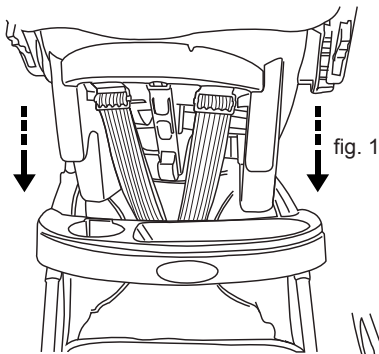

To use the car seat feature, lock back wheels and recline the back seat to its lowest point and fold canopy closed. Align car seat as shown in fig.1. Angle feet first, while lowering car seat into a locked position on the child tray.

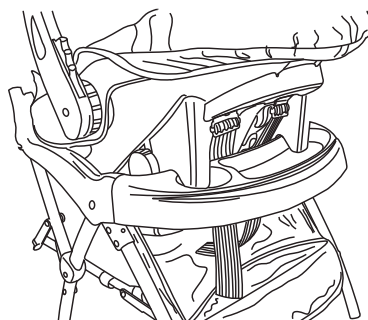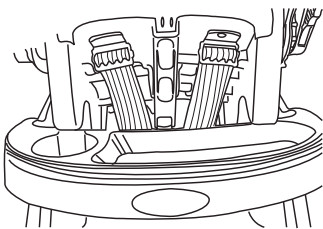

(car seat attached and locked to child tray)



Final step to secure car seat onto the stroller, turn and lock red latches (fig.2). Check that car seat is securely attached by pulling up on the car seat handle. To remove, undo latches and unlock car seat from childtray.


STEP 6B**ATTACHING EVENFLO® CAR SEAT**

fig. 1

To use the EVENFLO® car seat feature, lock back wheels and recline the back seat to its lowest point and fold canopy close. Align car seat as shown in fig.1. Angle feet firsts, while lowering car seat into a locked position on the child tray.







fig. 2

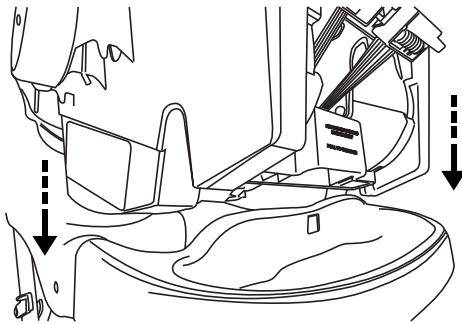


Final step to secure car seat onto the stroller, wrap elastic webbing cord around are seat hook (fig.2). Secure webbing with the hook and loop. Check that car seat is securely attached by pulling up on the car seat handle. To remove, undo latches and unlock car seat from childtray.


STEP 7 TO SECURE BABY

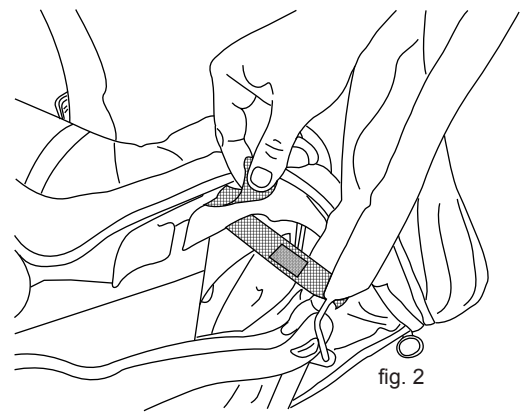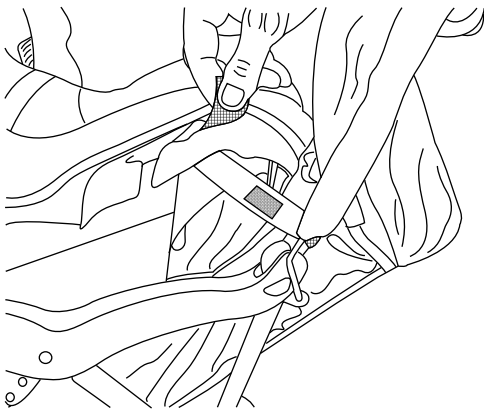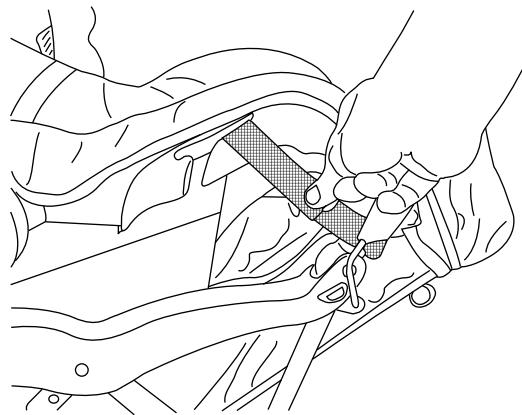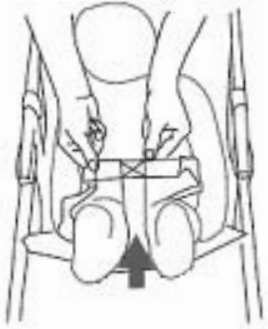

Place child in the stroller seat and bring the seat belt around child's waist. Place the crotch strap between the child's leg.

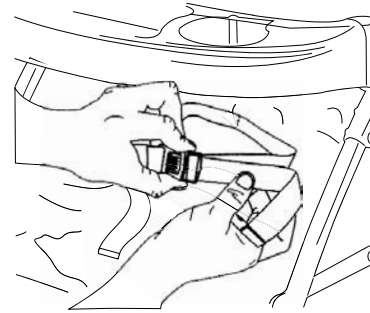

Pull strap to adjust size to best fit your child.

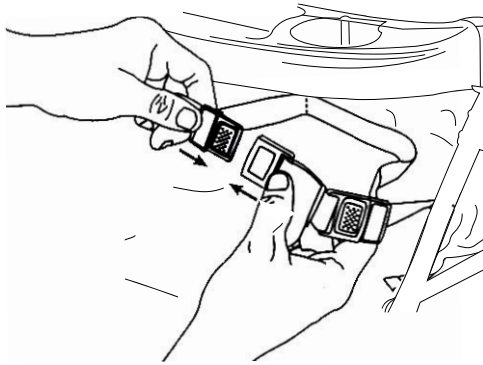

To fasten seat belt buckles snap buckles together. Be sure both buckles are fastened to secure child safety. To release seat belt buckles - press center tab and pull apart.

STEP 8 FOLDING STROLLER

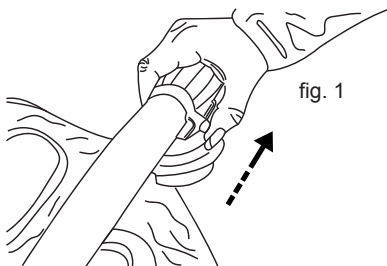


fig. 1

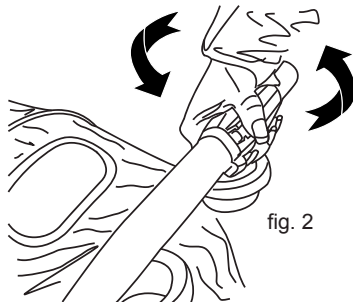


fig. 2

When closing stroller, the seat should be in an upright position. Grip onto the stroller handle, placing thumb on the red button (fig. 1). Shift button to the right and at the same time, rotate hand upward (fig. 2). This will allow the stroller to fold in an upright position (fig. 3).

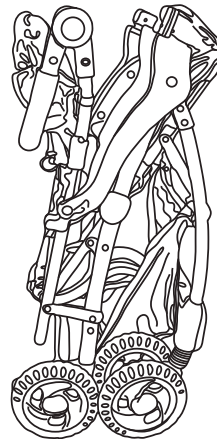


fig. 3

Lock storage latch on side of stroller.