


## H573 - Ceiling Mount for Logitech BRIO

**To reduce the risk of severe injury or death to persons, review these installation safety steps before proceeding:**

1. This product hangs overhead in a commercial setting and is installed directly to the structure of the room. Therefore, this product should be installed by a professional.
2. The fasteners provided to install the mount to the ceiling tile are provided for your convenience and are suitable for most conventional ceiling tiles. However, a professional should determine if the hardware provided is suitable for your specific installation.
3. Use the support bracket provided in all ceiling tile installations. Failure to use this bracket could result in structural failure of the ceiling tile.
4. This product is designed for ceiling tiles that are 24 inches wide or 24 inches long, or 24 inches square. Do not use this product with ceiling tiles that do not have these specifications.
5. The USB extender should be installed within the body of the mount, below the ceiling tile. The USB extender should not be positioned in the air plenum above the ceiling tile

## IN THE BOX


- A 1x Ceiling Mount
- B 1x Support Bracket
- C 4x Mounting Wingnut
- D 4x Self-Retaining Washer
- E 4x Mounting Screw
- F 1x Camera-Mounting Screw
- G 1x Hex Key, 9/64"
- H 1x Hex Key, 5/32"

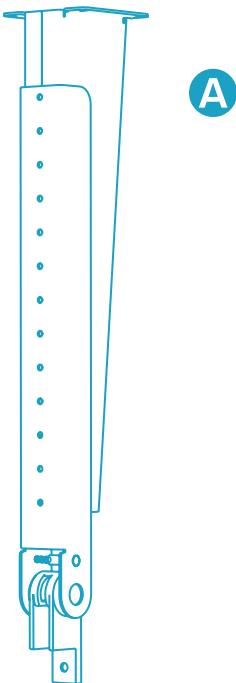


A



B

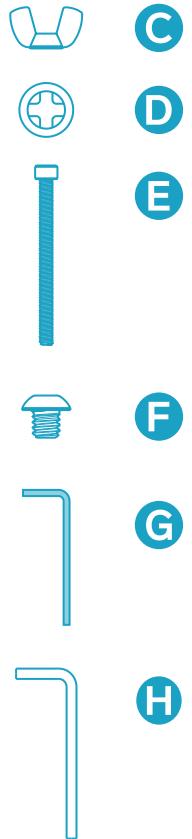

## TOOLS NEEDED

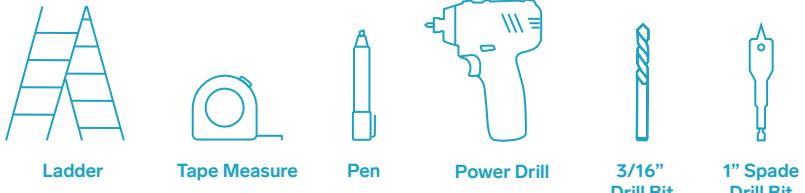



## COMPONENTS NEEDED (Not Included)




If you have any questions, please contact  
[service@hecklerdesign.com](mailto:service@hecklerdesign.com).

## STEP 1

### Disassemble Ceiling Mount

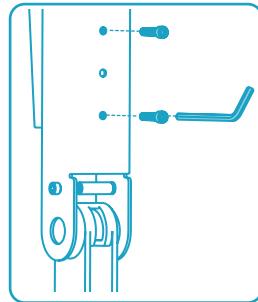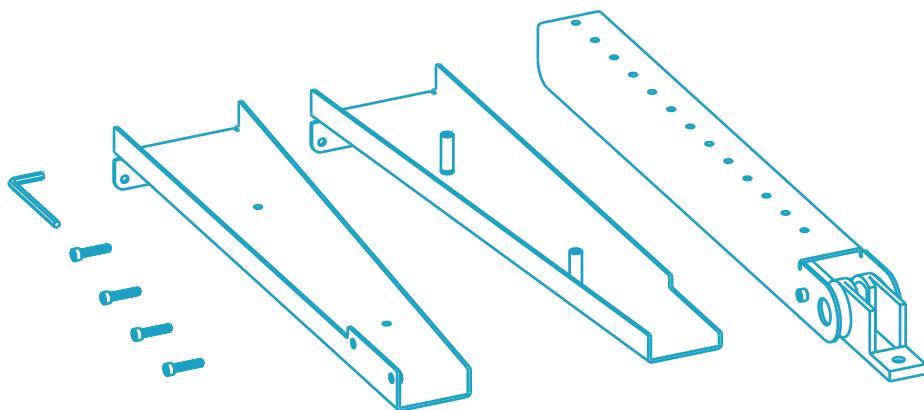



1. Use the 9/64" Hex Key to remove front screws.

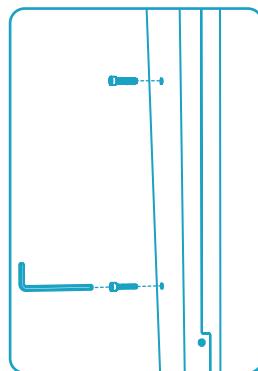

2. Use the 9/64" Hex Key to remove side screws.

## STEP 2
 
### Configure the USB ranger extender and cable

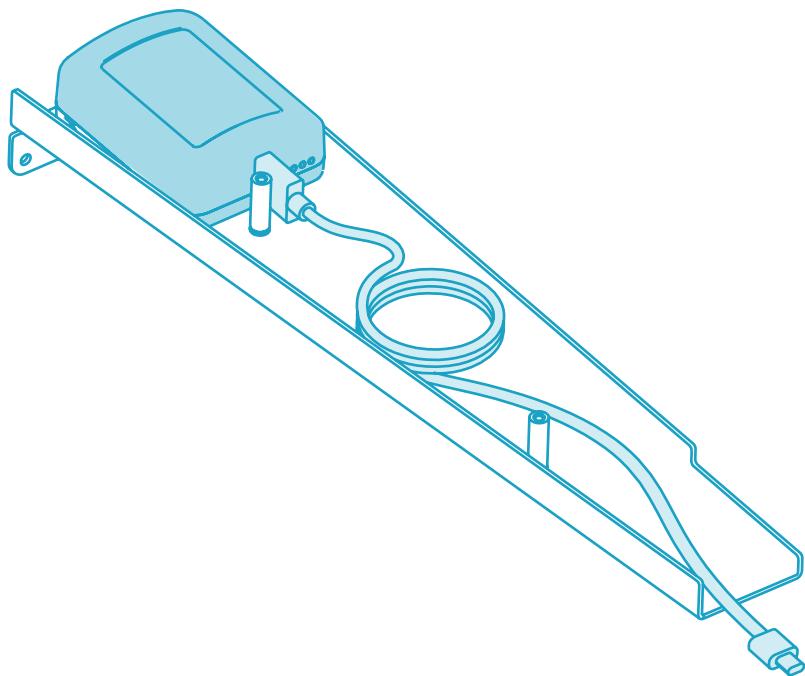



Position the USB ranger Extender above the post

Organize the cable to best fit inside the mount.

Leave extra cable for future adjustment.

## STEP 3

Fasten the cover

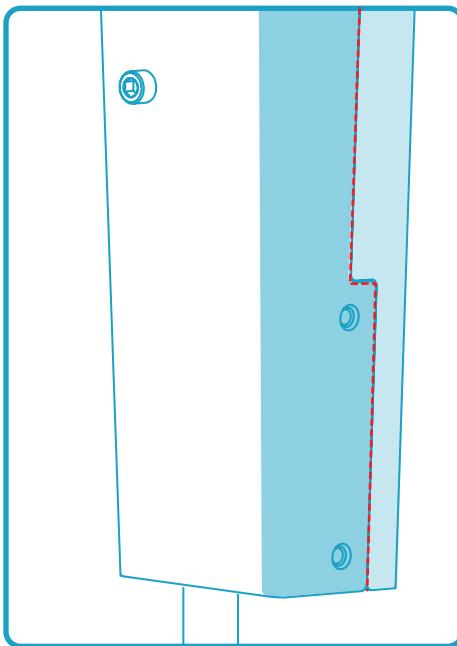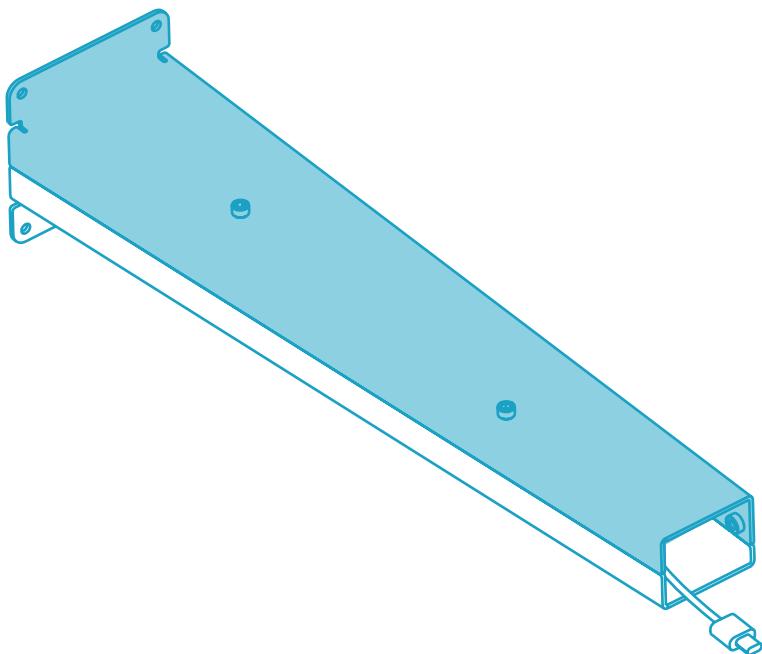


**Important:**

Please align the tab to guide screws  
into posts.


## STEP 4

### Determine the length of the Mount

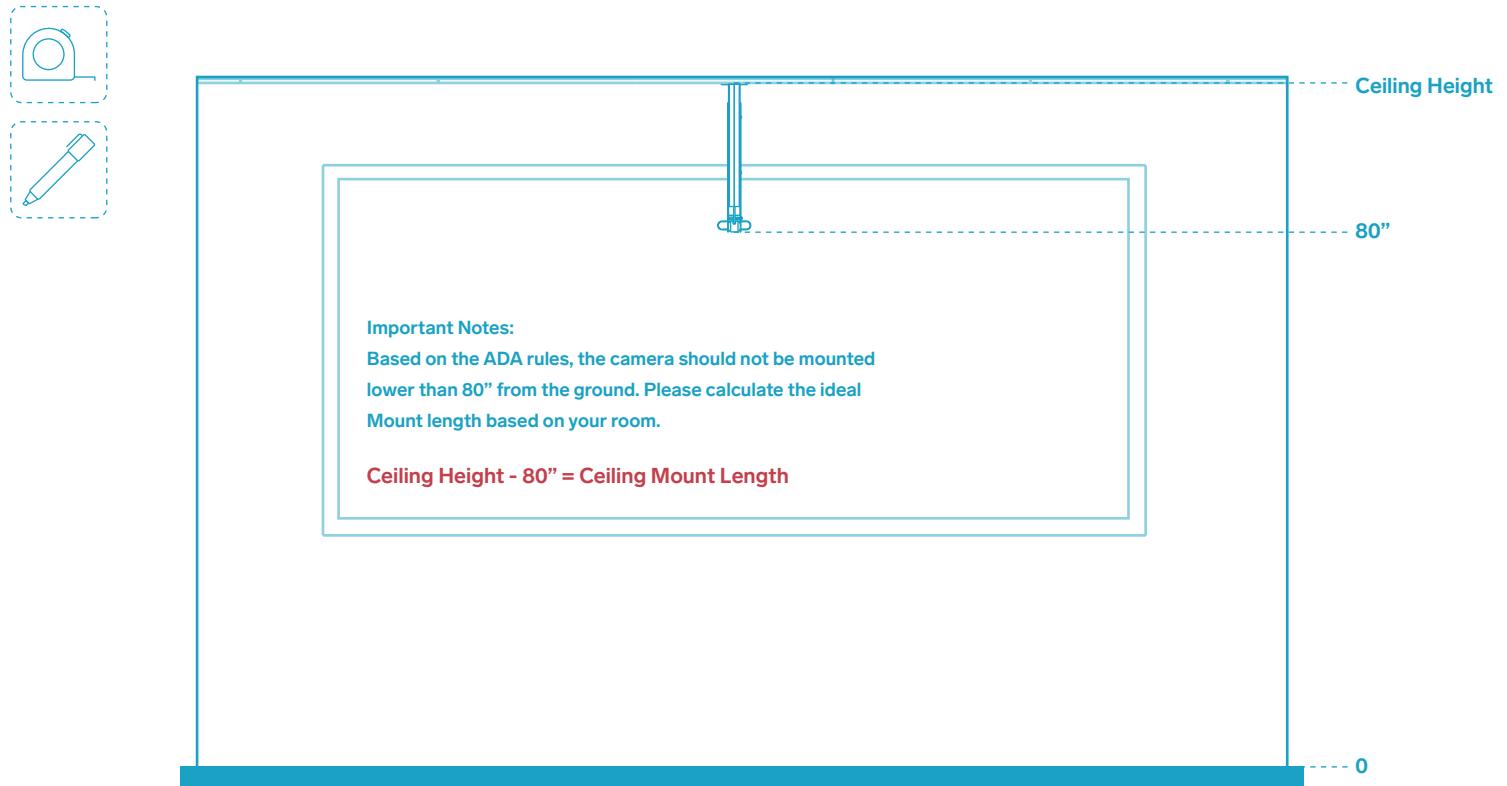

## STEP 5


Prepare the ceiling tile

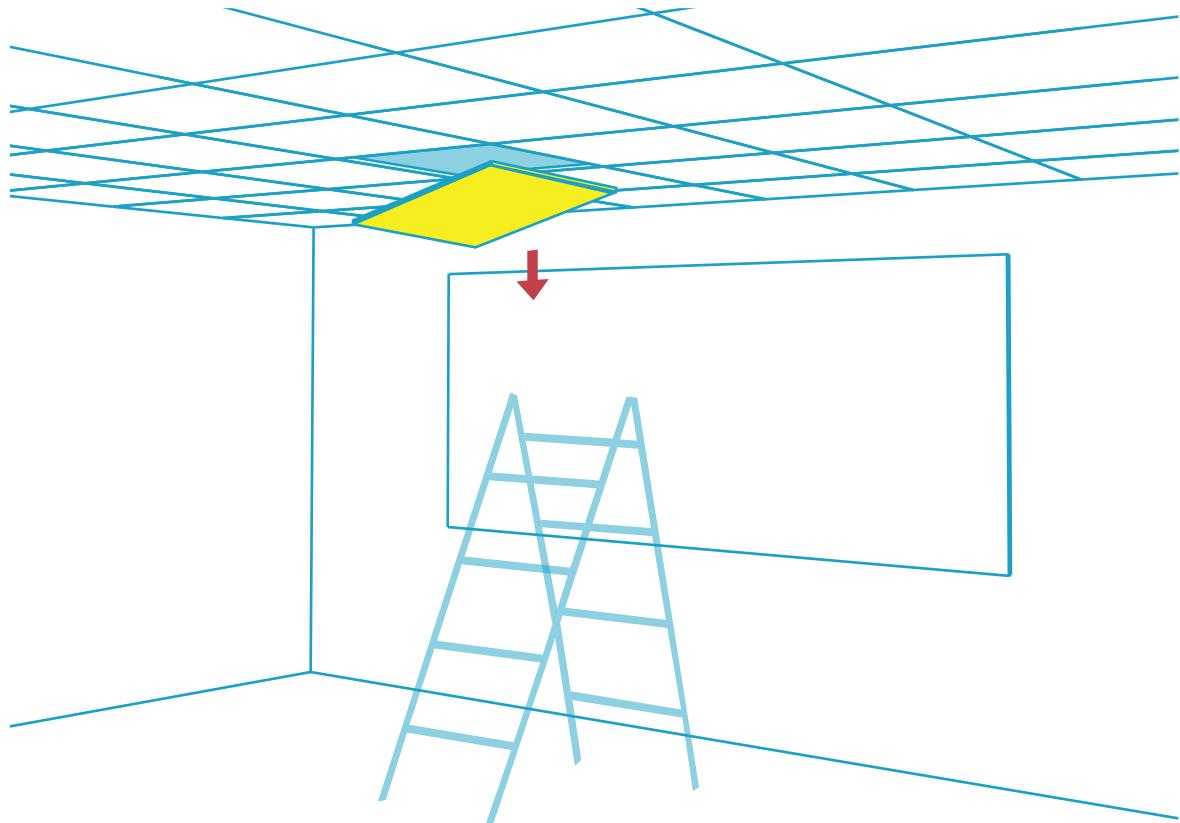

## STEP 6




Determine the mounting orientation of the support bracket to the ceiling tile

Top view

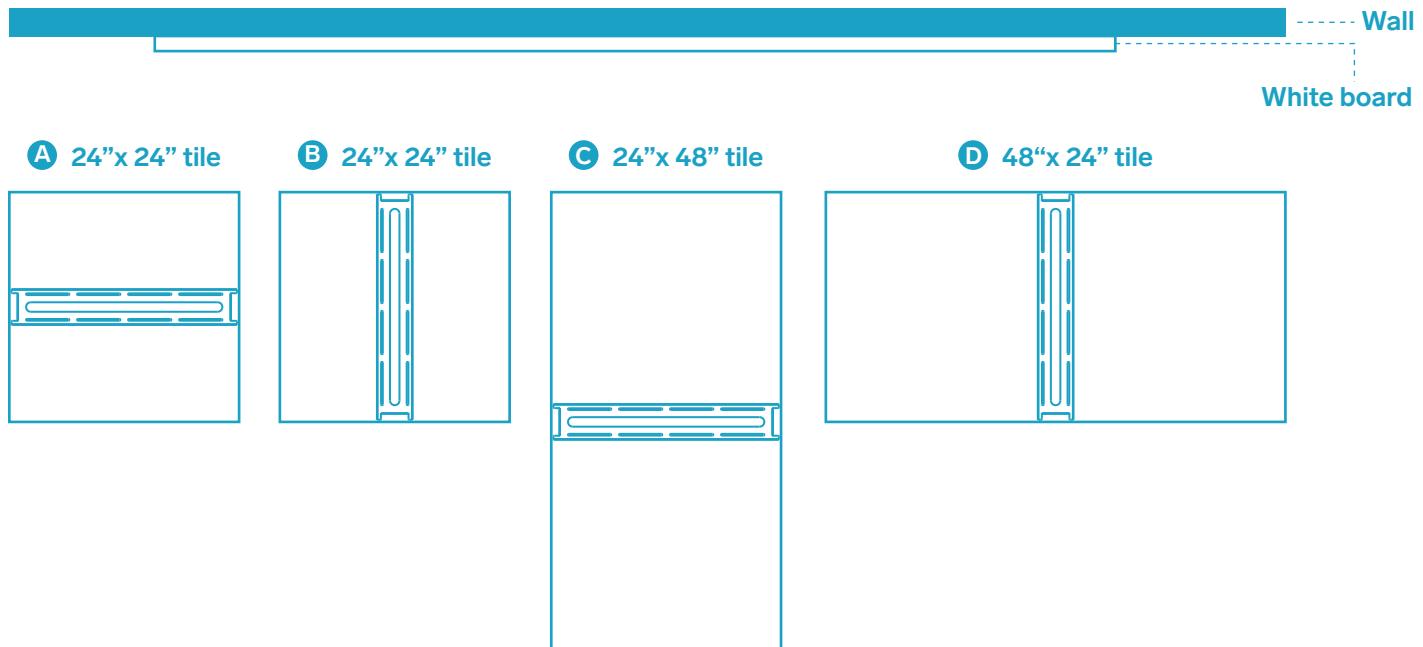

## STEP 7

Measure and determine the length of the Mount

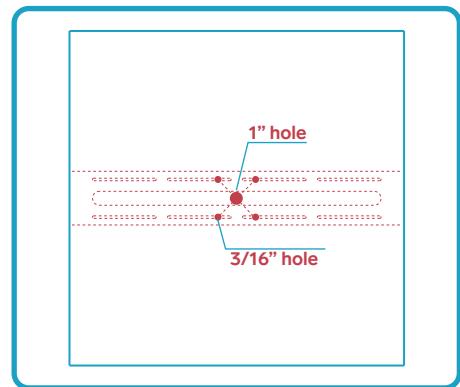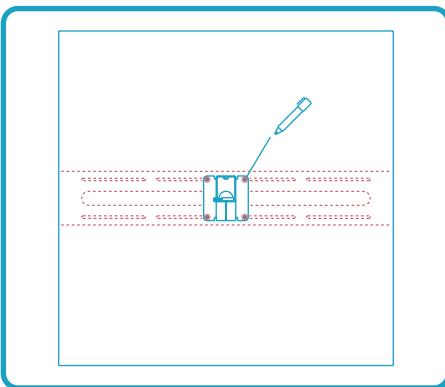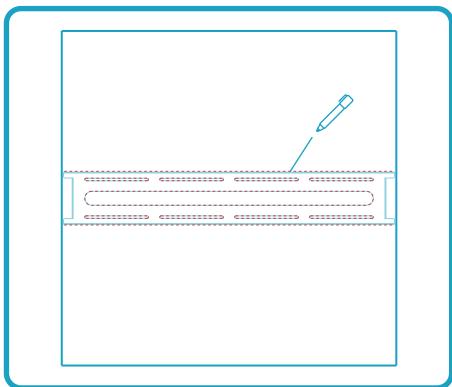



1. Trace the slots of the support bracket to the top surface of the ceiling tile.

2. Use the mount to mark the mounting hole position on the tile.


3. Find the center hole position and drill with the designated drill bit.

## STEP 8


### Install Logitech BRIO

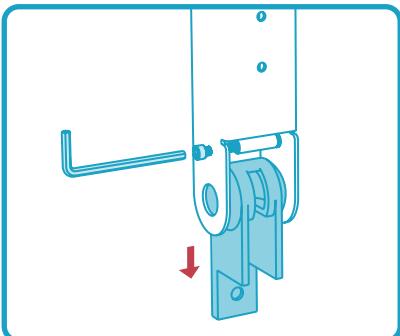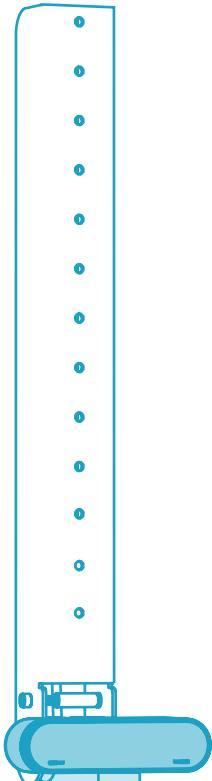


1. Loosen screw and remove the camera mount.

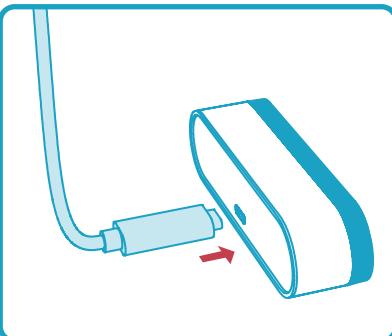

2. Plug in the USB-C cable to the Logitech BRIO.

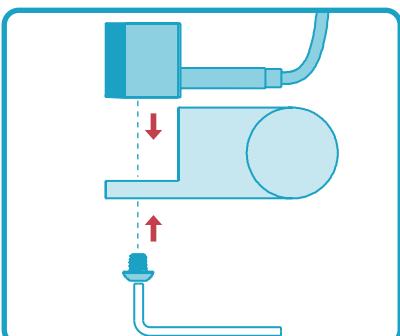



3. Insert the BRIO and USB-C cable into the camera mount, and mounting the screw with  $5/32"$  hex key.

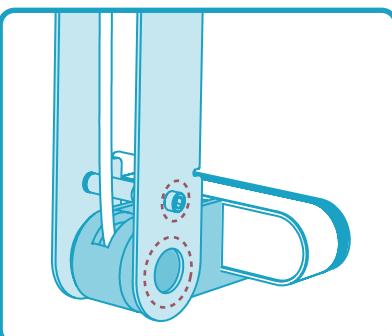

4. Re-install camera mount and tighten screw with  $5/32"$  hex key.

## STEP 9



Re-assemble mount to the determined length

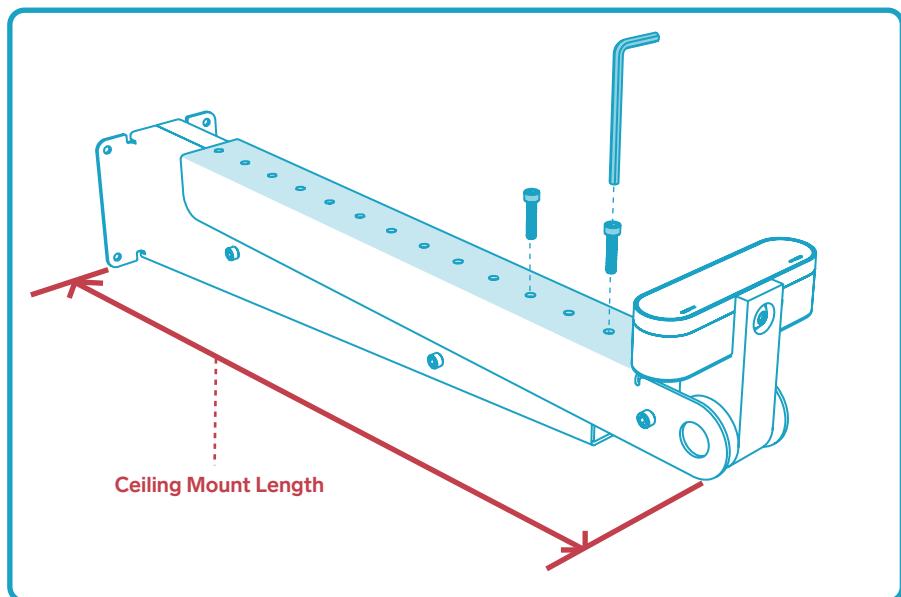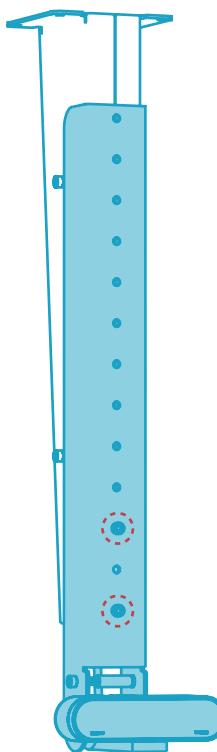


Ceiling Mount Length

## STEP 10

Fasten the Mount to ceiling tile

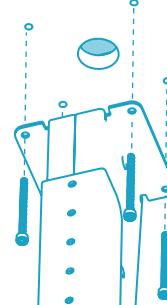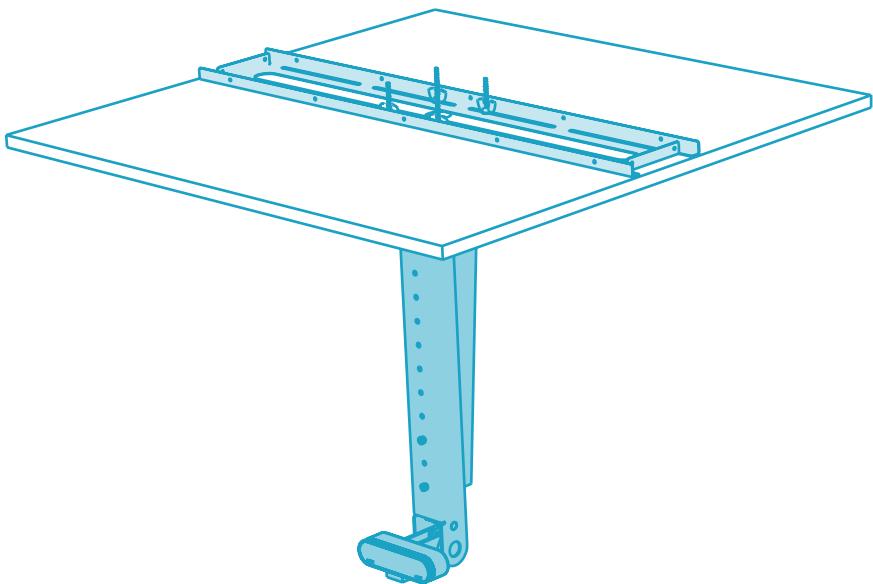



 
1. Feed the four screws through the pre-drilled holes.



2. Fasten four wingnuts and self-retaining washers.

## STEP 11

Install the ceiling tile and camera mount

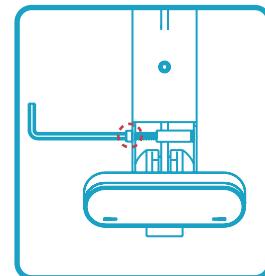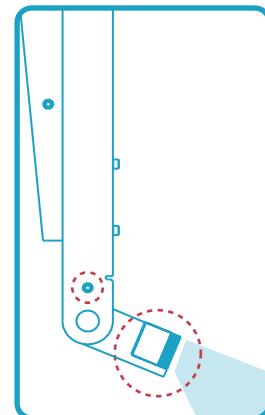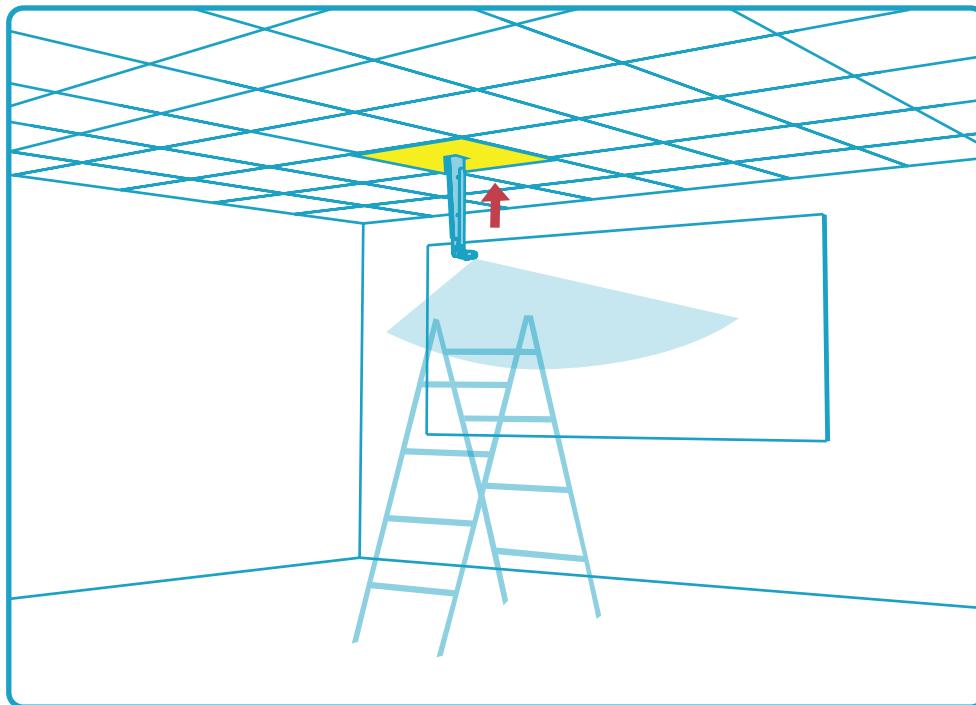

1. Loosen the screw to adjust the camera angle.

**Tip:** Activate the camera to determine the best angle.

2. Tighten the screw with the 9/64" hex key.