 
 


**H585 - ADA Camera Mount**  
for AVer CAM340

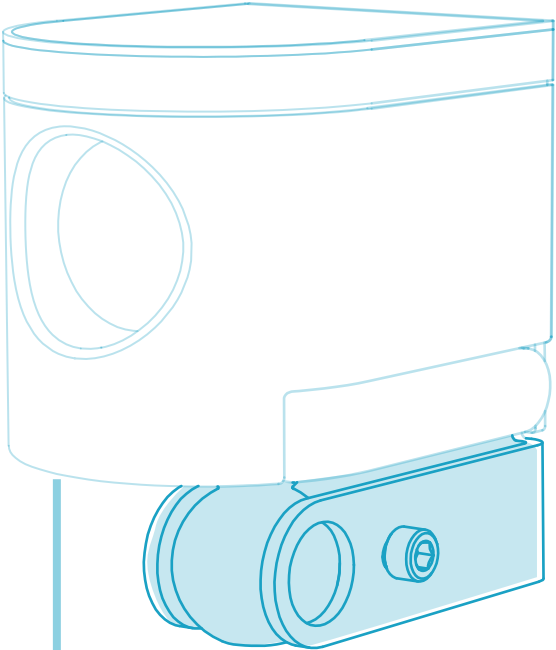

## IN THE BOX

- A** 1x ADA Camera Mount
- B** 1x Wall Anchor
- C** 1x Hex Key, 5/32"
- D** 1x Mounting Screw

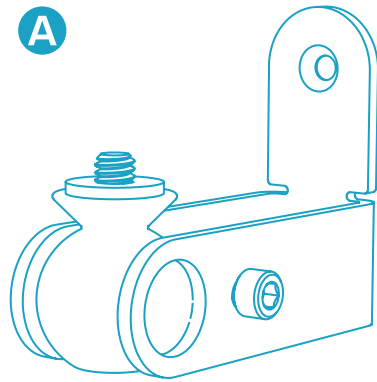

**B**



**C**



**D**



## TOOLS NEEDED



Tape Measure



Pen



Power Drill

 


Phillips  
head Bit




1/2" Spade  
Drill Bit

## COMPONENTS NEEDED (Not Included)

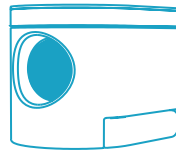

AVer CAM 340

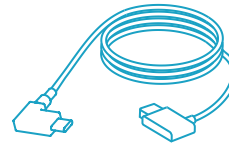 


Low-profile USB-C  
to USB-A 3.0 cable

If you have any questions, please contact  
[service@hecklerdesign.com](mailto:service@hecklerdesign.com).

# STEP 1
 
## Locate mounting position


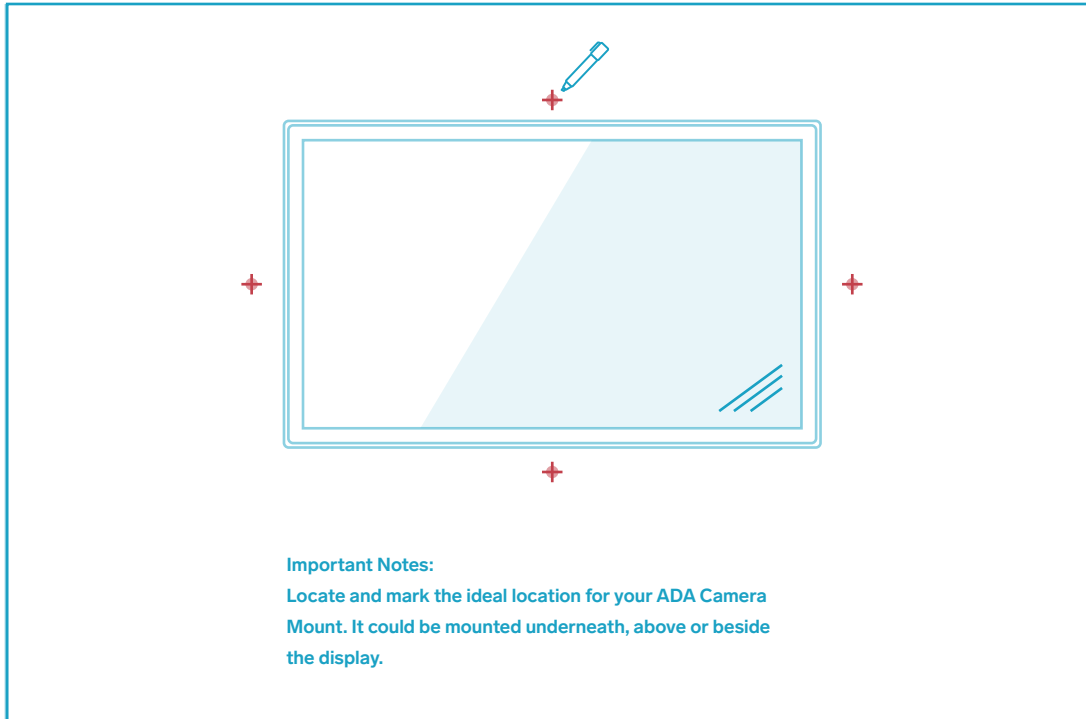


### Important Notes:

Locate and mark the ideal location for your ADA Camera Mount. It could be mounted underneath, above or beside the display.

## STEP 2

  Install the wall anchor

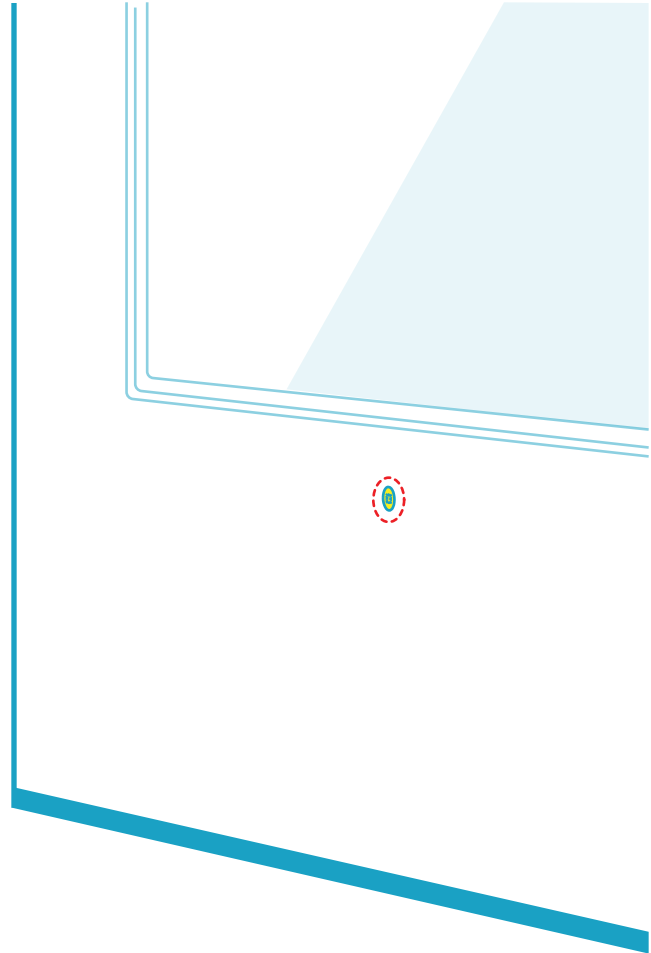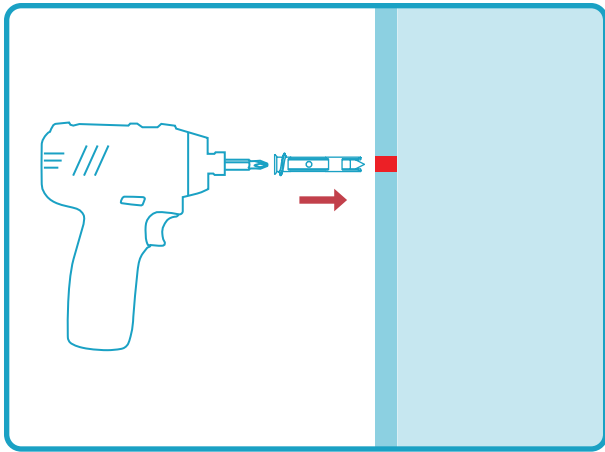


## Optional

### Mark and drill the hole





### Important:

 Drill a 1/2-inch hole for the cable to pass through the wall.

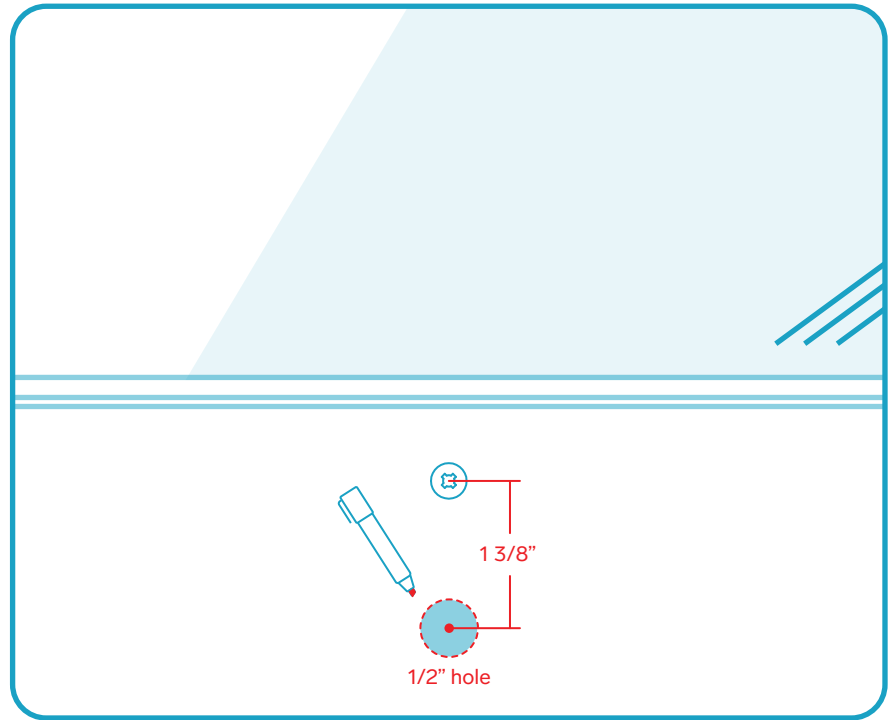



## Optional

  Route the USB-C cable through the wall

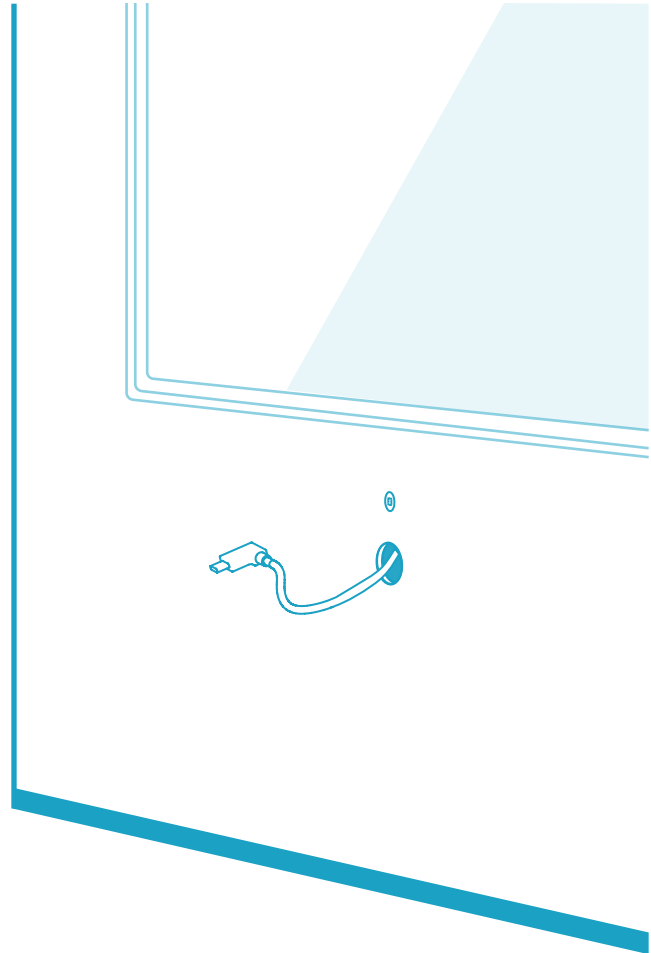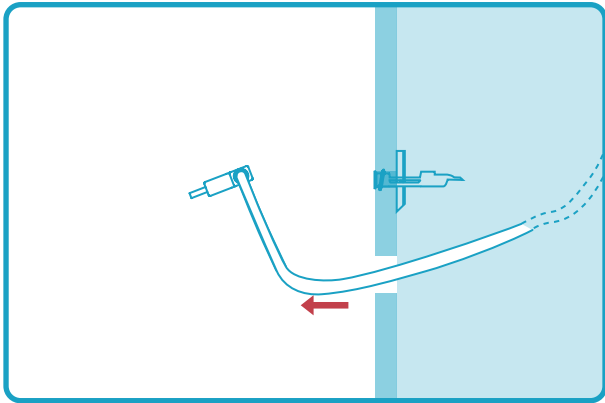

## STEP 3

  
### Fasten the ADA Camera Mount

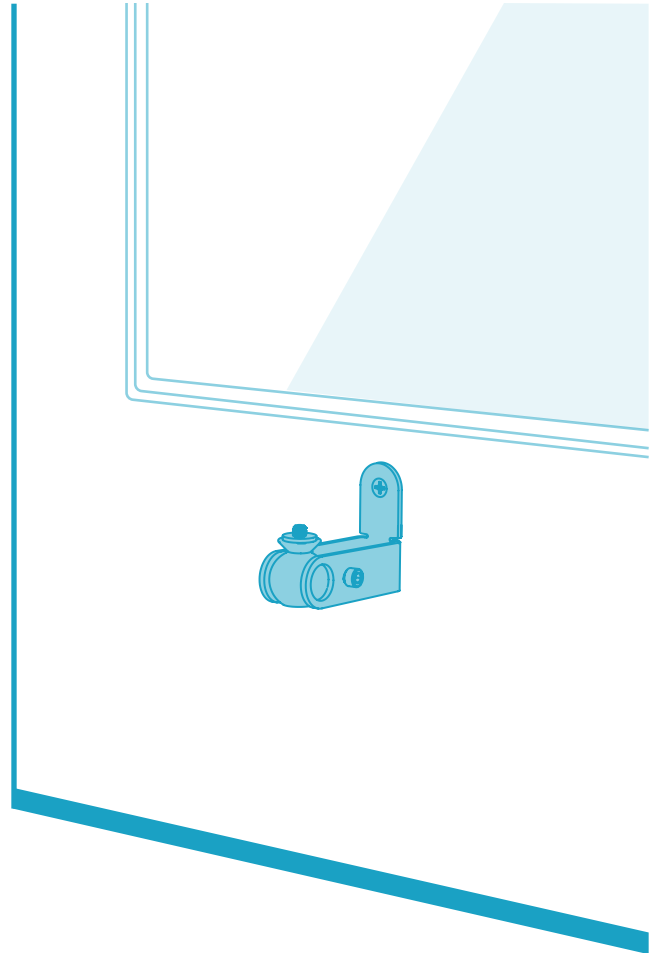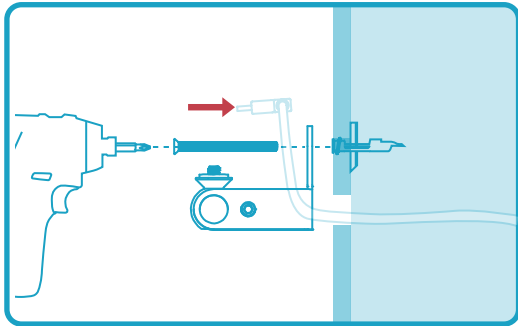




## STEP 4

 
Install the AVer CAM340.

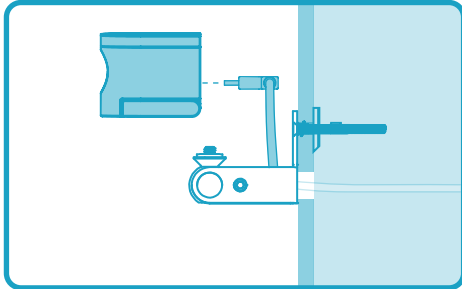

 1. Connect the USB-C cable to AVer CAM340 camera.

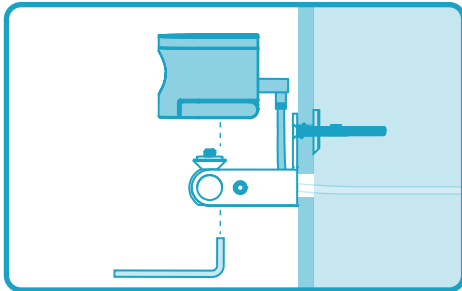


 2. Fasten the camera to the ADA Camera Mount with the hex key.

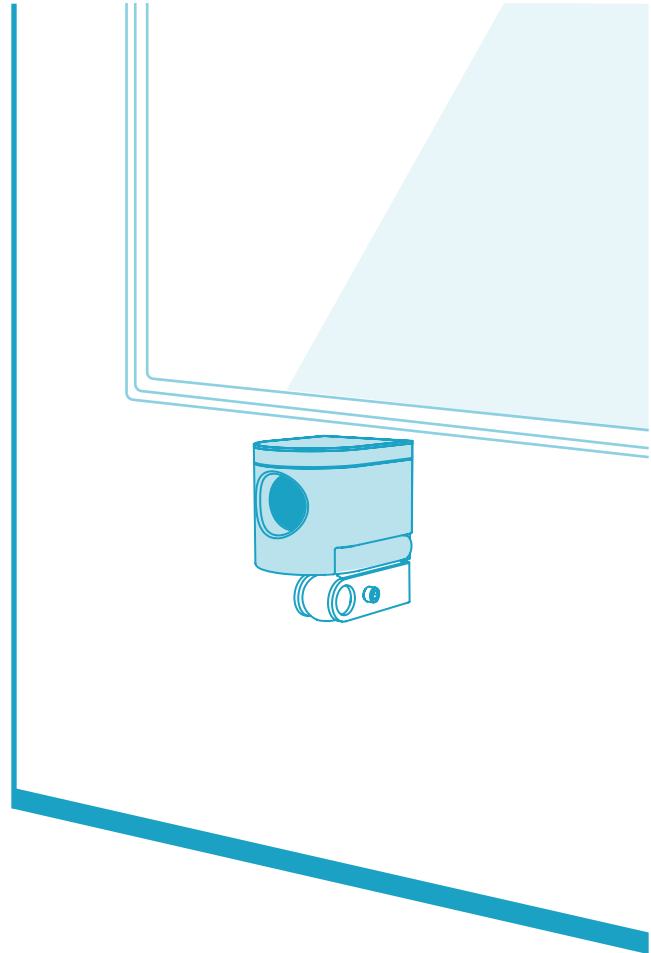

## STEP 5

 Adjust and set camera orientation.

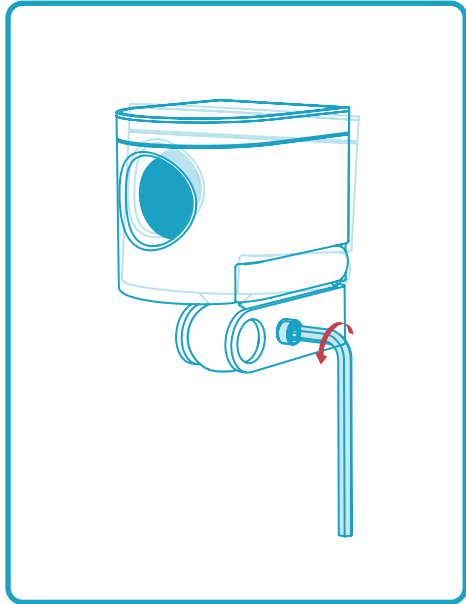

Loosen the screw with the hex key to adjust camera orientation, and then tighten it.

