




**COBBLE PRO**




Cobble Pro TWS Earbuds  
With Mic

## Appearance

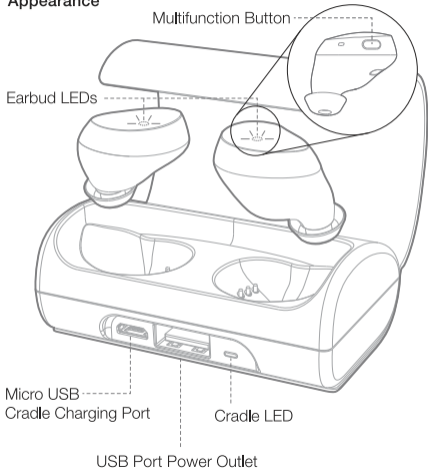

## Pairing Instruction

1. Put both earbuds on your ear and press multifunction button on both sides for about 4 seconds at the same time until you hear "Power On."

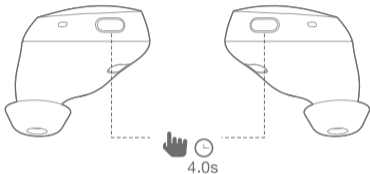


2. The two earbuds will then pair up themselves and announce "Connected", "Left Channel", "Right Channel" respectively.

3. In around 10 seconds, you will hear a beep form left side following with the audio cue "Pairing Phone". Please go into the Bluetooth search screen of your device and search for "Cobble Pro TWS L" and connect.

Note: please only start search and connect after you hear the "Pairing Phone" cue. If you search for device earlier than that you may end up connecting to only 1 side of earbuds.

Please **always** connect to the "Cobble Pro TWS L" when you want to use them in stereo mode. Connecting to R when you want to use the right side separately.

Sometimes it **will** take longer time to hear the "Pairing" cue if you had paired up the TWS to another device previously. It is because the TWS **will** try to automatically re-connect to previously paired device as priority. It **will** only turn into pairing mode if previous device is not available.

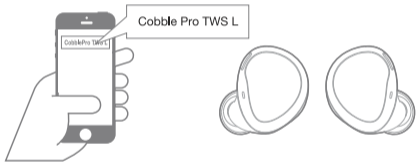

4. A final audio cue "2nd Device Connected" **will** be heard to confirm you connected successfully in stereo mode. You can now enjoy your stereo music.

Phone calls **will** only be heard from the left side of earbuds during stereo mode. This is a safety feature and not a malfunctioning.

In case you have difficulties pairing up left and right channels, you can always press and hold the multifunction button on both sides from the off status for about 20 seconds. Once it's connected you will hear the same audio cue "Connected. Left Channel, Right Channel" as normal connection.

Due to FCC regulations, the broadcasting between the earbuds is kept at minimum. This also extends the lifetime of the battery. One earbud may lose connection but will resume in seconds. If this happens often, reposition your device or relocate yourself somewhere else to improve connection quality.

## Playback Control

The multifunction button controls the playback when they're pressed in different ways.

### During Music Playback

Channel	Single Tap	Double Tap	Long Press
R	Play/Pause	Vol+	Next Track
L	Play/Pause	Vol-	Previous Track

### During Call

Channel	Single Tap	Long Press
R/L	Pickup Call	Reject Call

## Charging The Earbuds

Put the earbuds into the cradle for charging. A fully charged cradle can charge up the earbuds for about 10 times.

When you put an operating earbud into charging cradle, it will automatically shut down the earbud and charge it.

Usually the right side will charge up quicker than the left side, this is normal because the L side job load is heavier and will drain battery faster than the R side.

Earbud LEDs	Earbud Status
Red	Charging in progress
Blinking Red	Almost Fully Charged
Off	Fully Charged

## Charging The Cradle

Connect the cradle with micro USB cable for charging.

Cradle LED	Status
Blinking Red	Cradle Battery is Charging
Red	Cradle Battery is Fully Charged
Blue	Cradle is charging earbuds/Phone

## Specifications

- Wireless Specification: BT Version 4.1
- Wireless Profile: A2DP, AVRCP, HSP
- Wireless Range: 10M
- Dynamic Driver / Diameter: 5.5mm
- Frequency range: 2.40GHz-2.48GHz
- Music play-time: 3.5 hours
- Standby time: About 100 hours
- Battery Capacity:  
Earbud (60 mAh),  
Portable Charging Case (1300 mAh)
- Dimension:  
Earbud: 25.9 mm (L) x 20.46 mm (D) x 23.35 mm (H)  
Charging case: 69.5 mm (L) x 45 mm (D) x 28.2 mm (H)
- Power Input: 5V/1A    Output: 5V/1A