



## RADIO FACE QUICK START GUIDE

### WHAT'S IN THE BOX



**Daytona Radio Face**

Shown above: RetroRadio B.

(The face in your box may look different than the photo above)

### CONNECTING THE FACE TO THE BODY



Connect the ribbon cable included with the radio body to the radio face.  
(Do not force the connector)




**Two Shafts**




**Radio Face Mounting Screws**

(These are very small and are located in the hardware bag)

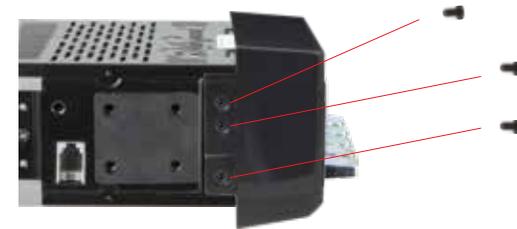

Attach the radio face to the radio body using the radio face mounting screws included.  
(These screws are very small. Be careful not to lose them)

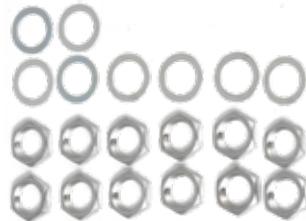

**Shaft Nuts and Washers**



Complete the installation as described in the user's manual included in the Motor Box.



## BASIC OPERATING GUIDE

### Control Layout



1. Left-Front Knob
2. Left-Rear Knob
3. Preset Button
4. Preset Button
5. Preset Button
6. Preset Button
7. Preset Button
8. Right-Front Knob
9. Right-Rear Knob

### Radio Presets

#### Setting Radio Presets

Buttons #3 - #7 are your radio presets. To set a preset, simply tune to the station you want to set, then press and hold the preset button (#3 - #7) for two seconds.

#### Recalling Radio Presets

To recall a preset, simply press the preset button (#3 - #7).

### Basic Operation

#### Power On/Off

Press the Left-Front Knob (#1) to power the unit on.  
Press and hold the Left-Front Knob (#1) to power the unit off.

#### Volume

Rotate the Left-Front Knob (#1) to change the volume.

#### Changing Source Modes

Rotate the Left-Rear Knob (#2) clockwise to cycle through the source modes.

#### Tune

Rotate the Right-Front Knob (#8) to scroll through the stations.

#### Mute On/Off

Press the Right-Front Knob (#8) to mute and unmute.

#### Equalizer (EQ)

Press the Left-Front Knob (#1) to enter the Tone Control sub-menu. Repeatedly press the knob (#1) to click through the menu options until you see BASS, MIDDLE or TREBLE. To change the EQ, navigate to the option you want to adjust, then rotate the Left-Front Knob (#1). Press the knob (#1) to move onto the next menu item, and repeat to adjust.

#### Setting the Clock

Press and hold the Right-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight CLK, then press the knob (#8) to select. Then rotate to adjust hours. Press the knob (#8) again to move onto minutes. Rotate to adjust.

#### Display Color

Press and hold the Right-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight SCAN, then press the knob (#8) to cycle through the colors.

#### Beep On/Off

Press and hold the Right-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight BEEP, then press the knob (#8) to toggle the beep on or off.

*Refer to the User's Manual in your Motor box for more comprehensive instructions.*