

Santa Cruz

RADIO FACE QUICK START GUIDE

What's in the Box



Santa Cruz Radio Face

Face to Body Cable



661 GM Adapter Harness



662 Antenna Adapter

The 661 GM Adapter Harness and 662 Antenna Adapter are provided to connect Santa Cruz to your vehicle's factory wiring harness and antenna. Refer to the User's Manual in your Motor box for wiring instructions.

Installation Instructions

The factory radio in this vehicle is a two or three-part system consisting of: a radio controller mounted in the upper-right side of the dash, an optional EQ or tape player located in the center of the lower dash and the radio receiver box located under the dash just above the gas pedal area.

1. To install the Santa Cruz RetroRadio™:
Before installing, disconnect the vehicle's negative battery terminal. First, access the radio receiver box by removing the panel just below the steering column. Remove the two screws located at the bottom corners of the panel, then remove the panel.
2. Locate the receiver box just above the gas pedal. A mounting bracket located on the bottom side, holds the receiver box in place. Remove the three screws holding the receiver box in place. Unplug the radio controller, EQ/cassette unit and main harnesses. Remove the antenna plug, and remove the receiver box.
3. Next, the controller in the dashboard (located to the upper right of the instrument panel) must be removed. Remove the four screws holding the trim bezel, and carefully remove it from around the gauges. Carefully remove the four screws holding the controller in place, then remove the controller from the dash.
4. Route the Face to Body Cable connected to the Santa Cruz Radio Face from the controller location to the receiver box location through the opening in the dash.
5. Next, you will be connecting the Santa Cruz Radio Face to the RetroSound® radio body (Motor). Plug in the Face to Body Cable by connecting the ribbon cable to the front of the radio body and the shaft plugs to the sides of the radio body.

While looking down at the radio body with the cables coming out the back, the imprinted "RetroSound" will be right-side up on the top of the radio body chassis. The cable marked "R" plugs into the input to the right of "RetroSound" on the radio body, and the cable marked "L" plugs into the left side.

6. Using the backstrap, mount your radio body into the receiver box location above the gas pedal.
7. Mount the Santa Cruz Radio Face into the controller location. Reconnect your battery, and test your system to make sure everything works before continuing.
8. Finally if everything works, replace the trim bezel and lower dash panel.



Completed Santa Cruz RetroRadio™ Installation

Santa Cruz

BASIC OPERATING GUIDE

Control Layout



1. Top-Front Knob
2. Top-Rear Knob
3. Preset Button
4. Preset Button
5. Preset Button
6. Preset Button
7. Preset Button
8. Bottom-Front Knob
9. Bottom-Rear Knob

Radio Presets

Setting Radio Presets

Buttons #3 - #7 are your radio presets. To set a preset, simply tune to the station you want to set, then press and hold the preset button (#3 - #7) for two seconds.

Recalling Radio Presets

To recall a preset, simply press the preset button (#3 - #7).

Basic Operation

Power On/Off

Press the Top-Front Knob (#1) to power the unit on.
Press and hold the Top-Front Knob (#1) to power the unit off.

Volume

Rotate the Top-Front Knob (#1) to change the volume.

Changing Source Modes

Rotate the Top-Rear Knob (#2) clockwise to cycle through the source modes.

Tune

Rotate the Bottom-Front Knob (#8) to scroll through the stations.

Mute On/Off

Press the Bottom-Front Knob (#8) to mute and unmute.

Equalizer (EQ)

Press the Top-Front Knob (#1) to enter the Tone Control sub-menu. Repeatedly press the knob (#1) to click through the menu options until you see BASS, MIDDLE or TREBLE. To change the EQ, navigate to the option you want to adjust, then rotate the Top-Front Knob (#1). Press the knob (#1) to move onto the next menu item, and repeat to adjust.

Setting the Clock

Press and hold the Bottom-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight CLK, then press the knob (#8) to select. Then rotate to adjust hours. Press the knob (#8) again to move onto minutes. Rotate to adjust.

Display Color

Press and hold the Bottom-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight SCAN, then press the knob (#8) to cycle through the colors.

Beep On/Off

Press and hold the Bottom-Front Knob (#8) to enter the System Settings sub-menu. Rotate the knob (#8) to cycle through the choices. Highlight BEEP, then press the knob (#8) to toggle the beep on or off.

Refer to the User's Manual in your Motor box for more comprehensive instructions.