

ChargeUp Boost 10K

10,000 mAh Portable Powerbank

Recharge your ChargeUp Boost

To recharge your ChargeUp Boost, connect it to a USB car-charger or USB wall-charger via the Micro-USB input **(D)**, using the Micro-USB cable provided. When charging, the LCD display **(B)** will flash, indicating remaining charge.

Charge your device

Using your device's USB charging cable (not included), connect your device to one of the two USB outputs **(C)**. Press the power button **(A)** once to start charging your device. Your device should indicate that it has begun to charge. The LCD display **(B)** will now indicate your ChargeUp Boost's remaining charge. Repeat steps above to charge a second device. When you are finished charging your device/s, detach them from your ChargeUp Boost. It will turn off automatically.

LED charge indicator

To check your ChargeUp Boost's remaining charge, press the power button **(A)** once. The LCD display **(B)** will show the remaining charge from 0 to 100.

- A** - Power button
- B** - LCD display
- C** - USB outputs
- D** - Micro-USB input

Product specifications

 
Battery type: Lithium battery
Input: Micro USB DC 5V - 2A (10W)
Output 1: USB-A DC 5V -2.4A (12W)
Output 2: USB-A DC 5V -2.4A (12W)
Total output: DC 5V 2.4A (12W)
Battery capacity: 10,000 mAh
Operating Temperature: 0°C - 40°C
Dimensions: 143x73x15.3mm
Weight: 231g

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Warning

Do not store cable with both connectors plugged into powerbank as this may short circuit powerbank and stop it from working.



Important safety instructions

Please read and follow these instructions carefully and retain for your records. Please read all warnings for your safety and optimal user experience.

- a) The power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
- b) Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
- c) Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
- d) Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy object on the power bank.
- e) Do not short-circuit the power bank or store it in a receptacle where it may be short-circuited by other metallic or conductive objects.
- f) Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
- g) Power bank usage by children should be supervised.
- h) Please read the operating instructions (including charging instructions and information on the minimum and maximum operating temperatures), supplied with this power bank.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help.