

## Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

1. Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, can result in an explosion.
2. Leaving a battery in an extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
4. Power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
5. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
6. Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
7. Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
8. Do not short circuit the power bank on or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
9. Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
10. Do not connect the red and black clamps to the same piece of metal, to prevent injury and damage to the vehicle.

## Caution

11. Always make sure the relay plug of the jumper cable connects with the jump starter socket securely into the power bank before jump starting the vehicle.
12. Always check that the clamps are securely connected. Ensure the vehicle battery is free of rust/dirt before jump starting the vehicle.
13. Do not connect the two clamps together, as this could be dangerous.
14. Keep power bank away from children.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Cygnett takes no responsibility for damages caused by incorrect use of its products. Made in China.



This symbol on the product indicates that this product shall not be treated as household waste. Instead it shall be sent to the applicable collection point for the recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. For more information about the recycling of this product, please contact your local city office.

## Australian Consumer Law

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Cygnett warrants this product against defects in workmanship and material for a period of two (2) years from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Please read the following information carefully and retain this for any warranty claim.

## Terms & Conditions

• This product is for household use only. If the product is used in a commercial environment, the warranty period will be automatically reduced to three (3) months.

• Cygnett warrants that, with normal use or service, the product will be free from faulty parts, manufacture or workmanship.

• The warranty does not apply where damage is caused by other factors, e.g. mishandling, abuse, accident or failure to follow operating instructions.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

© 2020 Cygnett PTY LTD.


### Cygnett Head Office

858 Lorimer Street, Port Melbourne  
Victoria, 3207, Australia

# CYGNETT

CHARGEUP AUTO 10K  
JUMP-STARTER

USER MANUAL

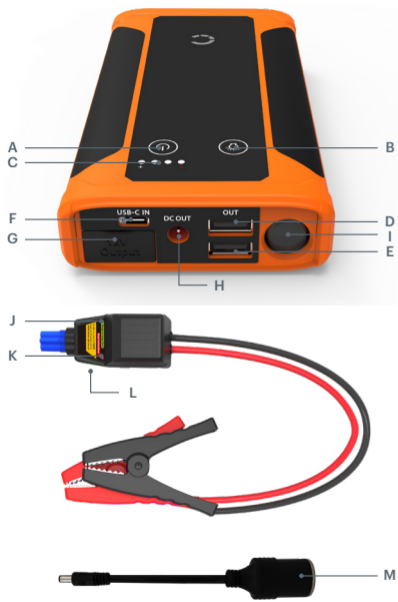

- A** Power button
- B** LED flashlight button
- C** Battery charge indicator
- D** USB-A output 1
- E** USB-A output 2
- F** USB-C input
- G** Jump-starter socket
- H** 12V DC output
- I** LED flashlight
- J** Jump-starter adapter, cable and clamps
- K** Jump-starter indicator
- L** BOOST button
- M** 12V female cigarette lighter adapter

### Recharge Your Power Bank

To recharge your power bank, use the included USB-C to USB-A cable, and connect it into a compatible USB-A/C charger\*, then insert the USB-C connector into the USB-C input (F). When recharging, the LED battery charge indicator (C) will flash, indicating the remaining charge levels. \*USB-A/C charger must support at least 5V=2A (10W) to recharge.

### Jump-Starting Your Vehicle

Before jump-starting your vehicle, ensure that the power bank has enough battery capacity. Ensure that the vehicle battery connector is free of rust/dirt.

1. Connect the jump starter adapter (J) into the jump-starter socket (G).
2. Connect the red clamp the positive (+) battery terminal first, then connect the black clamp to the negative (-) battery terminal.
3. Before jump-starting the car, check the following on the jump-starter indicator (K):

Light Colour	Status/Action
<b>Green</b>	Car is ready to be jump-started.
<b>Red</b>	An incorrect connection has been detected. Please double check the battery terminals.
<b>None</b>	Press the BOOST button (L) for 3 seconds until the green indicator lights up.
<b>Flashing red</b>	Jump-starter power bank is low in battery. Charging of the power bank is required.

Error Status	Light & Beep	Action
<b>Reverse Polarity</b>	●	Correct the connection
<b>Low Battery</b>	☀	Recharge Jump-Starter
<b>Overtime</b>	☀ ☀	Disconnect Jumper-Cable
<b>Reverse Charge / Over Voltage</b>	☀ ☀ ☀	Disconnect Jumper-Cable
<b>Overheat</b>	☀ ☀ ☀ ☀	Cool down for 10 minutes
<p>○ No Green Light On: Please make sure it is connected correctly, then press the BOOST button for 3 seconds until the green light appears indicating it is ready to jump-start.</p>		

4. When the jump-starter indicator (K) is green, proceed to jump-start your car. Do not jump start your car for longer than 5 seconds at a time. Allow to rest for 10 seconds between each jump-start.
5. Remove the clamps from the vehicle battery terminals.

### Charge Your Device

Recharge your device(s) with a compatible USB-A cable, by connected the cable into the USB-A output(s) (D & E). Press the power button (A) to begin charging. When you are finished charging your device(s), remove the cable from your power bank, and it will turn off automatically.

To check the remaining charge on your power bank, press the power button (A) once. The LED battery charge indicator (C) will show the remaining charge.

### Power Your 12V Device

Connect the 12V female cigarette lighter adapter (M) into the 12V DC output (H). Connect your 12V device into the 12V female cigarette lighter socket. Press the power button (A) to begin powering your device.

### LED Flashlight

Press the power button (A) once to turn on the power bank. Then, press and hold the LED flashlight button (B) to turn on the LED flashlight (I). The LED flashlight has 3 modes: solid beam, strobe and SOS. Cycle through these modes by pressing the LED flashlight button (B).

### Product Specifications

Name	ChargeUp Auto 10000 mAh
<b>Item Number</b>	CY3577CHAUT
<b>Battery Capacity</b>	10000mAh/37Wh
<b>USB-A Output 1</b>	5V=2.1A (10.5W)
<b>USB-A Output 2</b>	5V=1.6A (8W)
<b>DC Output</b>	12V=10A (120W)
<b>USB-C Input*</b>	5V=2A (10W)
<b>Jump-Start Current</b>	12V=600A-1500A
<b>Designed to Jump-Start (Up To)</b>	10-cylinder petrol vehicles 7.0L (7000cc max) 8-cylinder diesel vehicles 4.5L (4500cc max)

**\*USB-A/C charger must support at least 5V=2A (10W) to recharge the power bank.**