



StudioPRO MMBEL Wireless Remote Trigger For Video Studio LED Lights Instructions For Use

1. Insert two AAA batteries into the back of the remote
2. Power ON LED Panel
3. Power ON remote
4. Select desired channel for first or all LEDs
5. Simultaneously press button on back of LED panel head "BUTTON" while pressing the power button on the remote
6. Use the *- button to dim the LED
7. Use the *+ button to brighten the LED
8. Use the K- button to cool the color temperature
9. Use the K+ button to warm the color temperature
10. Use the O button to change channels
11. Repeat for additional LEDs if you would want them on separate channels

