

SETUP INSTRUCTIONS

STEP 1:

Remove tent from carry bag and stand upright with hub up. Ensure all feet and legs are properly assembled. Unfold legs. Orient the door to face truck tailgate.




STEP 2:

Grab 2 upper frame arms and lift up. Rotate the arms outward to expand the frame structure. You may need to assist the other 2 frame arms into position.



Correct

Incorrect

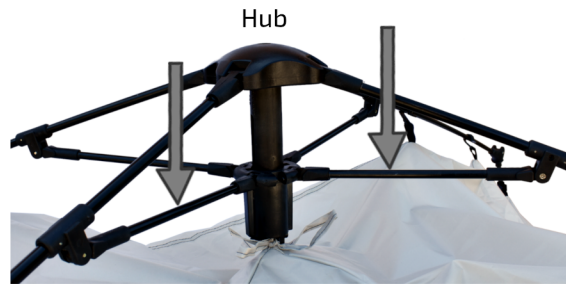

Press down to lock



Visit Fofana.co/Truck or email support@fofana.co

STEP 3:

Ensure the lower hub is locked into place correctly. Grab 2 short frame arms and press down to lock hub into place.



STEP 4:

Lift back of tent (near the cab) and place feet on top of the bed rail. Locate the 6 securing straps and loosely attach clips to truck body. Pull all 6 straps snug but not tight.



STEP 5:

Extend the telescopic legs until fully extended and they 'click'. Ensure all clips that attach the tent to the frame are secure.


TAKE DOWN INSTRUCTIONS

STEP 1:

Unzip windows and door 1/4 to 1/2 way to let air escape. Collapse telescopic legs. Push the button and press the middle section into the bottom leg section. Unclip the straps from the truck body.

STEP 2:

Squeeze hub arms together and lift up. Collapse the frame structure inward. Carefully lift and rotate to allow frame to fold properly.

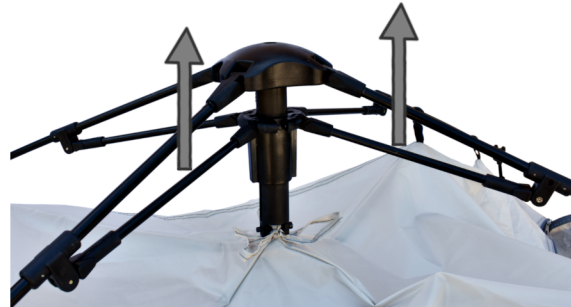

Squeeze to unlock

STEP 3:

Continue to collapse structure and set tent down.



STEP 4:

Fold feet upward toward hub. Lay tent on side and wrap fabric up. Wrap straps around and cinch down to compress tent. Fit into carry bag.



WARNINGS:

Do not use a heater or flame of any kind inside tent, including smoking or cooking in or near the tent. Build campfires downwind and at least 10 feet away from tent. Fully extinguish fires before leaving campsite. Use extreme caution with fuel powered heaters or lanterns near tent. Use battery powered lights when possible. Never store or use flammable liquids inside or near tent. Turn off or extinguish all lanterns before sleeping. Never run the truck engine or drive truck when tent is attached. Engine must be off and exhaust fully cooled. Always supervise children when using the tent.

CARE INSTRUCTIONS AND TIPS:

Select a level campsite clear of branches, rocks, and other sharp or hard objects and debris. Avoid overhead tree branches and power lines. Park truck, turn off engine, set parking brake, let exhaust cool. Be sure to dry your tent thoroughly before folding and storing in the carry bag. Store in a cool, dry place. If tent is wet, it may be folded up to carry home, but should be set up in a well ventilated area to dry completely. Never store the tent wet for extended periods longer than a few hours.

Please contact us if you have any questions or problems, we are glad to help!
Visit Fofana.co/Truck or email support@fofana.co

RAINFLY:

Locate door zipper and orient correctly toward tent door. Drape rainfly over tent. Secure corners of rainfly to tent corners with hooks.