



## EAGLE LIGHTS 5 3/4" LED HEADLIGHT INSTALLATION INSTRUCTIONS

### Eagle Lights 5 3/4" LED Headlight Installation Instructions

Our products use the latest state-of-the-art technology and the best available parts for the most reliable LED products for your motorcycle.

We offer the best and most comprehensive warranty in the business backed by excellent support and technical help. If you have questions, please feel free to call us at 1-800-921-3162 or email us at [Support@EagleLights.com](mailto:Support@EagleLights.com).



### Attention!



*Please read before installing.*

- **Warning:** To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.

### Common Installation Instructions:

1. Disconnect the negative lead to the main battery.
2. Check your models manual for changing and replacing the stock headlight.
3. Remove the factory headlight from the housing.
4. Install the LED headlight into your motorcycle: Connect the harness from the LED headlight to the harness on the motorcycle.
5. Test the headlight to ensure that the high beam and low beam are working correctly.

### Generation II Halo Model LED Headlights

All 5 3/4" Generation II LED Halo model LED headlights are equipped with a preinstalled harness for the halo ring. The halo ring will illuminate with the low beam and automatically turn off with the high beam.

### Generation III Halo Model LED Headlights

All Generation III Halo model LED headlights come with an internal halo harness preinstalled. The halo ring stays on during high beam and low beam. **Do NOT disconnect the yellow wire from the white wire on the halo harness. This will disconnect the halo function.**

### Slim Line / Infinity Beam LED Headlight Models:

These models come equipped with an extra red wire. It provides power to the DRL bar in the center of the light. It can be connected to any 12V constant power source. This does not need to be connected if you do not want to use the functionality.

### 8900AH-B Integrated Turn Signal Headlight

This model comes with integrated turn signals. There will be two signal wires and a red wire. The red wire is the DRL light positive lead for the motorcycle. It can be connected to a 12V constant power source. The two additional wires are for the turn signals. They get spliced into the corresponding wire for each turn signal.

*If you are having any issues installing the headlight, please contact us. We can provide technical help on the phone (1-800-921-3162) or via email ([support@eaglelights.com](mailto:support@eaglelights.com))*



## **EAGLE LIGHTS 5 3/4" LED HEADLIGHT INSTALLATION INSTRUCTIONS**

### **5 3/4" Complex Reflector LED Headlight**

This model comes with an integrated light bar that can be either yellow or white. The yellow wire is the positive lead to control the yellow version. The white wire is the connection to make the DRL illuminate white. Either one can be connected to a 12V power source to allow them to function.

### **HONDA VTX LED HEADLIGHT KIT**

- Remove the beauty trim ring from the headlight. This can be removed via two bolts on the housing. This is where the headlight and bracket will attach. Lay the beauty ring piece face-down with the top away from you.
- With the headlight beauty ring off, take the flat smaller collar ring and place it inside the beauty ring. The two screw holes go on the left and the right. Take the headlight and place it into the black bracket. There will be a small notch on the left of the back side of the headlight. This needs to be placed on the left hand side. This ensures that the headlight is in the correct orientation.
- Take the larger bracket and place it over the headlight. There will a small square notch that will match up with the keyway notch on the headlight. Using the provided screws, screw in the headlight bracket on both sides.

### **HONDA VTX LED HEADLIGHT KIT (Cont.)**

**! INSTALLATION WARNING !**  
DO NOT OVERTIGHTEN THE SCREWS. THE HOUSING IS MADE OF PLASTIC. OVER TIGHTENING THE SCREWS CAN CAUSE THE PLASTIC TO BREAK AND YOU WILL NEED TO REPLACE THE HOUSING. WE RECOMMEND RED THREADLOCKER WHEN INSTALLING THE SCREWS.

*If you are having any issues installing the headlight, please contact us. We can provide technical help on the phone (1-800-921-3162) or via email (support@eaglelights.com)*