



Eagle Lights EL114TL Instructions Installation Instructions

Included Parts:

EL114TS-HZ X 2

Warning!

For models WITH main fuse:

To prevent accidental vehicle start-up, remove the main fuse before proceeding.

For models WITHOUT main fuse:

To prevent accidental vehicle start-up, disconnect negative (-) battery cable before proceeding.

IMPORTANT - CHECK FITMENT

Prior to installation, check fitment of the highway bar LED lights on your motorcycle prior to wiring the unit.

Installation

The light comes with 4 wires. Two for ground, one for turn signal positive and one for running light positive.

NOTE:

Some models will need LED load resistors for the LED turn signals to flash at the correct speed.

The LED highway bar wiring color codes are below:

Black - Running Light Ground

Green - Turn Signals Ground

Red - Running Light Positive

Yellow - Turn Signal Positive

Installation on Crash Bar:

The 4 wire leads will be visible. The wire leads will need to be run to the front turn signal wiring. It may be run either through the highway bar itself (requires drilling) or through run along the highway bars to the front turn signals.

After the connections have been spliced to the front turn signal wiring, the units can be mounted on the bar.

For most HD applications, it can be wired like this:

Black (light) to Black (turn signal)
Green (light) to Black (turn signal)
Red (light) to Blue (turn signal)
Yellow (light) to Purple / Brown (turn signal, color depends on the side)

- To attach to the bar, clean the area first with a lint-free rag.
- Remove the adhesive backing.
- Press and hold the unit to the bar for 2 minutes.