



RZR LED HEADLIGHT KIT INSTRUCTIONS

Product Overview:

LED Power that lasts! Convert stock headlights to brighter more powerful LED lighting. 50,000 hour Eagle Lights LED's light up your surroundings and allow you to see what is out there with our Horizon beam pattern, the widest field of vision available. See and be Seen with these powerful headlights.

Typical Installation

Normal installation requires only a few tools, takes less than 30 minutes.

Required Tools



- Philips-Head Screwdriver

Installation Warning

If you feel uncomfortable installing this product, we recommend having a professional complete the installation. Eagle Lights LLC is not liable for any damage to the product or vehicle due to an improper installation. If you have questions about the installation, please feel free to call us at 1-800-921-3162 or email us at Support@EagleLights.com.

Installation:

Below are steps for a typical installation. Steps may be different depending on the make and model of motorcycle. Please ensure you have read through the instructions and understand them clearly before attempting the installation.

 WARNING! 
<ul style="list-style-type: none">• To prevent possible electrical shock, disconnect the negative battery terminal before installing this product.

1. Wiring harnesses:
 - a. Take out the wiring harness for your model. The 3 pin H13 plug is for the RZR 900, the flatter 4 pin style is for the RZR 1000 model.
 - b. Insert pins into the plug end as shown below.
2. Remove the stock headlights.
 - a. To remove the stock headlights, the front bumper and panel will need to be removed.
 - b. Remove the three bolts holding in the stock headlight.
3. Install the new headlights using the stock hardware
 - a. If you have a headlight with a halo ring, the halo ring can be wired into any 12 volt constant source. A common way to do this is to tie it into the low beam wire.
4. Test headlight functions.

RZR 1000 PINOUT**RZR 900 PINOUT**