



Atla Water System

Filter Change Procedure – Filter Set FS200

The Atla Water System Purification Modules requires filter changes every 12 months or 1000 gallons – whichever comes first – or if the water begins to flow too slowly. After installation, water may be cloudy or taste heavily of minerals for 2-3 weeks. This is normal as it takes time for the filters to become conditioned to the source water. Whenever an off-taste is noticed, flush the system for 7-minutes.

INSTALLATION

1. Close the valve supplying water to the Atla System
2. Open the Atla Faucet. Water should exit the system and then taper off. Once the water has stopped flowing, close the Atla Faucet
3. Prep the area beneath the filter housings with towels to catch spillage
4. Use the Filter Housing Wrench to loosen the filter housings. NOTE: The housings unthread counter-clockwise when seen from the bottom. Facing head-on, the housings should be turned to the left. Once loosened, the housings should be unscrewed by hand. Discard the used filters
5. Use a thin, blunt object (such as the tip of a butter knife) to lift the black O-rings from the inside of the filter housings
NOTE: Pressing directly on the O-rings may damage them. Slide the blunt object along the side of the O-ring only
6. Examine the O-rings for cracks or splits. If damage is found contact Atla for a replacement. Remove the old lubricant from the O-ring by gently running it through a folded paper towel
7. Remove the old lubricant from the O-ring groove on the housing by running the corner of a folded paper towel along the length of each channel
8. Wash the interior of the housings with soap and a bottlebrush. Rinse well
9. Lubricate the O-rings with a very thin layer of the included food-grade silicone lubricant
10. Replace the O-rings in their channels, making sure that no debris is in the channel or has become stuck to the O-ring. Ensure the O-ring sits flat in the channel
11. Are you sanitizing your system with Sani-System liquid sanitizer? If so, please follow the instructions on the back of this page now
12. Refer to the filter identification image above. Unwrap the #1 filter cartridge and place into the “1” housing. Ensure the filter cartridge sits over the alignment pipe at the bottom of the housing and that both top & bottom gaskets are in place. Gently thread the housing back onto the “1” filter cap, making sure it screws on evenly. Tighten by hand and do not overtighten. Repeat this procedure for the #2 & #3 filter cartridges

LEGACY SYSTEMS NOTE: If you do not have a “2” filter housing, but instead “S” or “F”, use the #2 filter cartridge here

IMPORTANT: “THIS END UP” on the #2 filter cartridge must be at the OPEN END of the housing

13. Use a cloth or paper towels to dry the housings and under-sink area
14. Open the Atla Faucet and then open the valve supplying water to the Atla System
15. If your system has an Air Bleed Valve (silver or red button on top of black tank), hold down the Air Bleed Valve. When water sprays from the Air Bleed Valve, release it
16. Once water is flowing smoothly from the Atla Faucet, allow the system to flush for TWENTY (20) minutes, then close the Atla Faucet. Check for leaks around the filter housings. If a housing is leaking, close the valve supplying water to the Atla System, open the Atla Faucet to relieve pressure, hand-tighten the housing more, then turn on the water supply again. If the leak persists, remove the housing and examine the O-ring for debris or damage
17. If your system has a Digital Filter Life Indicator installed, reprogram the Indicator according to its instructions

NOTE: Pressing the “RESET” button on the Digital Filter Life Indicator will erase all settings!



Sanitizing the Atla Water System

w/ Sani-System Liquid Sanitizer

IMPORTANT - Do not sanitize your new filter cartridges!
The system is sanitized without the filter cartridges installed.
Please follow the instructions, step by step.

- If you haven't already, perform the Filter Change Procedure on the back of this page until you reach the note about sanitizing
- Screw empty #2 and #3 filter housings onto the Purification Module. Tighten by hand and do not overtighten
- Fill #1 filter housing half-full with water
- Empty the Sani-System liquid into the #1 filter housing
- Screw #1 filter housing onto the Purification Module. Tighten by hand and do not overtighten
- Open the Atla Faucet and turn on the valve supplying water to the Atla System
- After some time air will begin exiting the system. When the air slows, close the Atla Faucet
- Allow the system to sit idle for five minutes
- Open the Atla Faucet and let run for five minutes
- Close the valve supplying water to the Atla System
- Close the Atla Faucet
- Remove all three filter housings and empty into the sink
- Resume the Filter Change Procedure where you left off

CAUTION - Do not allow Sani-System liquid sanitizer to touch skin or eyes!

**If your skin or eyes have been exposed to the liquid sanitizer,
rinse with water immediately and seek medical attention.**